



---

# NEOPRENE FRONT AND REAR SEAT COVERS

(2021+ FORD BRONCO - 4 DOOR)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---


- (1) LH Front Seat Cover
- (1) RH Front Seat Cover
- (1) LH Front & Middle Seat Cover
- (1) RH Rear Seat Cover
- (2) Front Head Rest Covers
- (2) Rear Head Rest Covers
- (1) Middle Head Rest Cover
- (1) Front Arm Rest Cover

### TOOLS REQUIRED

---


N/A

SKU # FB12972/FB12973

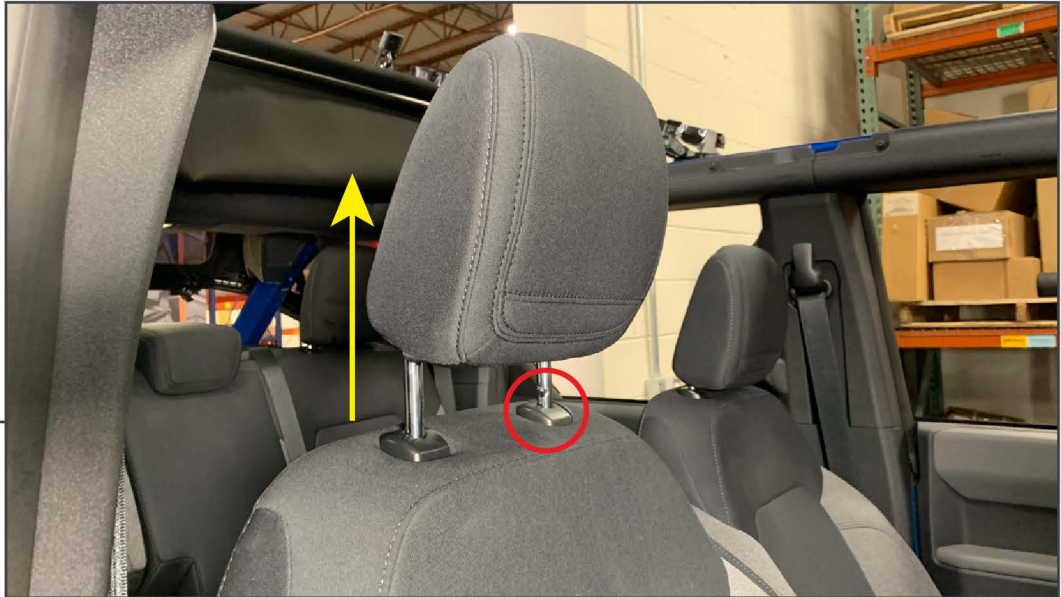

**STEP 1**

Remove the head rest from the front seat by depressing the button on the base while lifting the head rest upwards.

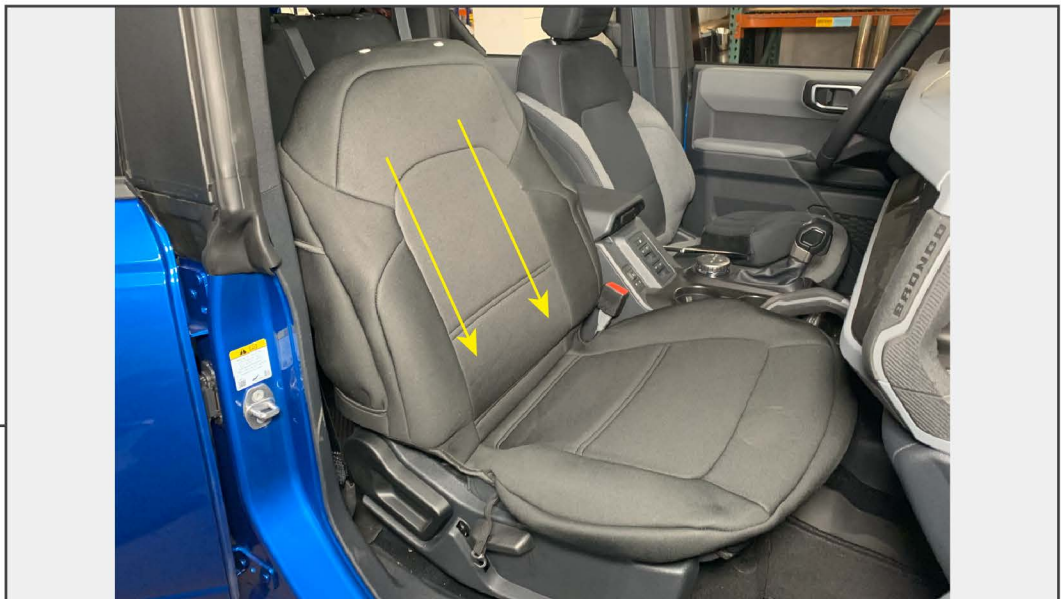


**STEP 2**

Unlatch all of the clips on the underside of the seat cover. Slide the back rest portion of the seat cover over the vehicle seat back rest. Pull the seat cover downwards to allow the lower cushion on the seat cover to align with the seat.



---


**STEP 3**

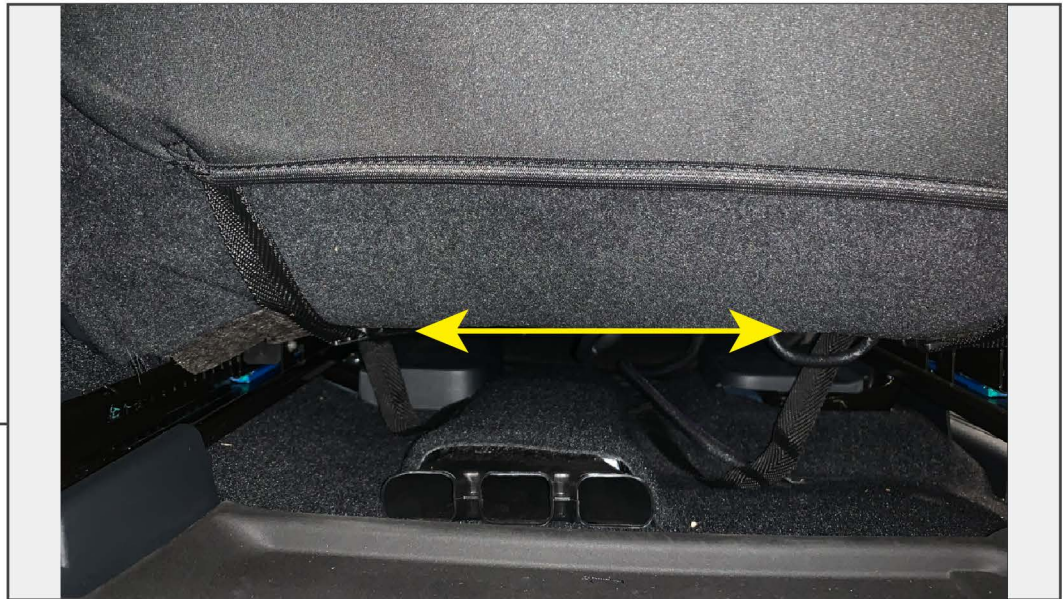

Align the lower seat cushion portion of the seat cover over the seat. Route the (2) attached straps under the seat, away from any moving/electronic components under the seat. Secure and tighten the straps to secure the seat cover to the seat. Secure the seat cushion cover rear edges to the base of the seat using the (2) attached elastic bands.

---

**STEP 4**

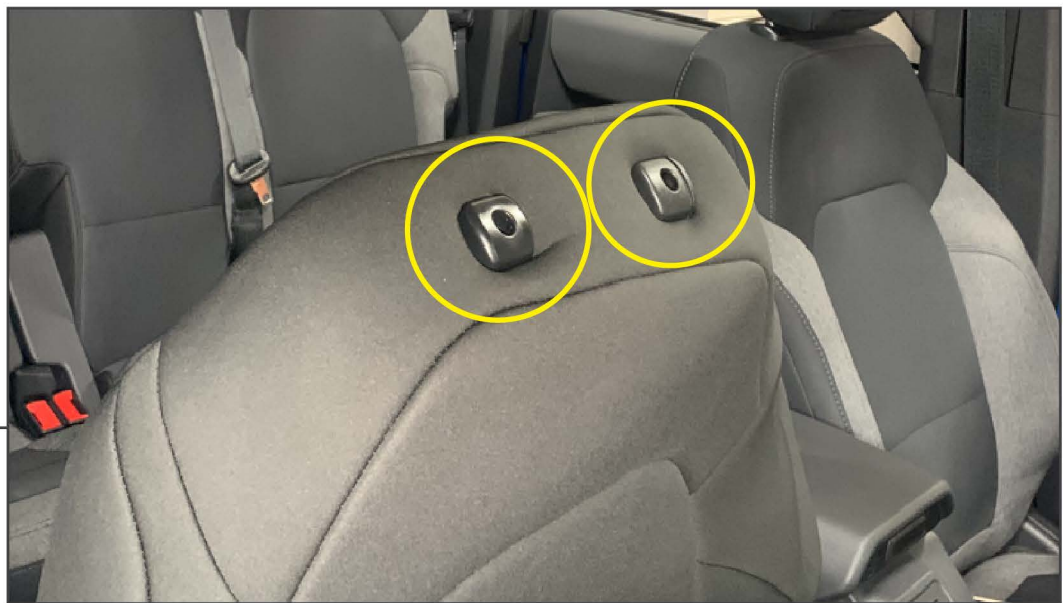

Tuck the head rest cutouts in the top of the seat cover under the head rest mounts.



---


**STEP 5**



Install the head rest cover to the head rest, using the attached Velcro to secure the cover into place. Install the head rest to the vehicle seat.

---

**STEP 6**

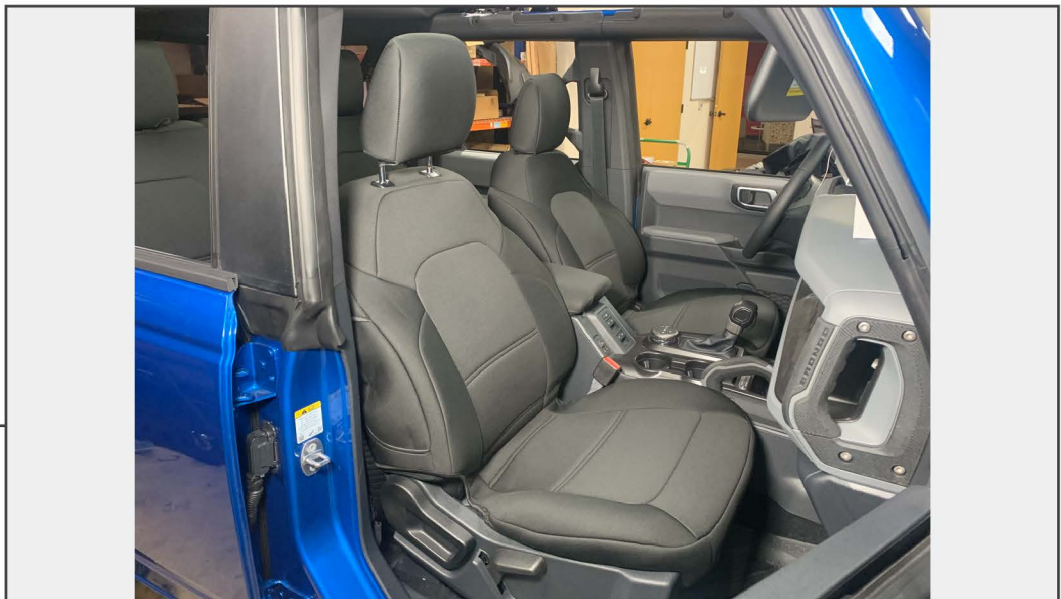

Repeat steps 1-6 to the opposite side of the vehicle to cover the remaining front seat.

---

**STEP 7**

Install the front arm rest cover to the vehicle by stretching the sides around the perimeter of the center console lid.


Front installation is now complete.

---

**STEP 8  
(REAR)**


Fold the rear seat back rest down. Remove the rear seat head rests by depressing the button on the base while lifting the head rest upwards. Unzip the middle section of the back rest, and lay the cover onto the back rest. Tuck the back rest seat cover under the seat belt and head rest mounts.

**NOTE:** Be sure to pass the seat cover under the seat belt to prevent covering the seat belt during installation.

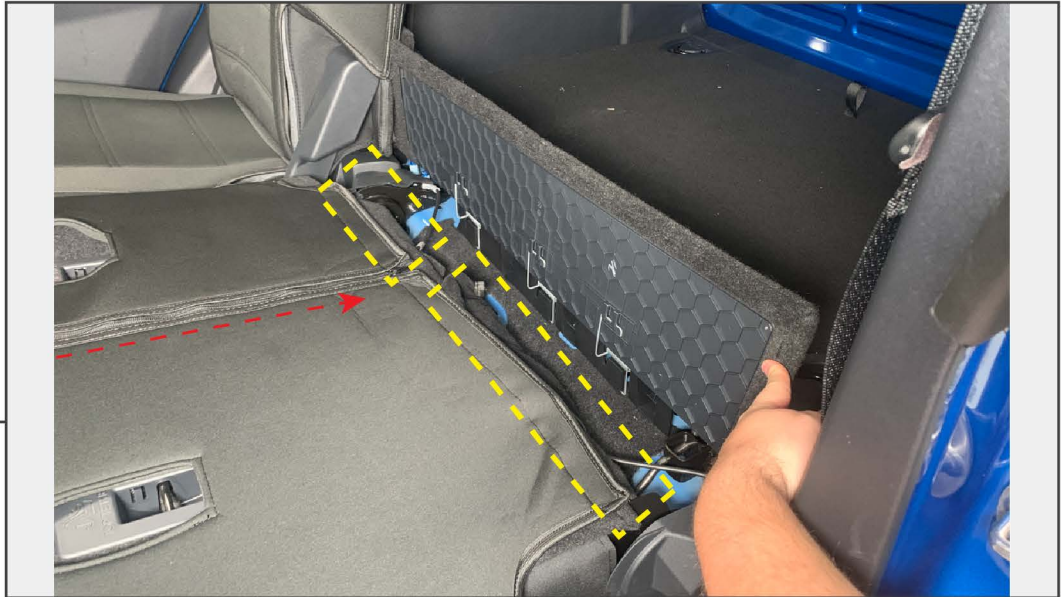

**STEP 9**

Tuck the front flaps through to the back of the seat. Pull the flaps tight, and tuck it under the rear of the back rest, and use the Velcro on the back of the back rest to secure the flap behind the seat. Zip the zipper in the middle of the seat up to pull the 2 sections of the seat cover together.

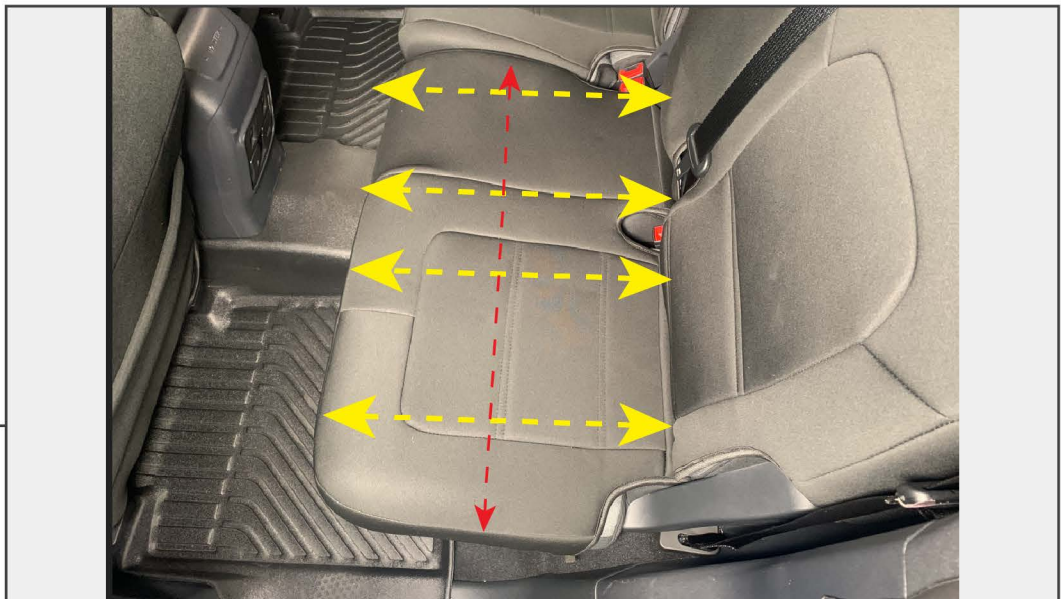

**STEP 10**

Un-latch all of the straps from the underside of the base seat cover. Lay the base seat cover over the base of the seat. Push the (4) straps in between the back rest and the base of the seat. Secure and tighten the (4) straps. Secure the sides of the seat cover using the (2) side elastic bands to the underside of the seat.



### STEP 11

Install the head rest covers to the head rests, using the attached Velcro to secure the cover into place. Install the head rests to the vehicle seats.



### STEP 12

Repeat steps 8-12 to the opposite side of the vehicle to cover the remaining rear seat.

Rear installation is now complete.