



# WHEEL SPACERS

(5-LUG)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (2) Wheel Spacers
- (1) Red Thread Locker
- (10) Lug Nuts

### TOOLS REQUIRED

---

- Jack
- Jack Stands
- Lug Wrench
- Torque Wrench
- Wire Brush

SKU # J137093-J137102

**STEP 1**



Raise the vehicle so that the tires are just off the ground. Support the vehicle with jack stands.

**STEP 2**



Using a lug wrench, remove the wheel.




**STEP 3**

Using a wire brush, clean any loose rust from the axle hub.



**STEP 4**

Apply a drop of the supplied thread locker on each wheel stud.

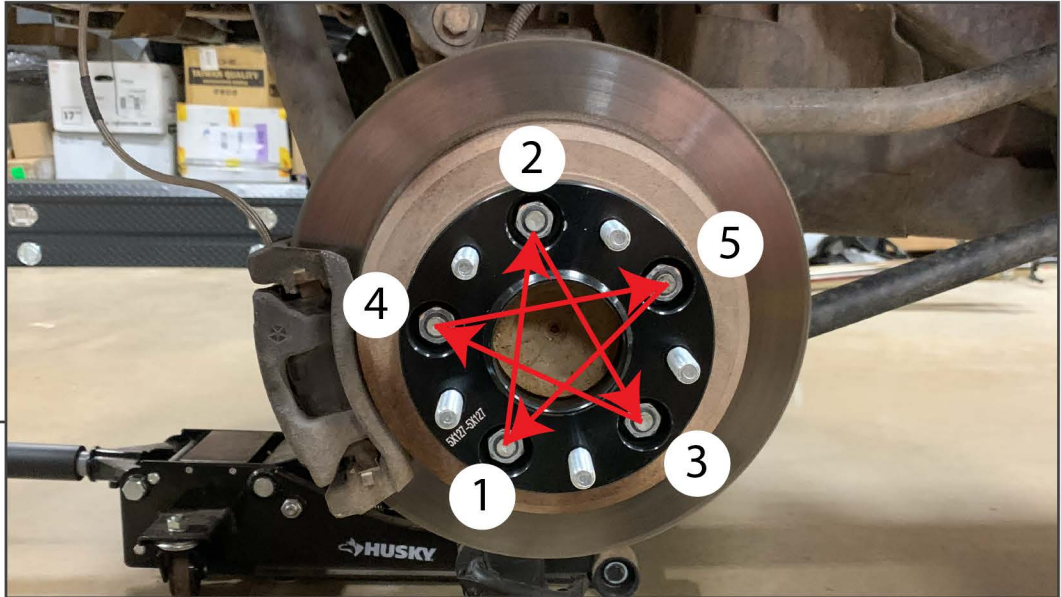

**STEP 5**

Install the wheel spacer using the supplied lug nuts. Tighten all lug nuts by hand in a star pattern. Then, torque the lug nuts as follows for your application:

- TJ/YJ : 85-110 lb.ft.
- JK : 85-125 lb.ft
- JL : 130 lb. ft.



**STEP 6**

Reinstall the original wheel on the new studs. Then, torque the lug nuts as follows for your application:

- TJ/YJ : 85-110 lb.ft.
- JK : 85-125 lb.ft
- JL : 130 lb. ft.