



WHEEL SPACERS

(5-LUG)

INSTALLATION INSTRUCTIONS

CONTENTS

- (2) Wheel Spacers
- (1) Red Thread Locker
- (10) Lug Nuts

TOOLS REQUIRED

- Jack
- Jack Stands
- Lug Wrench
- Torque Wrench
- Wire Brush

SKU # J137093-J137102

STEP 1



Raise the vehicle so that the tires are just off the ground. Support the vehicle with jack stands.

STEP 2



Using a lug wrench, remove the wheel.




STEP 3

Using a wire brush, clean any loose rust from the axle hub.



STEP 4

Apply a drop of the supplied thread locker on each wheel stud.

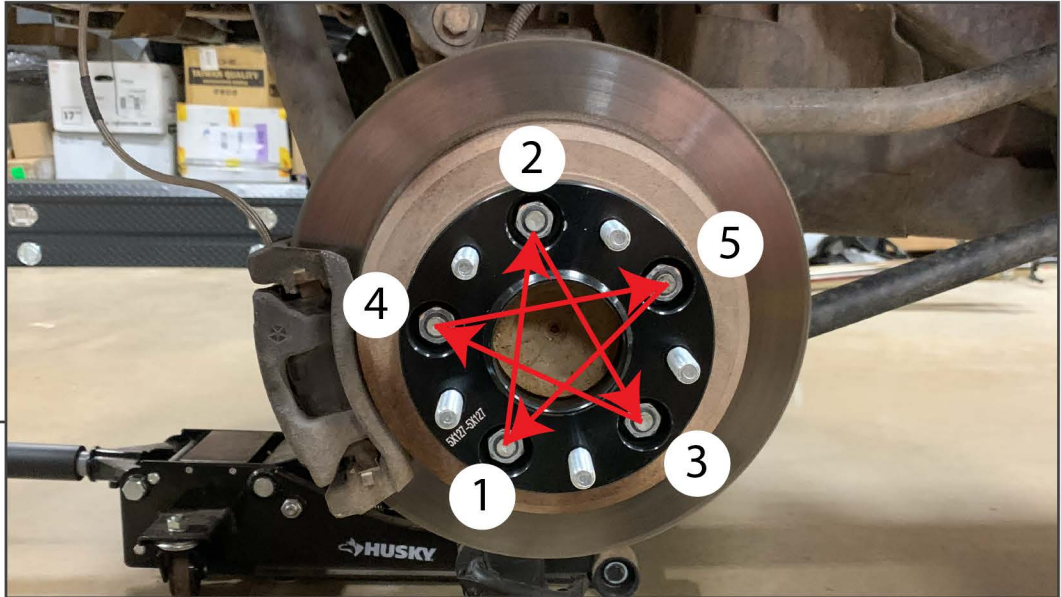

STEP 5

Install the wheel spacer using the supplied lug nuts. Tighten all lug nuts by hand in a star pattern. Then, torque the lug nuts as follows for your application:

- TJ/YJ : 85-110 lb.ft.
- JK : 85-125 lb.ft
- JL : 130 lb. ft.



STEP 6

Reinstall the original wheel on the new studs. Then, torque the lug nuts as follows for your application:

- TJ/YJ : 85-110 lb.ft.
- JK : 85-125 lb.ft
- JL : 130 lb. ft.