

7th OCULUS BI-LED HEADLAMPS

WHAT YOU NEED TO KNOW:

1) WATCH THE DIY INSTALLATION VIDEO GUIDE:



WATCH
THE
VIDEO

vimeo



Wrangler JK: vimeo.com/513962516

2) WIRING INFO:

ADD-A-CIRCUIT INFORMATION

For best overall control of the Oculus DRL Halo lights- connect the power lead wire to a switch (if you have an existing switch bank, S-Pod, etc). This will allow you to control the LEDs and leave the lights on when your Jeeps is parked. If you do not have a switch and would rather the lights turn on and off automatically use the included Add-A-Circuit to easily and safely tap power from the fuse panel. We recommend to use fuse location "M9" in the under hood fuse box.




The output wire has a blue butt connector that crimps to the wiring harness lead.

This fuse powers the DRL. If the DRLs do not come on this is the fuse to check.


The original fuse goes into this location. A spare fuse is shipped in this location.

Plugs into the original fuse location (#M9).

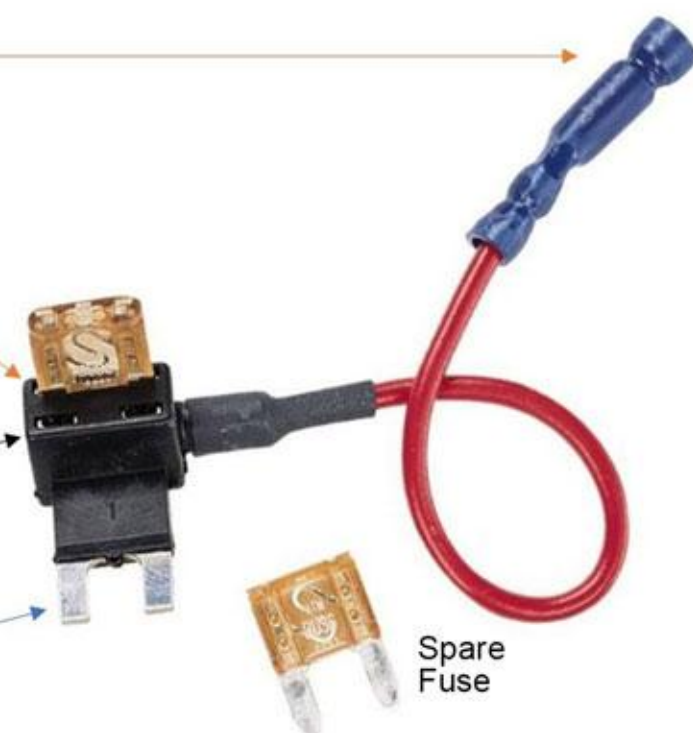

3) USE THE ORACLE FAQ PAGE:

Visit www.oraclelights.com/oculus for information and videos on common questions and tips & tricks for using your lights. All Oculus Bi-LED Headlights come from the factory with a baseline headlight level but depending on your lift, tires, etc you may need to adjust the beam level to insure maximum light on road for best visibility while creating minimal glare. Refer to the owner's manual for details on adjusting the beam angle for your JK.

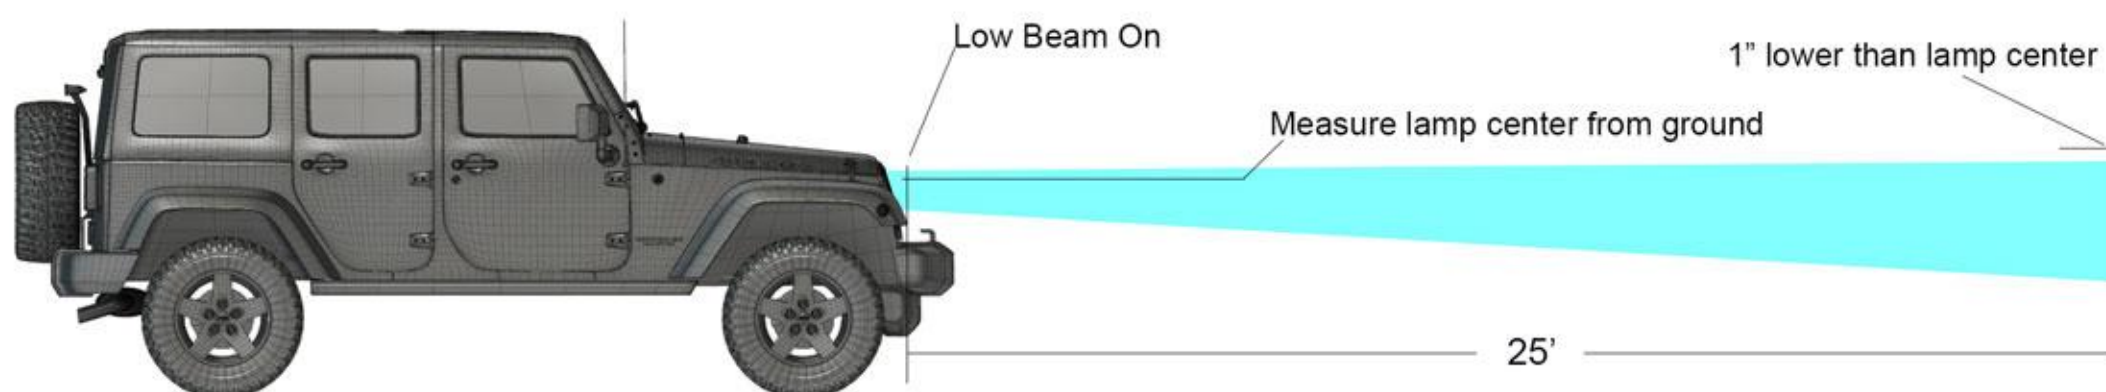

ORACLE
LIGHTING

www.oraclelights.com

© 2021 ORACLE LIGHTING

4401 Division St.
Metairie, LA 70002
P: 1(800)407-5776
F: 1(800)407-2631

7th OCULUS BI-LED HEADLAMPS

WHAT YOU NEED TO KNOW:

1) WATCH THE DIY INSTALLATION VIDEO GUIDE:



WATCH
THE
VIDEO

vimeo



Wrangler JK: vimeo.com/513962516

2) WIRING INFO:

ADD-A-CIRCUIT INFORMATION

For best overall control of the Oculus DRL Halo lights- connect the power lead wire to a switch (if you have an existing switch bank, S-Pod, etc). This will allow you to control the LEDs and leave the lights on when your Jeeps is parked. If you do not have a switch and would rather the lights turn on and off automatically use the included Add-A-Circuit to easily and safely tap power from the fuse panel. We recommend to use fuse location "M9" in the under hood fuse box.



The output wire has a blue butt connector that crimps to the wiring harness lead.

This fuse powers the DRL. If the DRLs do not come on this is the fuse to check.


The original fuse goes into this location. A spare fuse is shipped in this location.

Plugs into the original fuse location (#M9).



3) USE THE ORACLE FAQ PAGE:

Visit www.oraclelights.com/oculus for information and videos on common questions and tips & tricks for using your lights. All Oculus Bi-LED Headlights come from the factory with a baseline headlight level but depending on your lift, tires, etc you may need to adjust the beam level to insure maximum light on road for best visibility while creating minimal glare. Refer to the owner's manual for details on adjusting the beam angle for your JK.

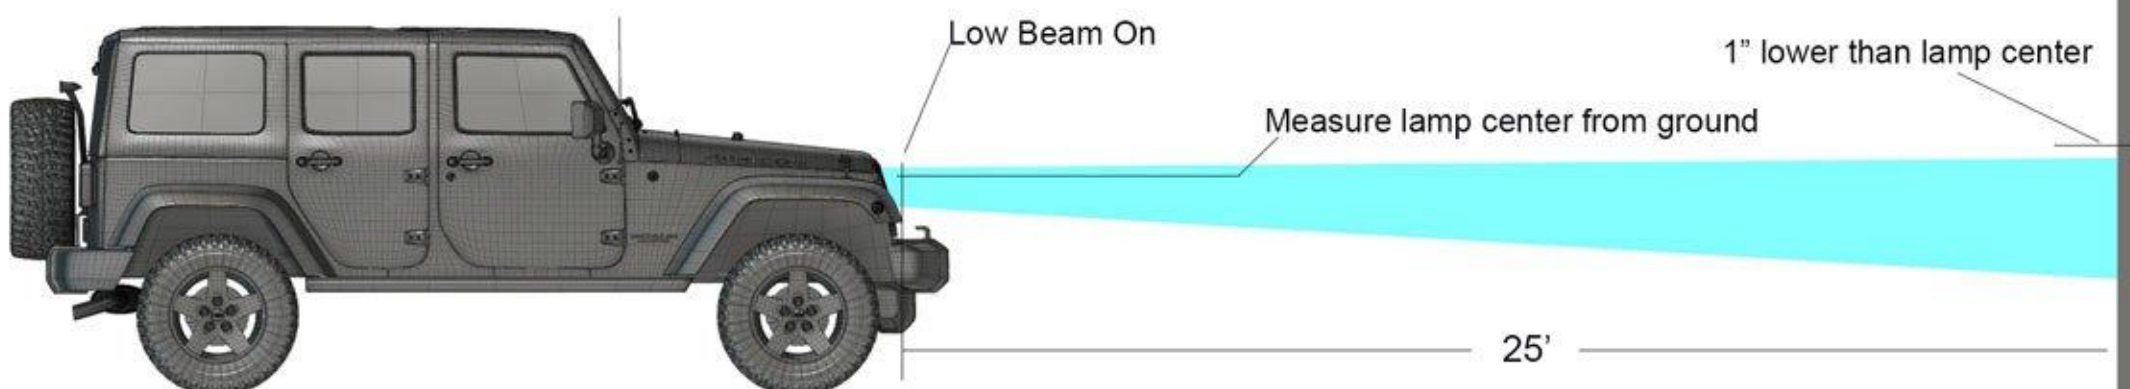

ORACLE
LIGHTING

www.oraclelights.com

© 2021 ORACLE LIGHTING

4401 Division St.
Metairie, LA 70002
P: 1(800)407-5776
F: 1(800)407-2631