



# BLOWER MOTOR RESISTOR

(1997-2006 WRANGLER TJ)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

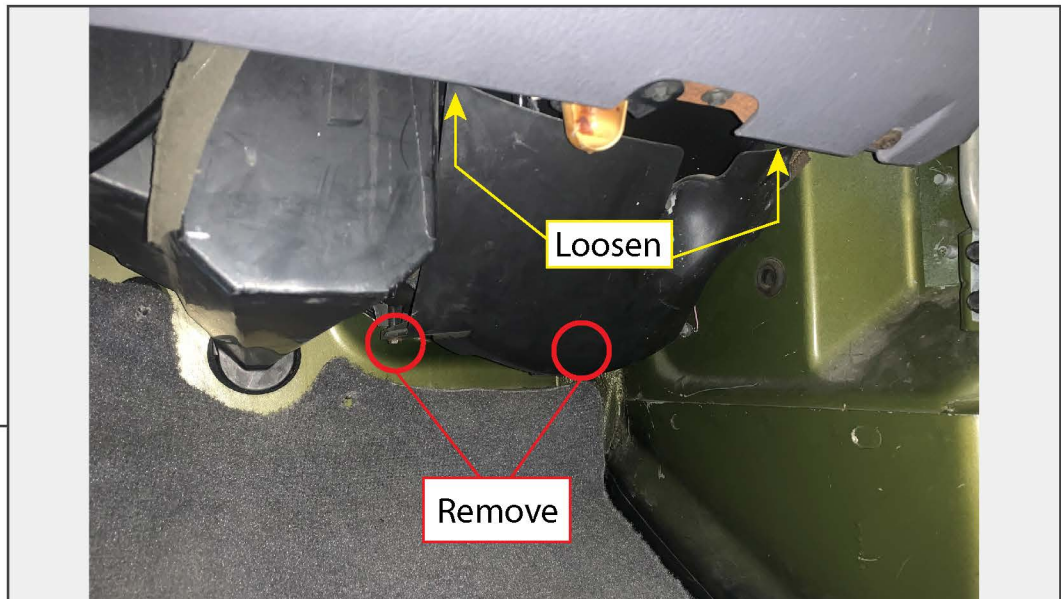
---

(1) Blower Motor Resistor

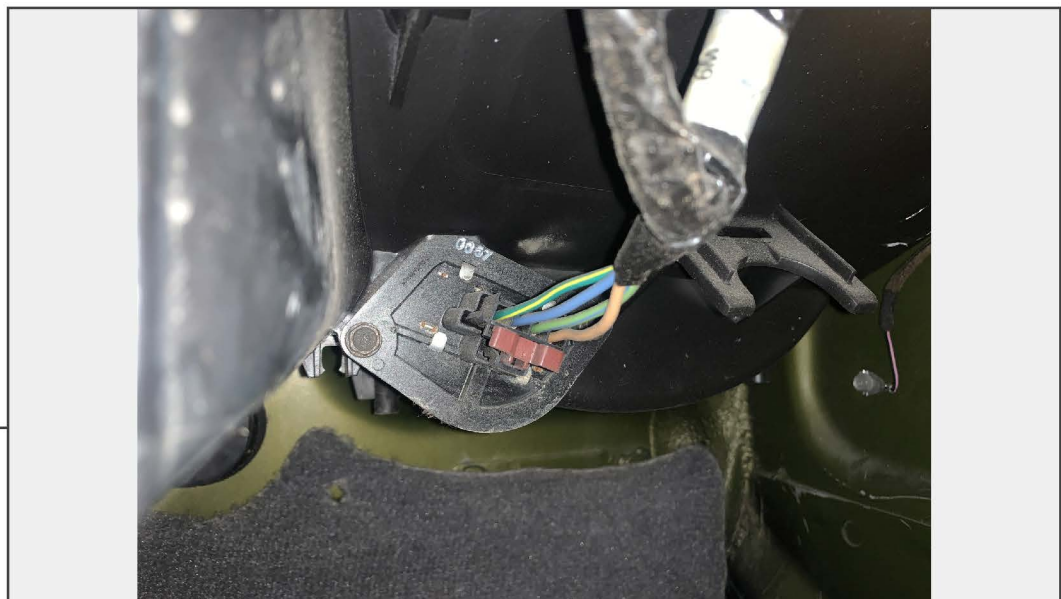
### TOOLS REQUIRED

---

5/16" Deep Socket  
Ratchet

**STEP 1**

Remove (2) 5/16 screws from the bottom of the plastic shield. Loosen (2) 5/16 screws from the top of the plastic shield. Remove the plastic shield from the vehicle.

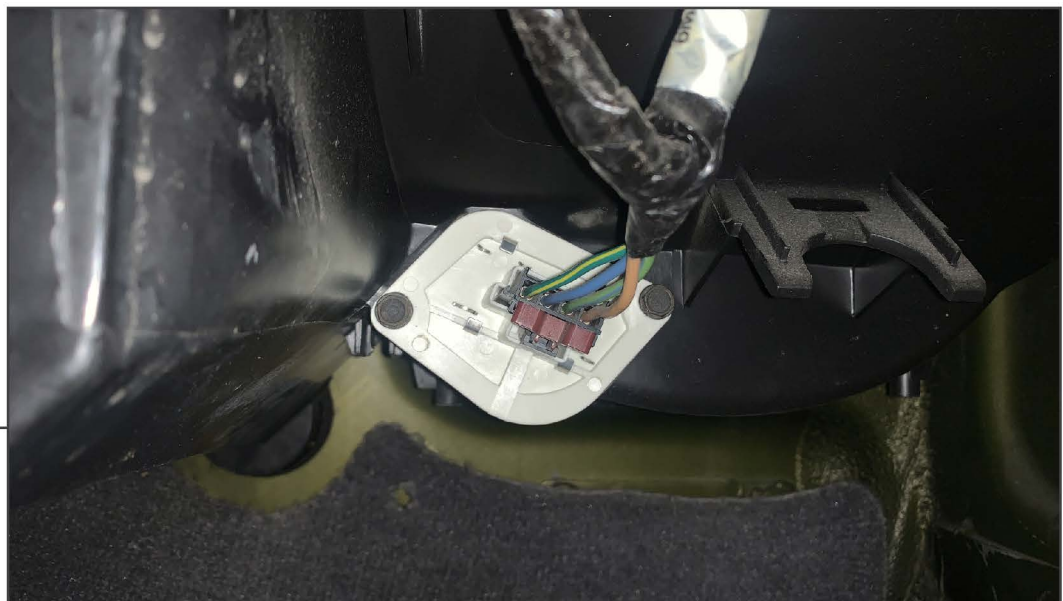
**STEP 2**

Pull the red locking tab back towards the interior of the vehicle. Once the red locking tab is pulled back, press the connector release tab and unplug the blower motor resistor connector.



**STEP 3**

Remove (2) 5/16 screws from the blower motor resistor, then remove the resistor from the vehicle.



**STEP 4**

Install the new blower motor resistor into the vehicle reusing the original hardware. Plug in the blower motor resistor electrical connector and lock using the red locking tab. Re-assemble the vehicle following steps 1-3 in reverse order.

Installation is now complete.