



STEERING STABILIZER

(2018-2023+ WRANGLER JL)

(2020-2023+ GLADIATOR JT)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Steering Stabilizer
- (2) Bushing Sleeves

TOOLS REQUIRED

- 18mm Socket
- Ratchet
- Spray Lubricant
- Hammer
- Flathead Screwdriver


STEP 1



Locate the original steering stabilizer attached to the vehicle axle and steering linkage. Remove (1) 18mm bolt from the axle housing.


Note: The nut has a flag attached to prevent spinning while loosening the bolt. The bolt and flag nut will be reused during assembly.

STEP 2

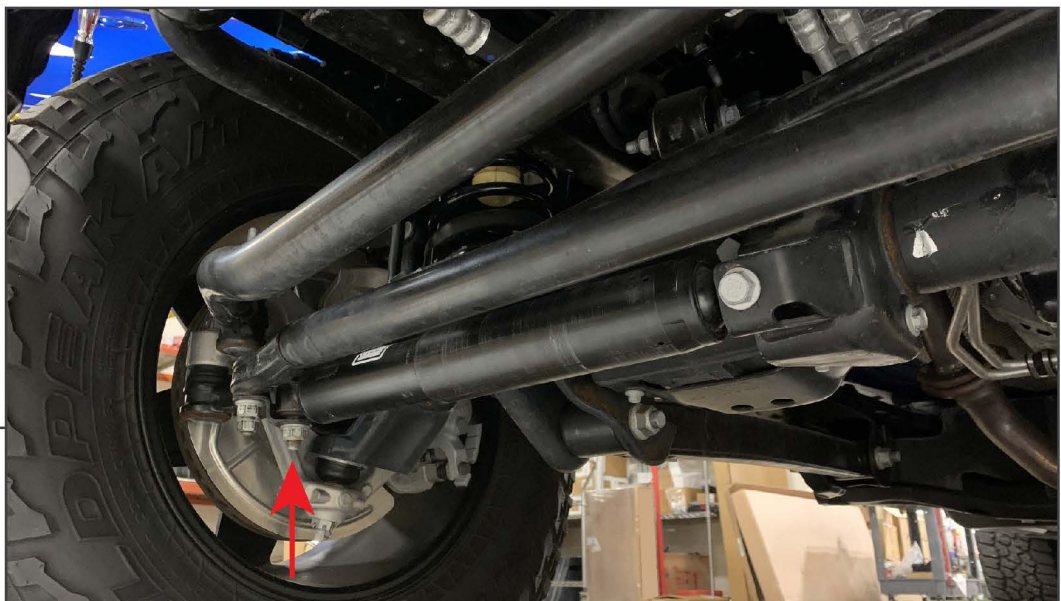

Loosen (1) 18mm nut from the mounting stud until the top of the nut is flush with the end of the stud. Once flush, tap the end of the stud/nut with a hammer to dislodge the stud from the steering linkage bracket. Remove the nut, then remove the stud from the steering stabilizer.

Note: The stud and nut will be reused during assembly.

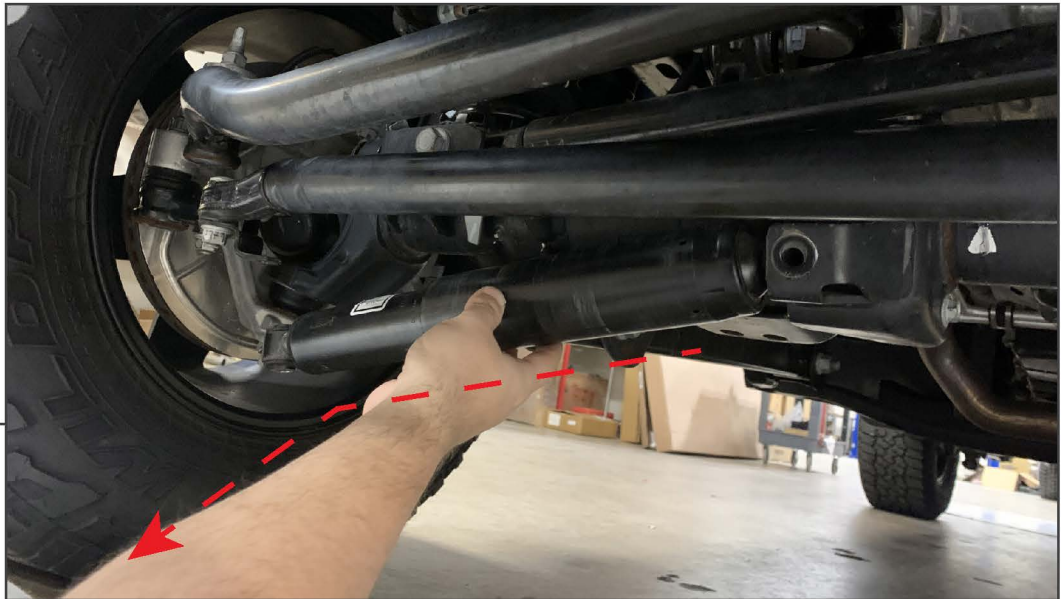

STEP 3

Hinge the steering stabilizer downwards, and remove from the vehicle.



STEP 4

Place the new steering stabilizer on a workable surface. Spray the inside of the steering stabilizer bushing, and the bushing sleeve with lubricant. Gently hammer the bushing sleeve into the bushing.

Repeat this step for the remaining bushing/sleeve.



STEP 5

Compress the new steering stabilizer to approximately the same size as the original steering stabilizer.



STEP 6

Fit the new steering stabilizer into the vehicle, ensuring the adjustment valve is angled away from the mounting bracket. Secure the steering stabilizer into place using the original hardware, and tighten to specification, see below. Installation is now complete.

Axle Housing Bolt/Flag Nut: 50 ft./lbs.
Steering Bracket Stud/Nut: 55 ft./lbs.