Copyright ABN 99 124 177 297

## Instructions Control Arm Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Page 1 of 2

## Caution - do not remove upper front bushing outer steel shells.

• Raise vehicle evenly and safely support. *Never rely on a Jack only.* 

• Proceed to remove 1 trailing arm at a time. This will make re-asembly easier.

• Use a drill or heat to remove <u>rubber only</u> from front upper bushings. Push supplied bushing 90609 into original steel outer shell. Then pop bushing 90610 over end - refer image below.


• Grease bushing ID and face with supplied grease only. Push in supplied 51mm steel tubes.

Application - Jeep Wrangler JK - 2007-2017

(Refer current catalogue for complete listing)

Contents - 1x M12 x 90mm bolt

- 1x M12 nut
- 2x washers
- 2x bushing 90609
- 2x bushing 90610
- 4x bushing 91342
- 2x steel tubes 49.5mm
- 2x steel tubes 51mm
- 8x bushing 91341
- 4x steel tubes 67mm
- Grease

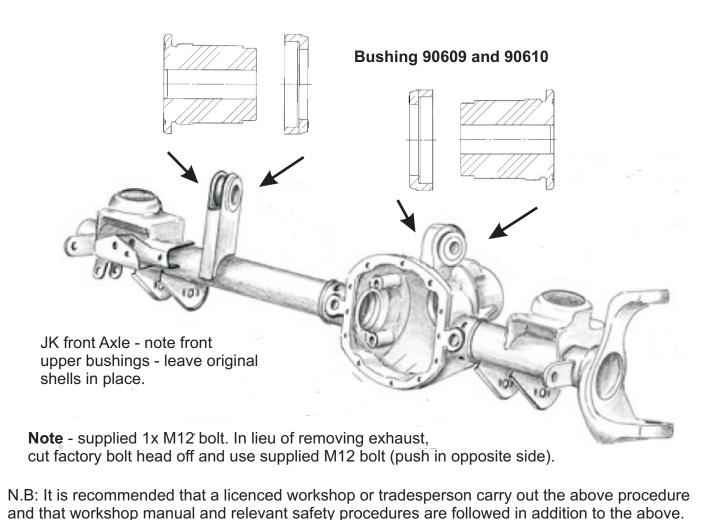


## Z5823

## Instructions Control Arm Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Page 2 of 2

- Push in supplied bushing 91342 into rear Upper Eyes.
- Grease bushing ID and face with supplied grease only.
- Push in supplied tubes 49.5mm long.

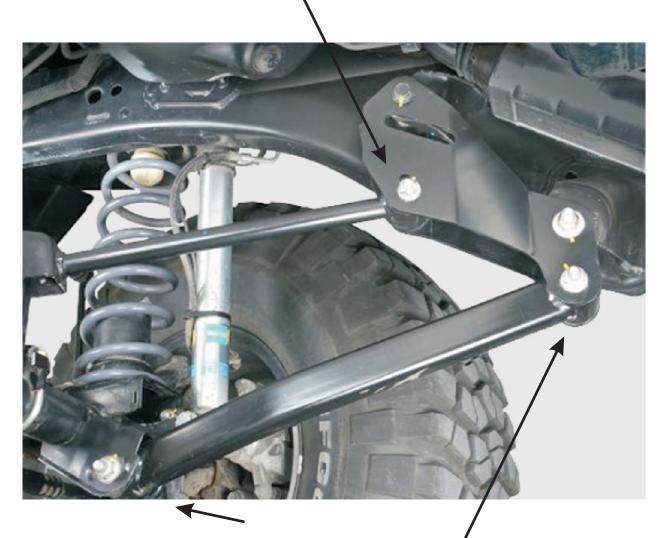

- Push in supplied bushing 91341 into both lower Eyes.
- Push in supplied steel tubes 67mm long.

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.