



ORACLE LIGHTING

INSTALLATION INSTRUCTIONS

MANUAL- BC2 LED CONTROLLER

PART#BC2-6

REV.04.04.2024

BLUETOOTH BC2 CONTROLLER


BEFORE YOU GET STARTED:

If you have not already watched the installation video please review for the latest information regarding the controller, the App, and the Installation of the device.



**SCAN
TO
WATCH**

BC2 CONTROLLER OVERVIEW:

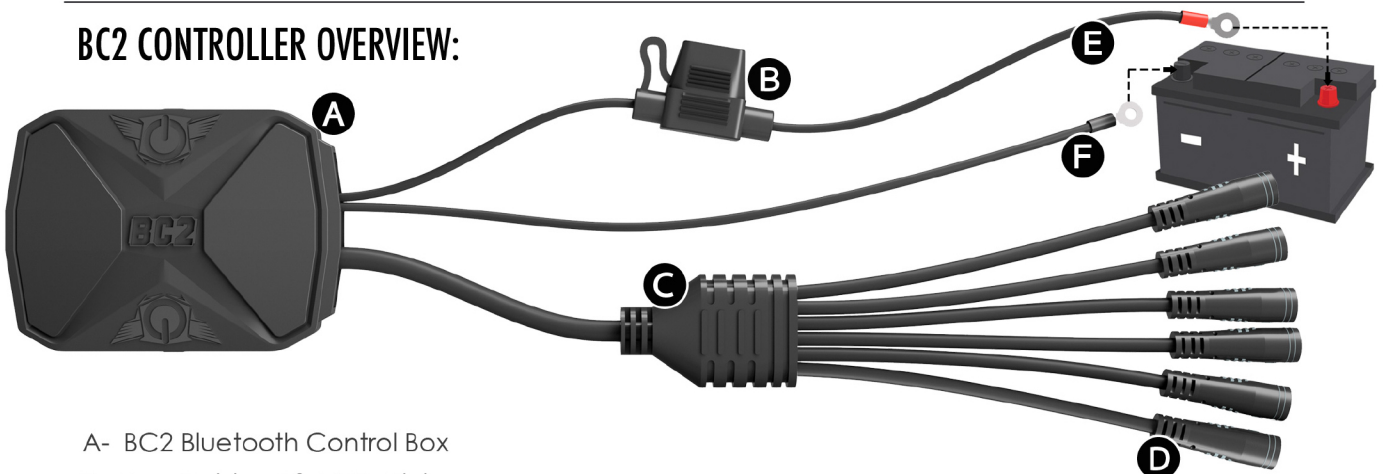

- A- BC2 Bluetooth Control Box
- B- Fuse Holder- 10 AMP Mini
- C- Output Splitter Hub
- D- RGB Connector (Connect to RGB Lights)
- E- DC Power Cable (Connect to + Power 12-24VDC)
- F- Ground Cable (Connect to solid chassis ground or Battery - post)



INSTALLATION STEPS:

- 1- Disconnect negative battery post while working with vehicle electronics.
- 2- Find suitable location for the control box near the battery away from water and heat.
- 3- Mount control box using strap clamp mounts on the bottom of the control box.
- 4- Connect RGB lights to the output cables. Cap off any outputs not being used.
- 5- Connect Positive (Red) Power Wire to Battery + Terminal
- 6- Connect Negative (Black) Ground Cable to Chassis Ground of Battery - Terminal.
- 7- Reconnect negative battery post.
- 8- Download and install ColorSHIFT™ PRO App and enable all Permissions.
- 9- Connect to the Device in the App and Switch Device to "ON" Position.