

LED TAIL LIGHTS

(2020-2023+ GLADIATOR JT)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Tail Light
- (1) RH Tail Light

TOOLS REQUIRED

Flat Head Screwdriver 10mm Wrench 8mm Socket Socket Wrench

> SKU: JG18584 Edited: 06/28/2022





Lower the tailgate to access the tail light bolts. Using an 8mm socket, remove the (2) bolts securing the tail light to the vehicle.



STEP 2

Using a soft pry tool, depress the tab on the factory light while pulling the light towards the rear of the vehicle.



Slide the red lock tab back. Depress the tab on the electrical connector while pulling the connectors away from each other.




STEP 4

Remove the (2) mounting posts using a 10mm wrench, and transfer the posts to the new tail light.





Remove the (2) screw clips using a flat head screwdriver, and transfer the clips to the new tail light.

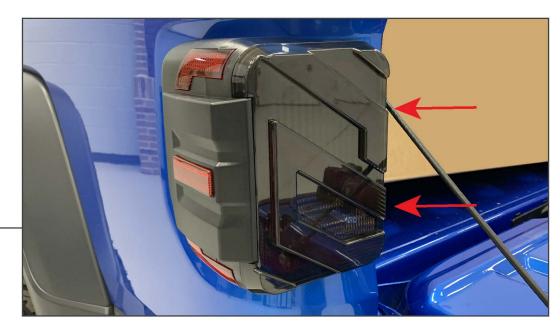

STEP 6

Plug in the tail light, push the light into the vehicle. Secure the light to the vehicle using the factory hardware.





Repeat steps 1-6 to the opposite side of the vehicle.

Installation is now complete.