



# FRONT & REAR NEOPRENE SEAT COVERS

(2020-2022+ JEEP GLADIATOR JT)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (2) Front Seat Base Covers
- (2) Front Backrest Covers
- (2) Front Headrest Covers
- (2) Rear Base Covers
- (2) Rear Backrest Covers
- (3) Rear Headrest Covers
- (1) Rear Arm Rest Cover  
(If Applicable)

### TOOLS REQUIRED

---

Vacuum/Interior Cleaner  
(Optional)

SKU # JG20513 / JG20514

## STEP 1 (FRONT)



Remove the head rest from the seat. Using the front backrest cover, drape the cover over the vehicle seat. The airbag cutout will face out.

## STEP 2 (FRONT)



Underneath the seat, release (2) elastic bands holding the rear flap of the original seat flush to the bottom of the seat. Once released, flip the rear flap up against the backrest, and pull the new seat cover over the seat.

## STEP 3 (FRONT)



Tuck the front flap through to the back of the seat. Tuck the factory seat back upwards between the seat and seat cover. Pull the front flap up the back of the seat and attach it to the Velcro portion of the seat cover.

## STEP 4 (FRONT)



Lay the base seat cover over the seat, and push the rear straps in between the backrest and the base of the seat. Using the (2) rear straps, route them towards the front of the seat, and clip them to the (2) front clips. Pull the tightening strap to secure the base seat cover to the seat.

Using the elastic band on each side of the seat, secure seat cover to the base of the seat. Be sure to go around the lumbar support knob on the side of the seat to prevent covering the knob.

## STEP 5 (FRONT)



Pull the headrest seat cover over the headrest. Using the Velcro on the headrest, pull the Velcro together to hold the seat cover tight. Reinstall headrest to the seat.

## STEP 6 (FRONT)



Push the headrest mounting holes in the seat cover under the mounting holes in the seat. Reinstall the headrest to the seat.

Front installation is now complete.

## STEP 1 (REAR)



Fold the rear seat backrest down. Unzip the middle section of the backrest, and lay the cover over the backrest. Undo the Velcro around the headrest and reattach the Velcro underneath the headrest to keep the backrest tight against the seat.

NOTE: Be sure to pass the seat cover under the seat belt to prevent covering the seat belt during installation.

## STEP 2 (REAR)




Tuck the front flap through to the back of the seat. Pull the flap tight, and tuck it under the rear of the backrest, and use the Velcro on the back of the backrest to secure the flap behind the seat. Zip the zipper in the middle of the seat up to pull the 2 sections of the seat cover together.



**STEP 3  
(REAR)**

Install the head rest cover, slide the cover over the headrest and join the Velcro strips together. Then tuck the headrest cover behind the headrest tilt button.

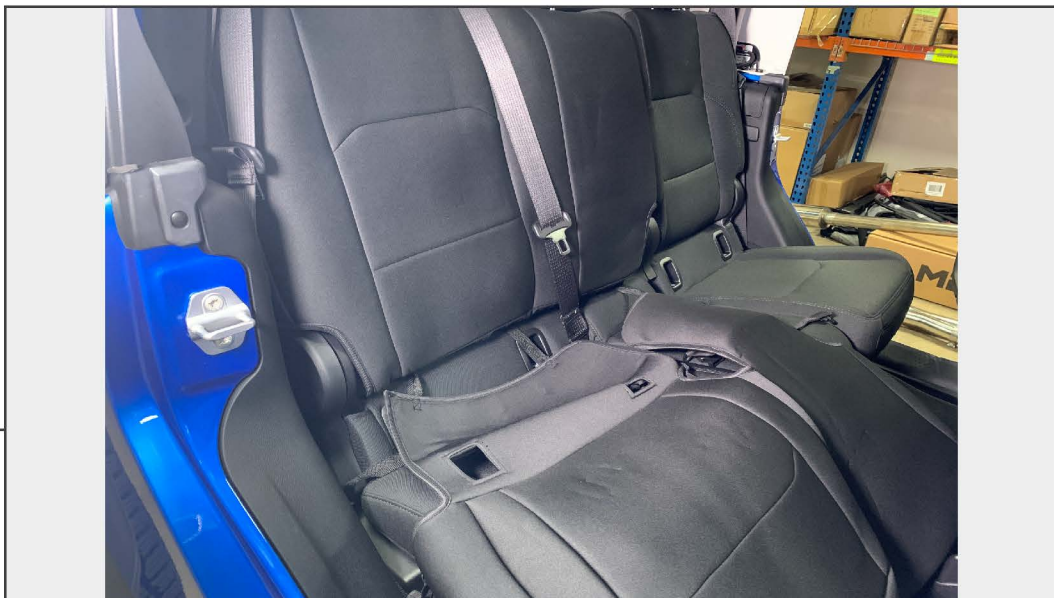

**STEP 4  
(REAR)**

Lay the base seat cover over the base of the seat. Push the (4) straps in between the backrest and the base of the seat, and (1) strap under each side.

## STEP 5 (REAR)



Lift the base of the seat and secure the (4) straps into each clip, as well as the (1) horizontal clip going across the base. Using the elastic straps, connect the straps under each individual seat to hold the seat cover tight.

## STEP 6 (REAR)



Fold the seat back down once all straps are secure. Cover the center cup holder arm rest using the designated cover, if applicable.

Rear installation is now complete.