



# ORACLE LIGHTING

## TOYOTA 4RUNNER TAIL LIGHTS

### ORACLE PART #5920

### INSTALLATION GUIDE


**TOOLS NEEDED:**  
PANEL TOOL  
10MM SOCKET  
SOCKET WRENCH  
PHILLIPS HEAD



SCAN TO VIEW INSTALL VIDEO




USE A PANEL TOOL TO REMOVE THIS REAR PANEL.

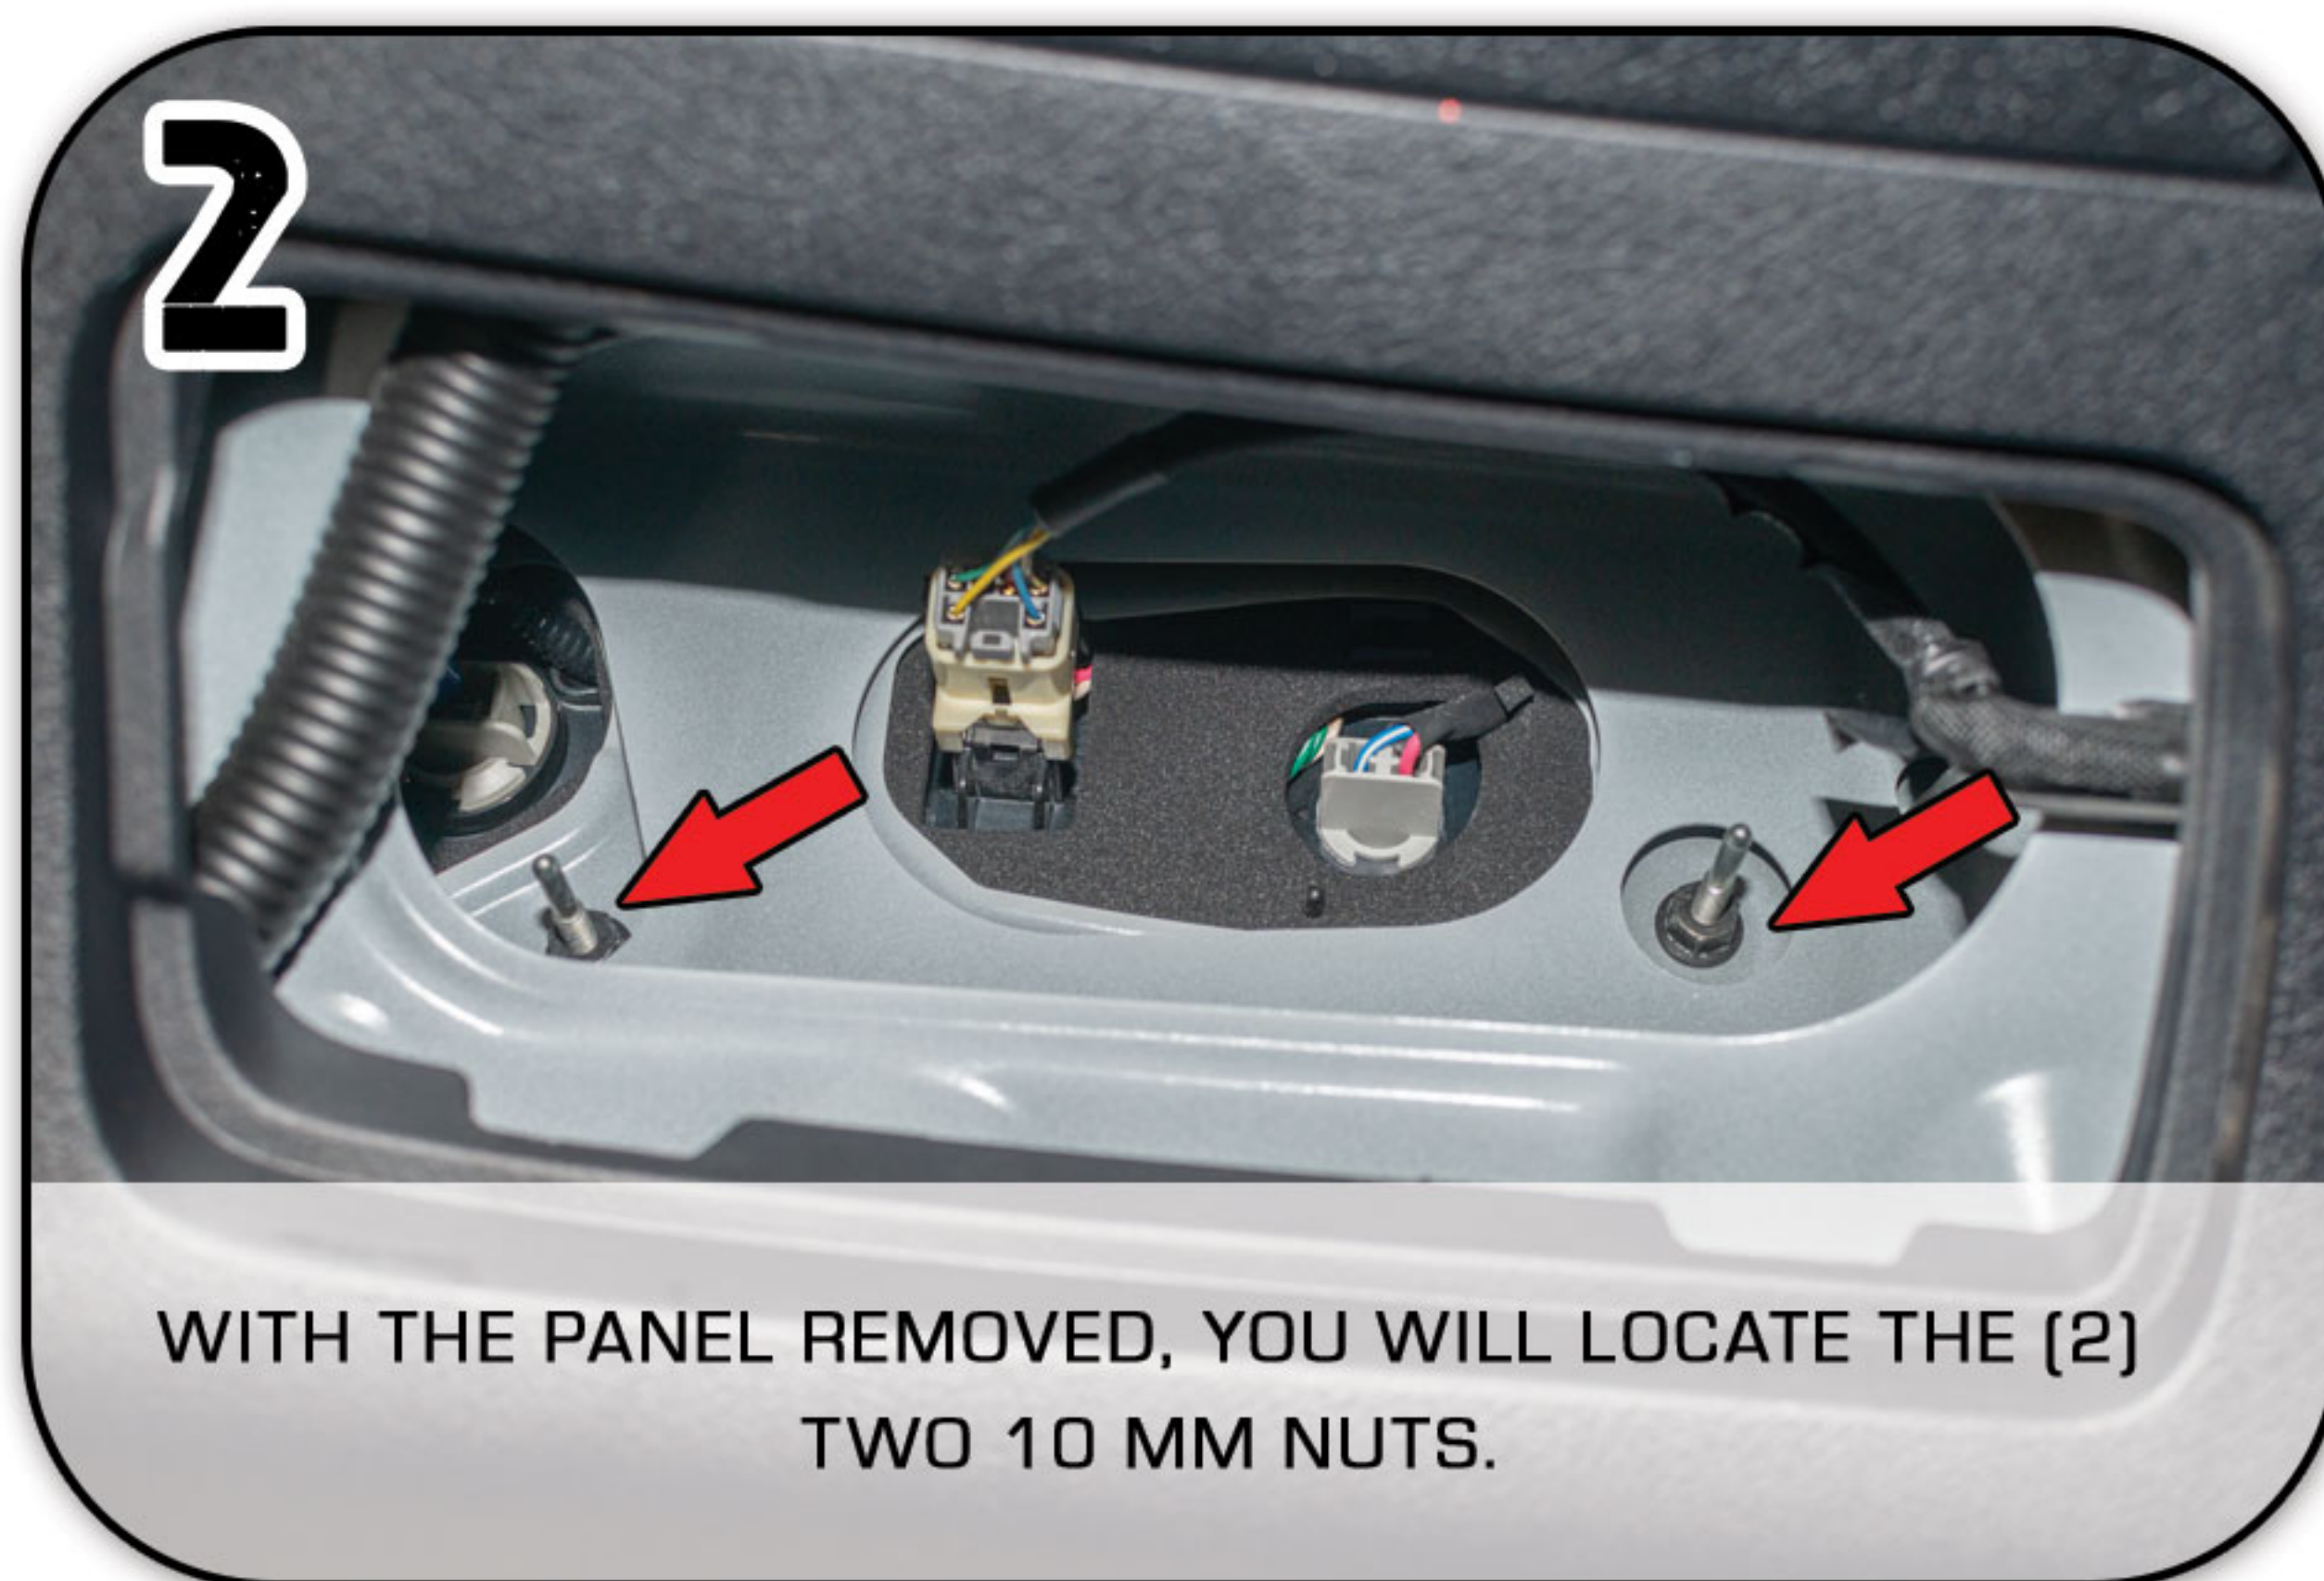


WITH THE PANEL REMOVED, YOU WILL LOCATE THE (2) TWO 10 MM NUTS.



LOOSEN BOTH 10MM NUTS USING A 10MM SOCKET.

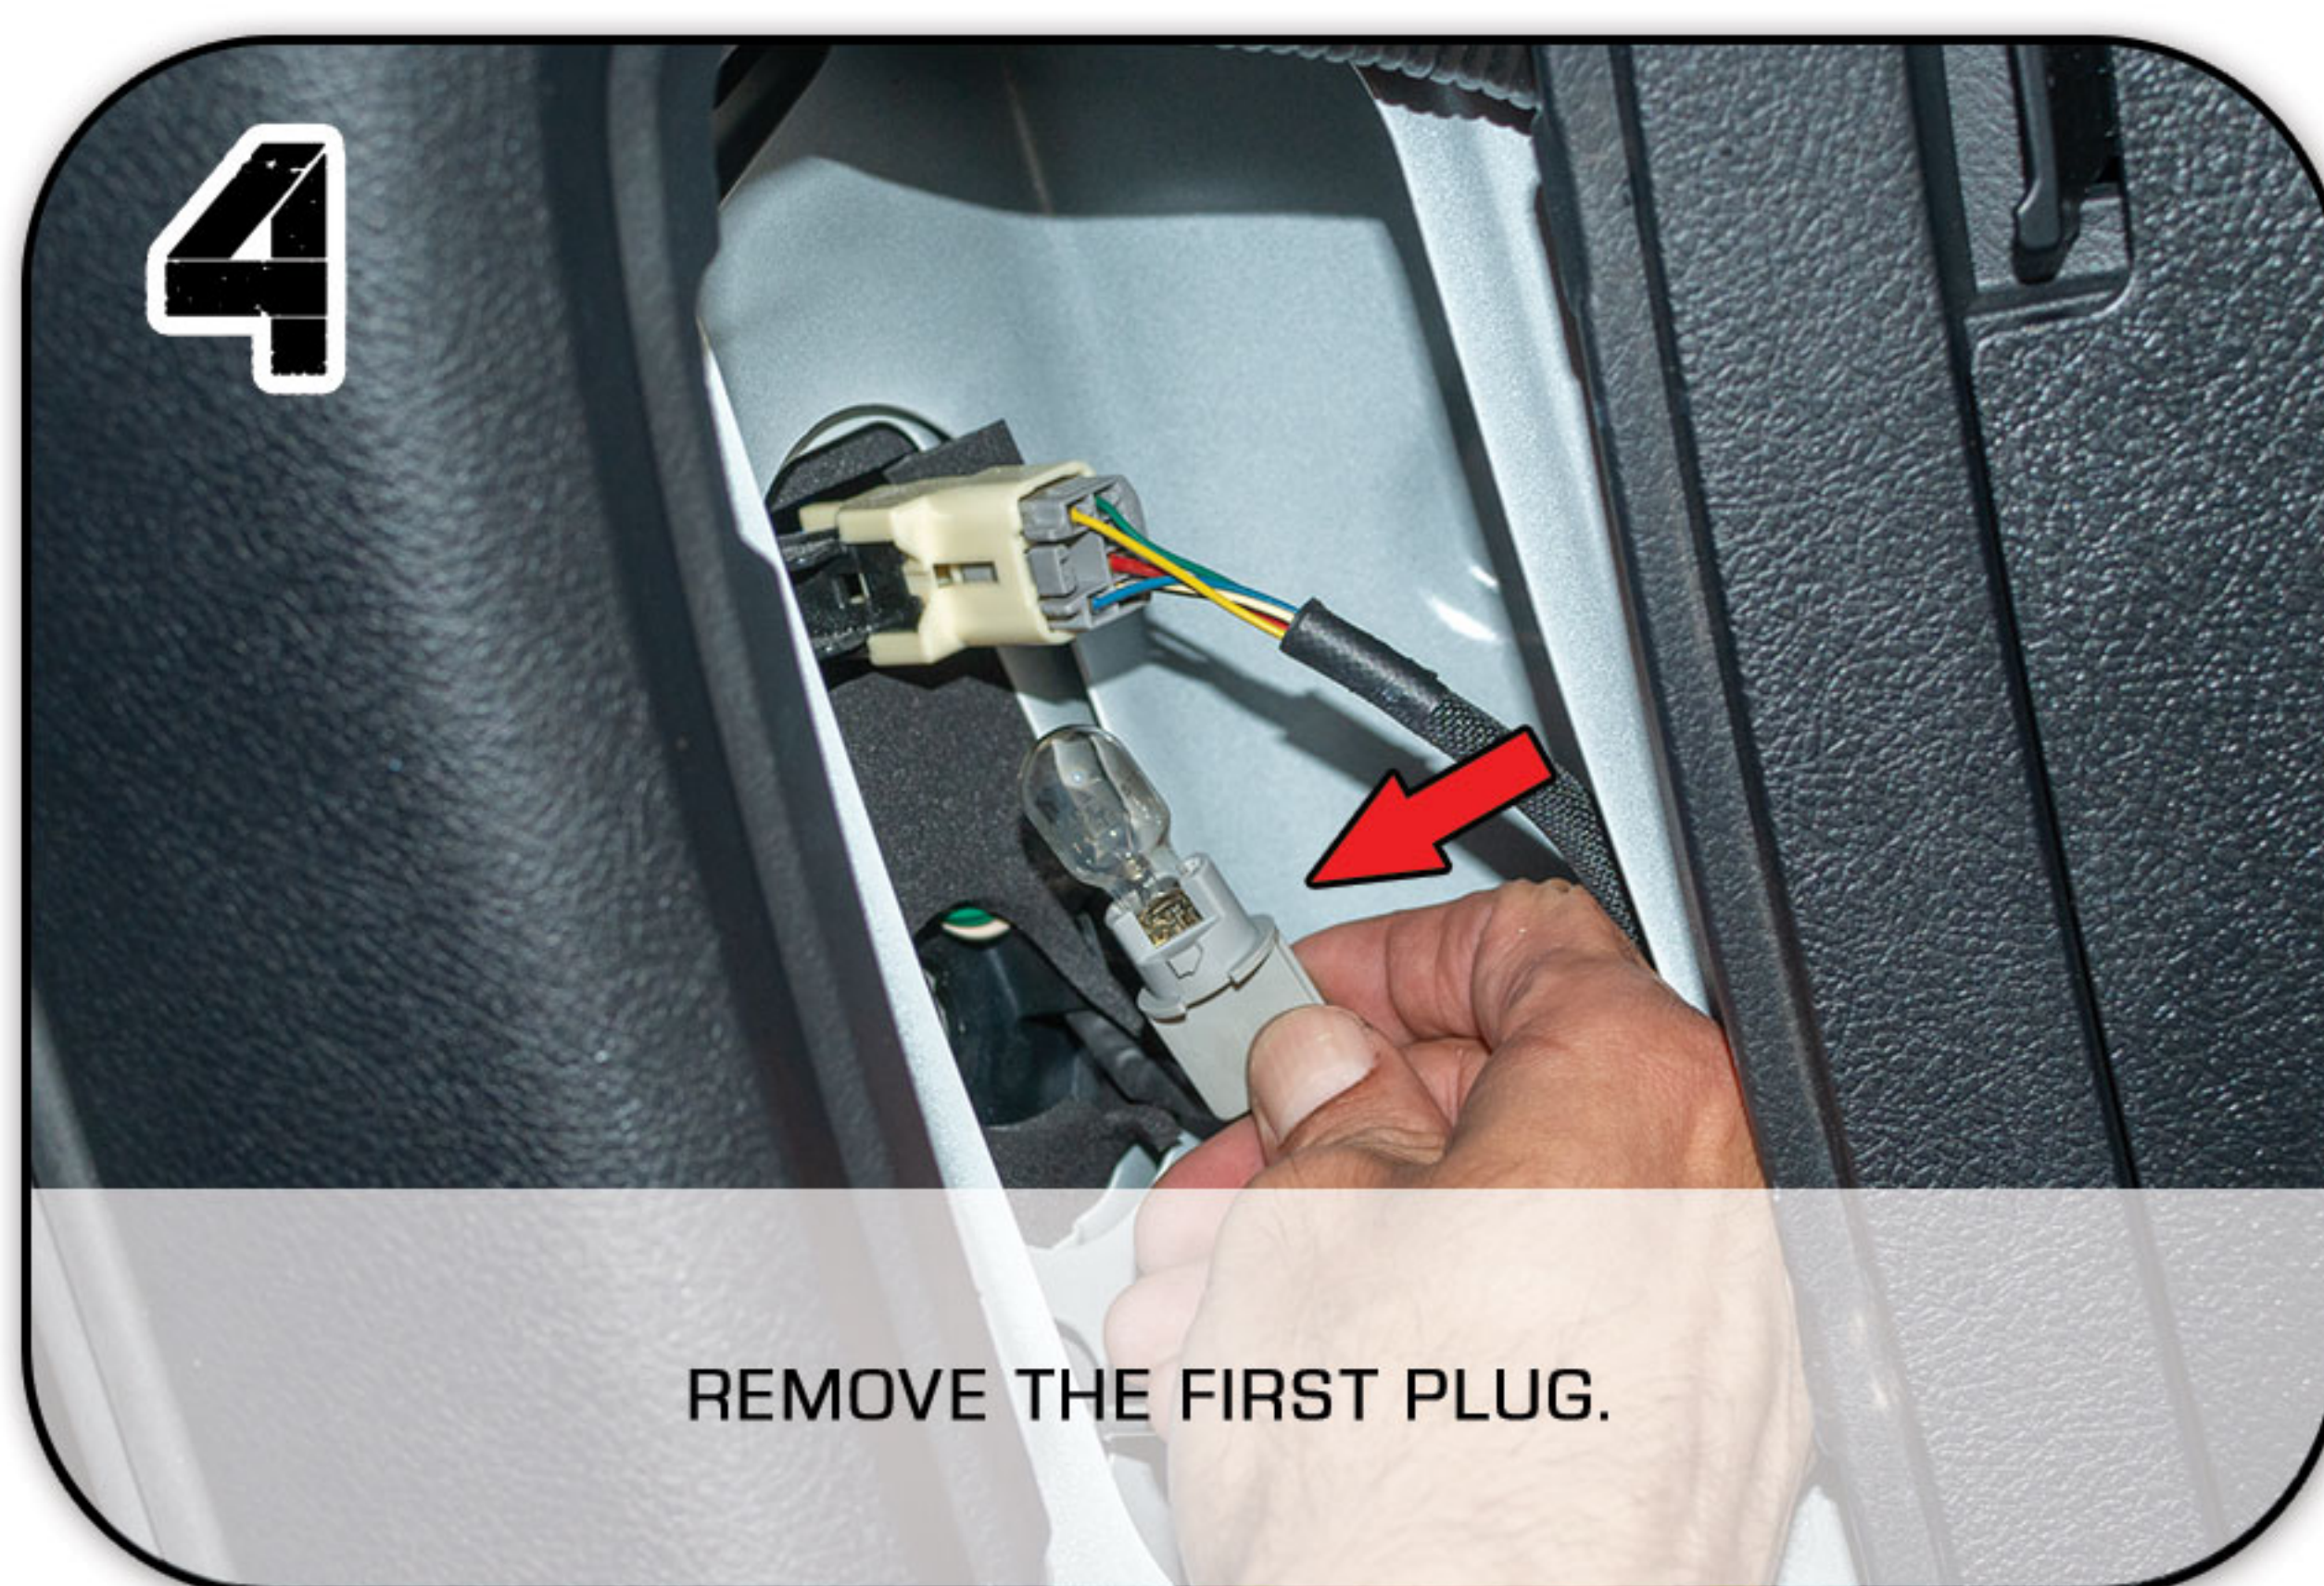

REMOVE THE FIRST PLUG.

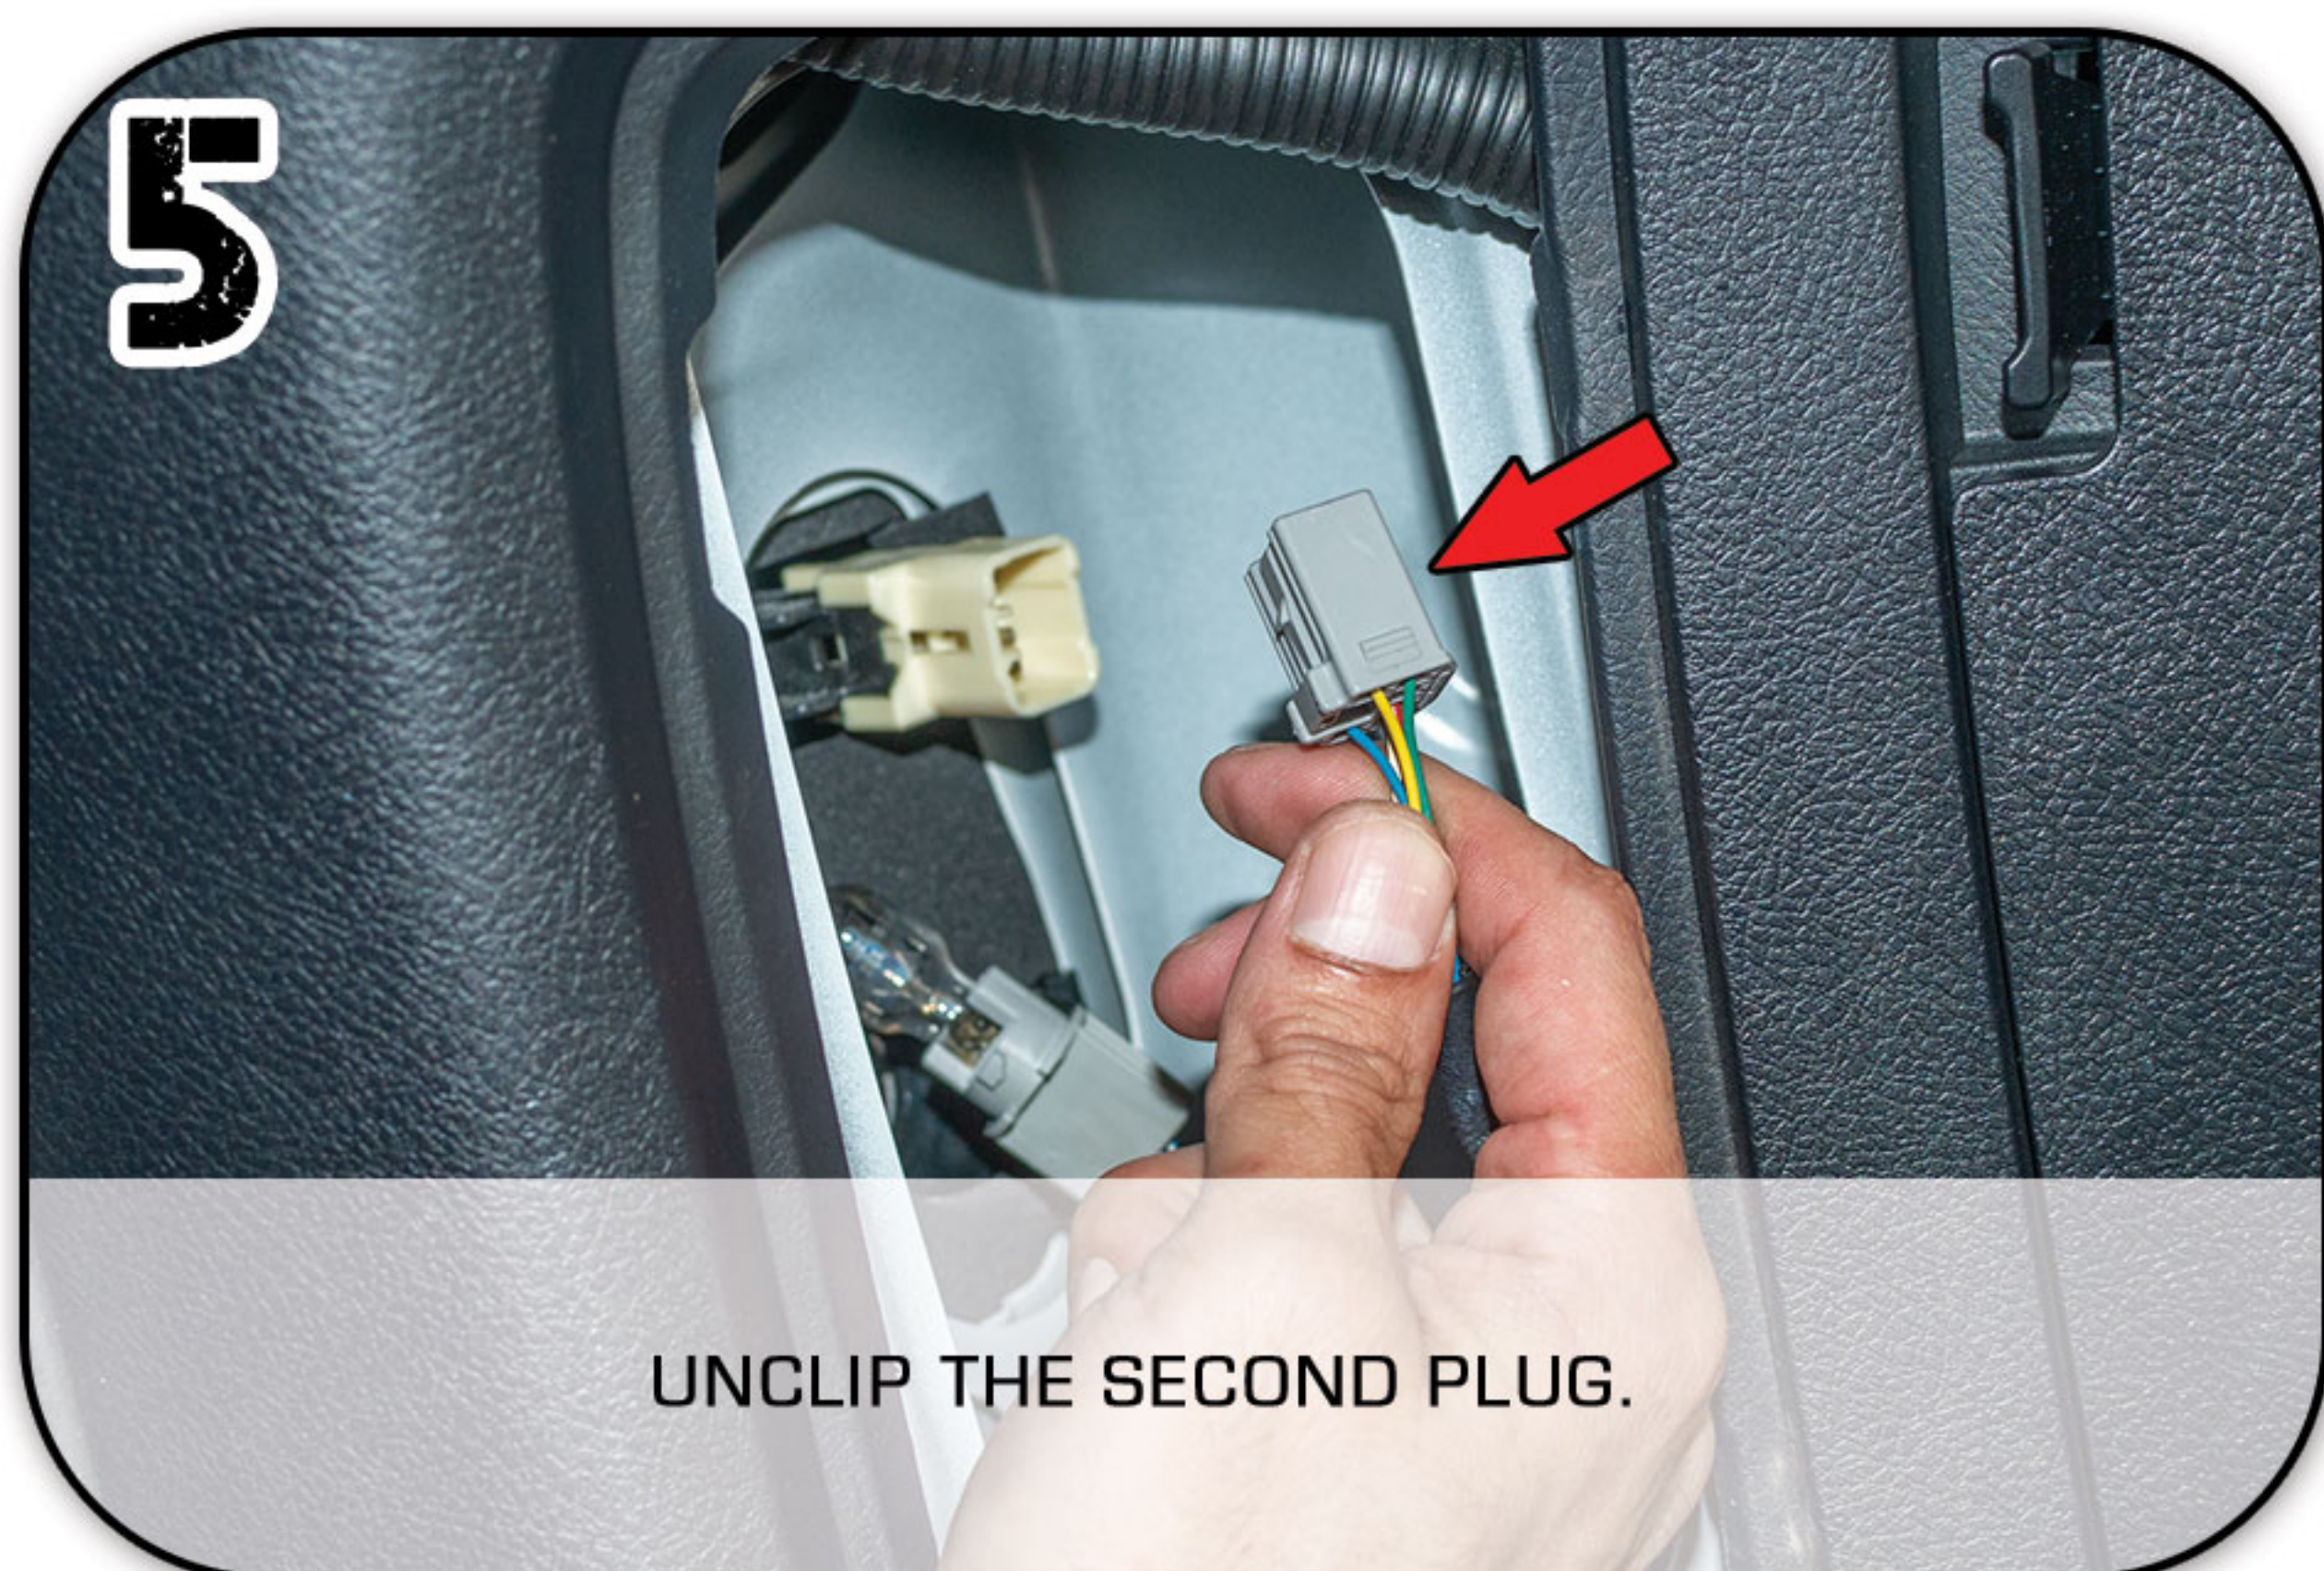

UNCLIP THE SECOND PLUG.



NOW PULL BACK FIRMLY TO DISCONNECT OEM TAIL LIGHT FROM THE VEHICLE.



REMOVE THE OEM GASKET FROM THE OEM TAIL LIGHT. YOU WILL REUSE THE GASKET ON THE NEW TAIL LIGHT.



USING A PHILLIPS HEAD SCREWDRIVER, REMOVE THE (3) PHILLIPS SCREWS. DETACH THE BRACKET.



[www.oraclelights.com](http://www.oraclelights.com)

© 2024 ORACLE LIGHTING

4401 Division St.  
Metairie, LA 70002

FOR ADDITIONAL TECHNICAL SUPPORT PLEASE CALL US 1(800)407-5776





# ORACLE LIGHTING

## TOYOTA 4RUNNER TAIL LIGHTS


### ORACLE PART #5920

### INSTALLATION GUIDE


**TOOLS NEEDED:**  
PANEL TOOL  
10MM SOCKET  
SOCKET WRENCH  
PHILLIPS HEAD



SCAN TO VIEW INSTALL VIDEO

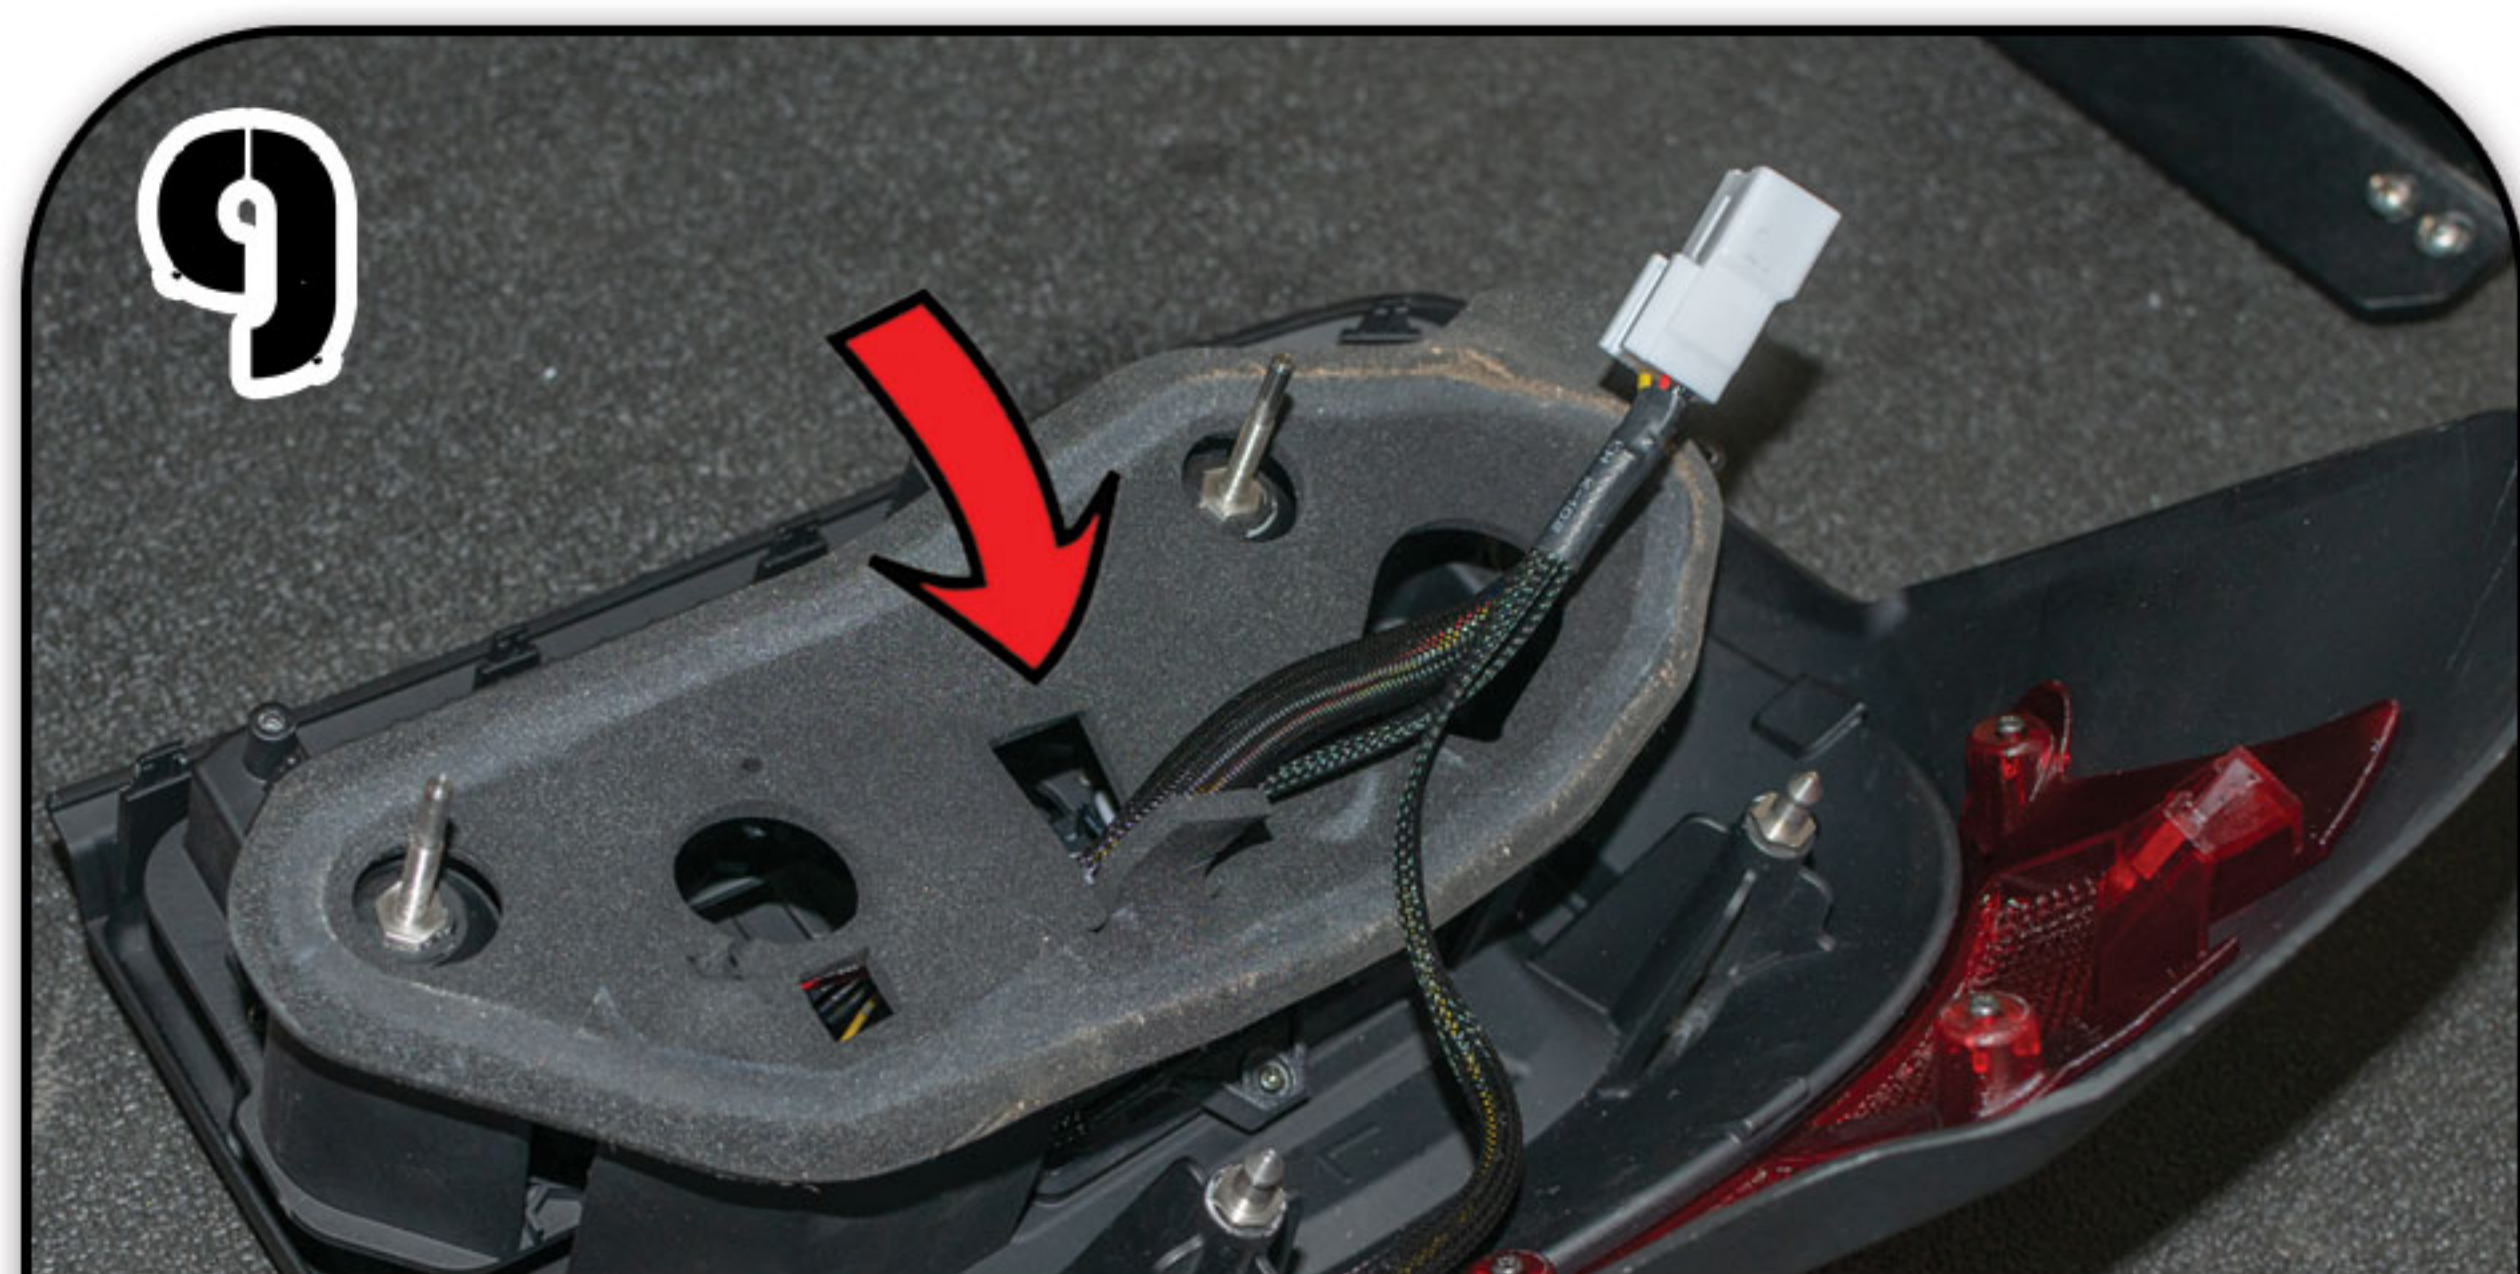

INSERT GASKET FROM OEM TAIL LIGHT TO NEW TAIL LIGHT.  
RUN CONNECTORS THROUGH THIS OPENING.

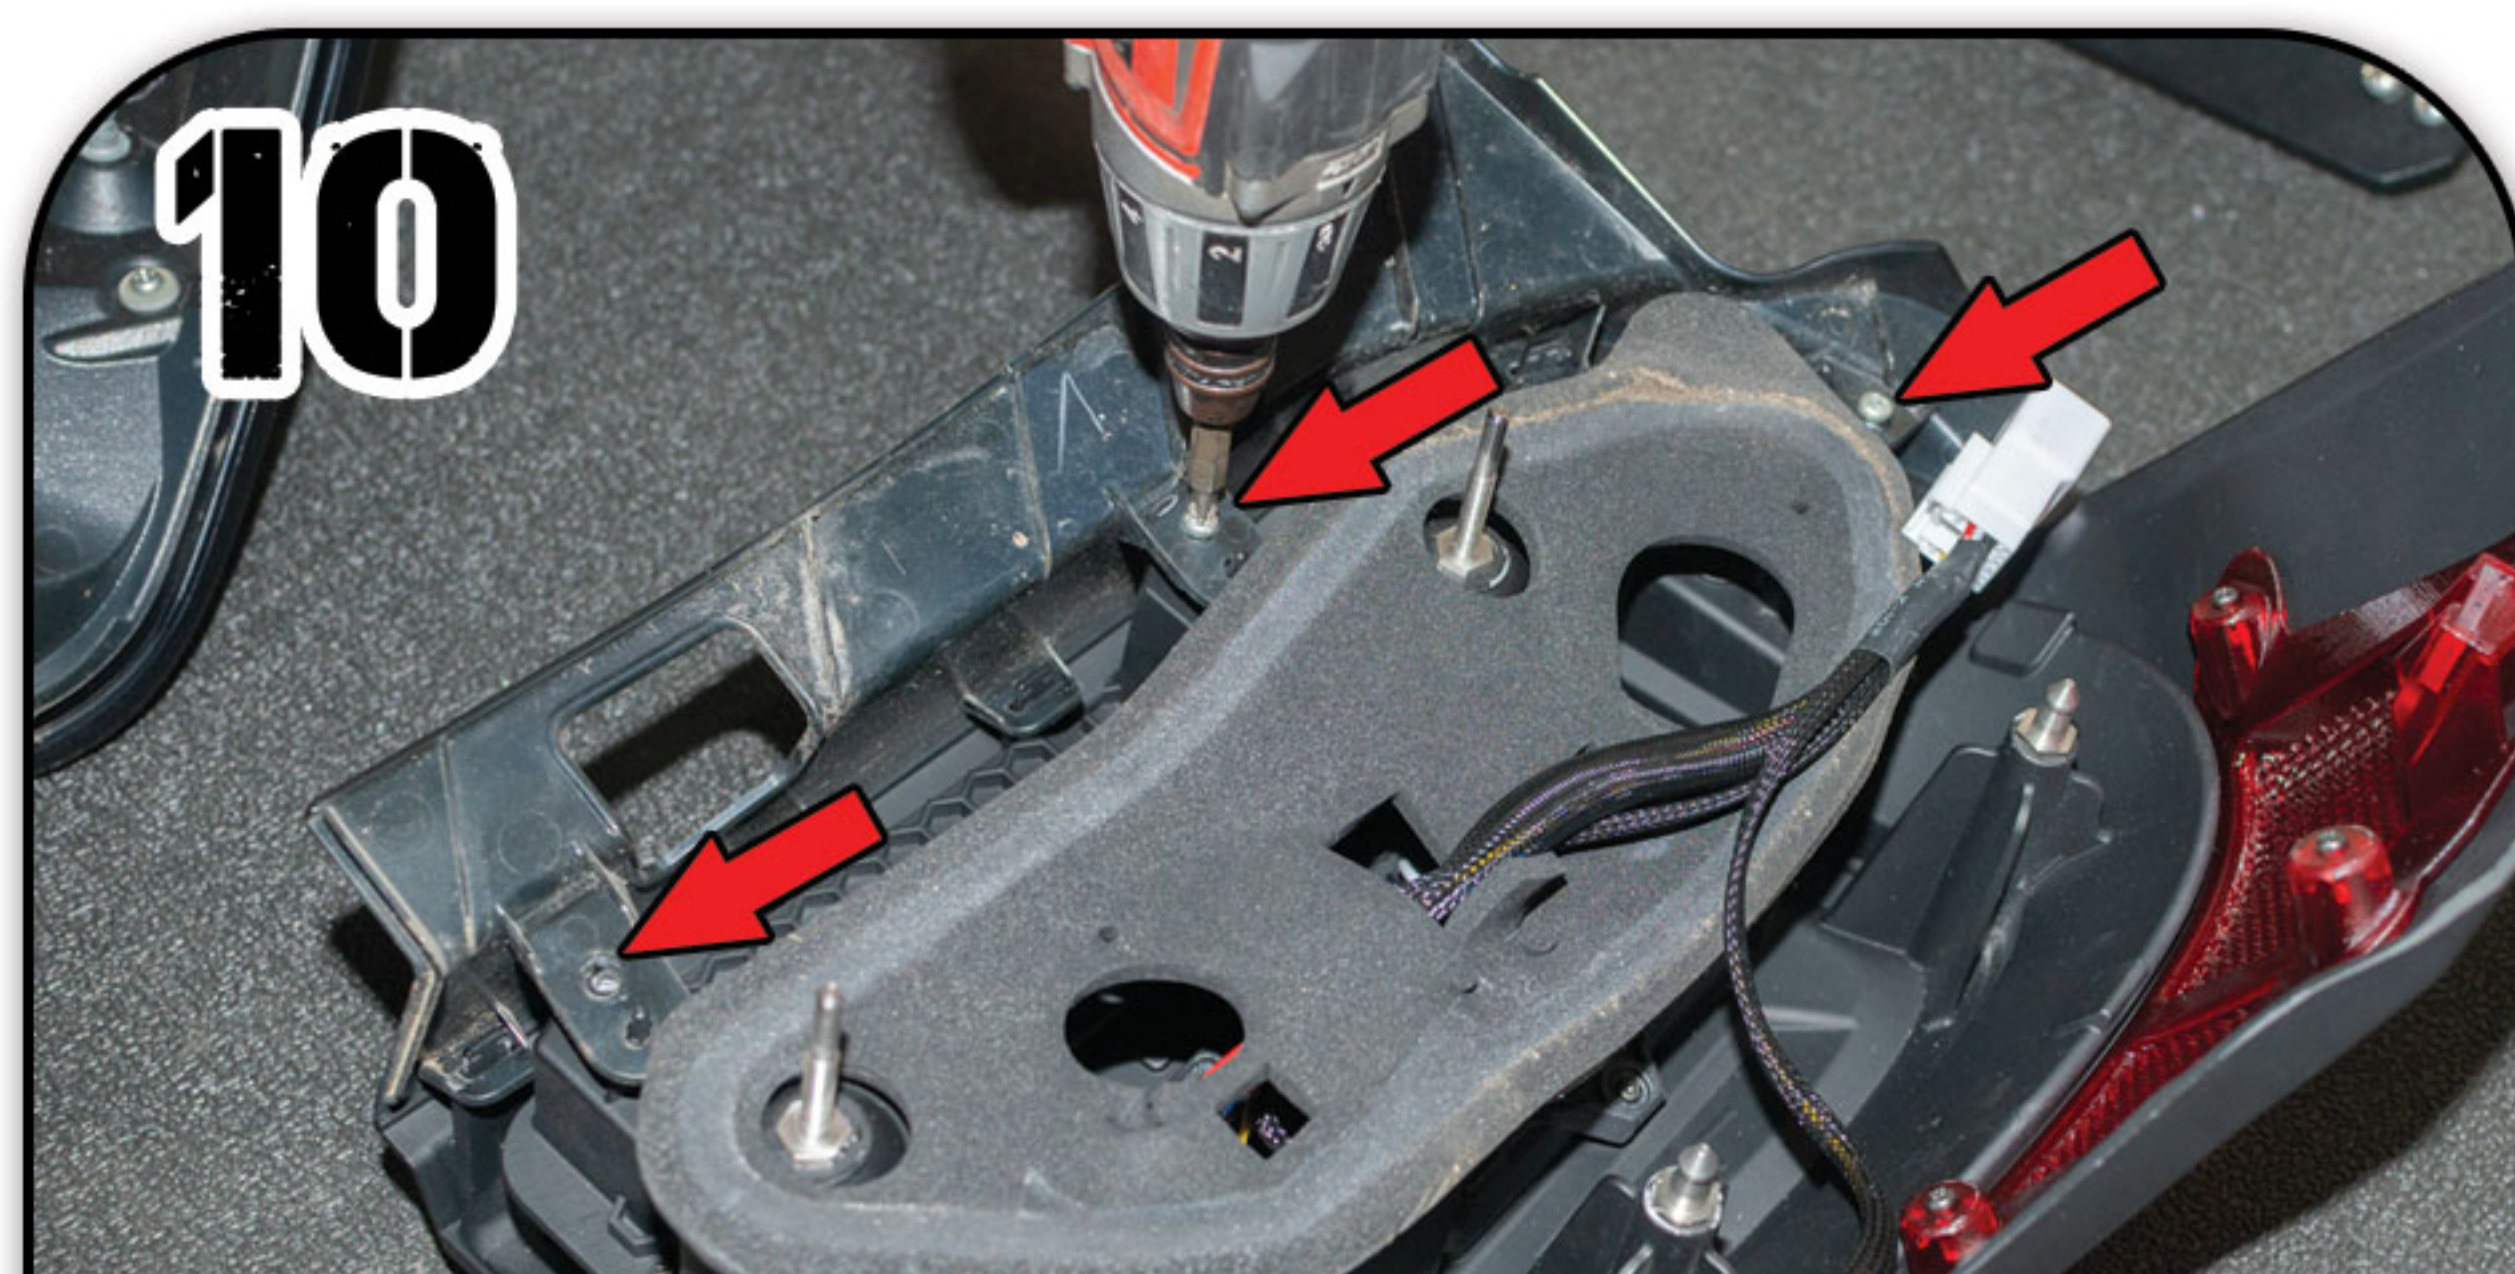

ATTACH BRACKET FROM OEM TAIL LIGHT ONTO  
NEW ORACLE TAIL LIGHT WITH THE {3} PHILLIPS SCREWS.



WHILE INSTALLING NEW ORACLE TAIL LIGHT, MAKE SURE  
ALL CLIPS ARE ENGAGED.



PRESS FIRMLY ON TAIL LIGHT TO INSTALL, MAKING SURE  
ALL CLIPS ARE ENGAGED.



ATTACHED SUPPLIED RESISTOR TO CHASSIS AT THIS  
LOCATION. PLUG IN RESISTOR CONNECTOR.



PLUG IN ORACLE TAIL LIGHT HARNESS TO GREY PLUG WITH  
YELLOW, GREEN, BLUE, RED & WHITE WIRES.



RE-INSTALL THE {2} TWO 10 MM NUTS & TIGHTEN DOWN.



ONCE ALL STEPS ARE COMPLETE, RE-INSTALL REAR INTERIOR  
PANEL. REPEAT STEPS 1-16 ON THE OTHER TAIL LIGHT.