

DEUCE LED TAIL LIGHTS

(2016-2023 TACOMA) 

INSTALLATION INSTRUCTIONS

CONTENTS

(1) LH Tail Light
(1) RH Tail Light

TOOLS REQUIRED


10mm Socket
Ratchet

STEP 1



Lower the vehicle tail gate. Remove (2) 10mm bolts from the inside of the tail light housing.

STEP 2

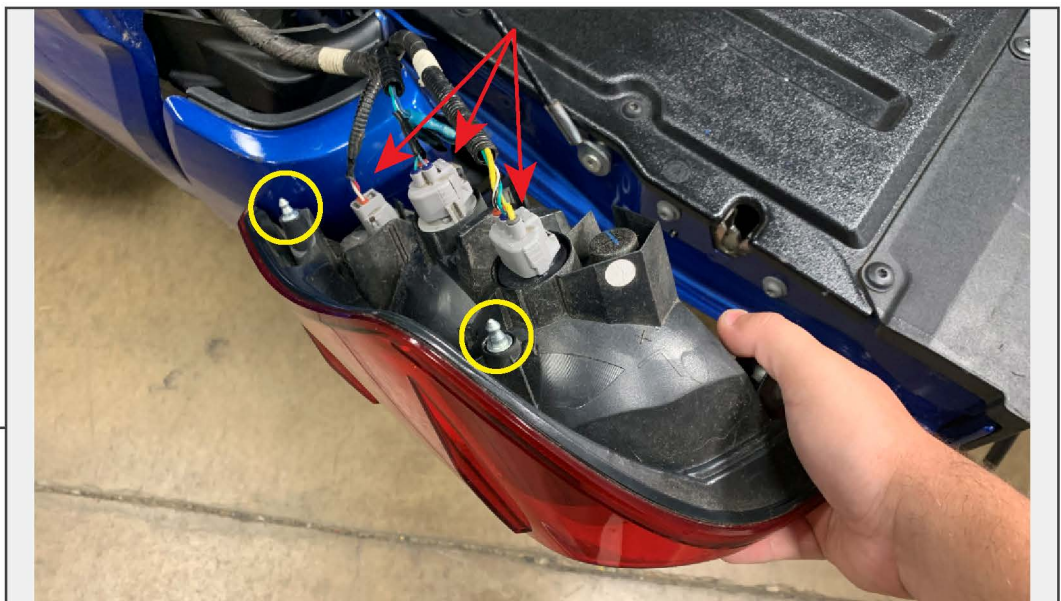

Firmly pull the tail light away from the vehicle to dislodge the (2) mounting studs. Twist each light socket to remove the harness and socket from the tail light assembly.

STEP 3




Remove the light bulbs from each light socket. Plug in the LED tail light harnesses into the corresponding connector in place of the original light bulb.

NOTE: The tail lights are sensitive to polarity. While connecting the harnesses, ensure to test tail light for proper functionality. See last page for troubleshooting.

STEP 4



Secure the tail light sockets into the tail light, and twist to lock into place.

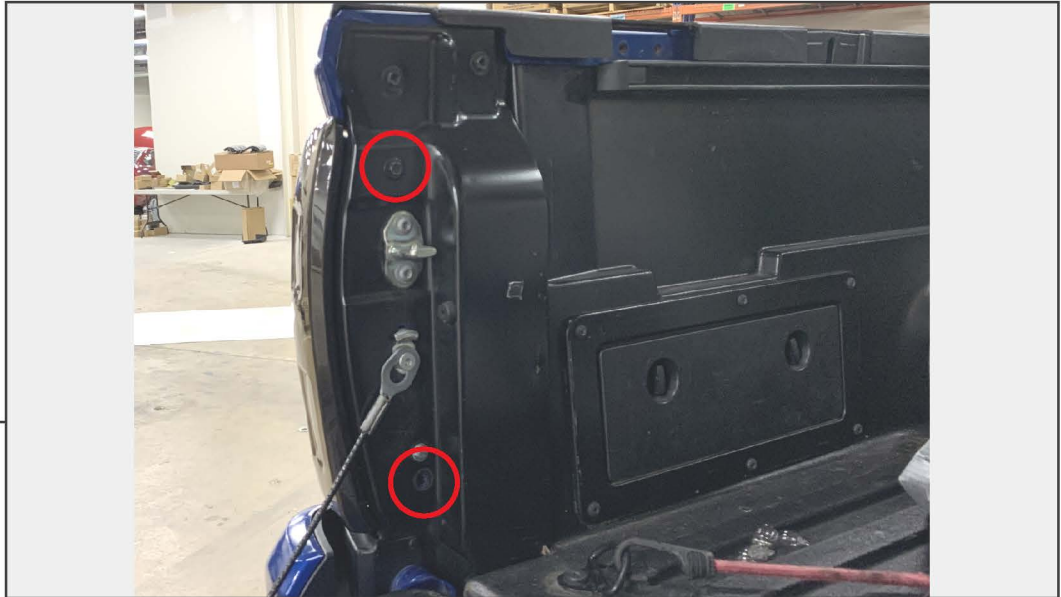

STEP 5

Install the new LED tail light using the (2) original 10mm bolts.




STEP 6

Repeat steps 1-5 to the opposite side tail light. See following page for troubleshooting.

Installation is now complete.

Troubleshooting

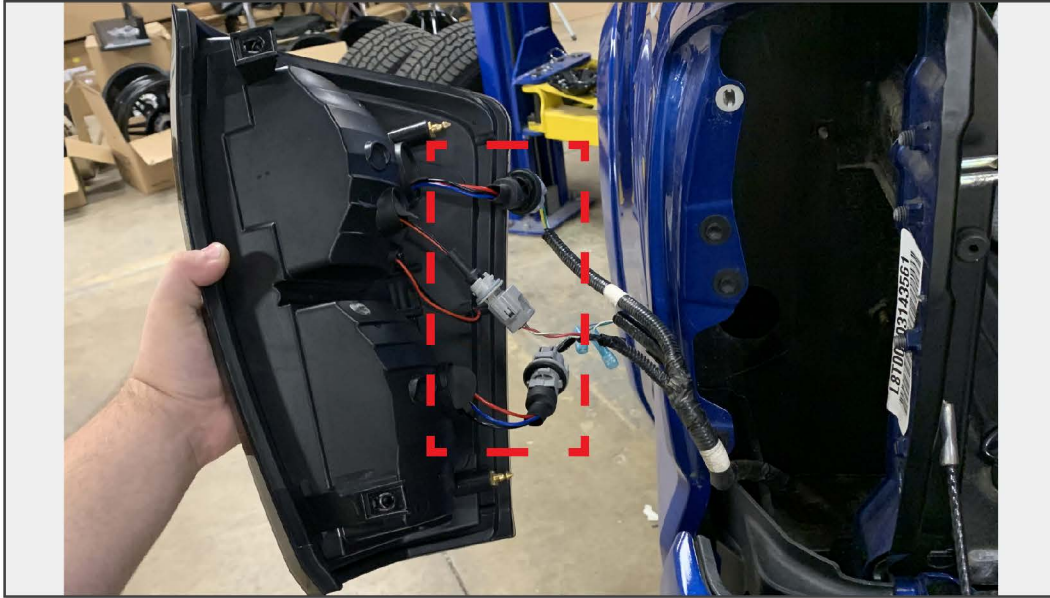

The LED tail lights are sensitive to polarity. If the polarity is incorrect, the tail lights will not function correctly.

In case of the following issues, reference the following to corrections:

All vehicle tail lights flash with turn signals: Disconnect the top LED tail light harness from light socket, and plug into the LED tail light connector into the light socket in the opposite direction.

Backup/Reverse Lights do not work: Disconnect the middle LED tail light harness from light socket, and plug into the LED tail light connector into the light socket in the opposite direction.

Brake Lights Not Functional/Third Brake Light Powers on with Parking Lights: Disconnect the lower LED tail light harness from light socket, and plug into the LED tail light connector into the light socket in the opposite direction.