





◆ WIRING HARNESS CONNECTORS

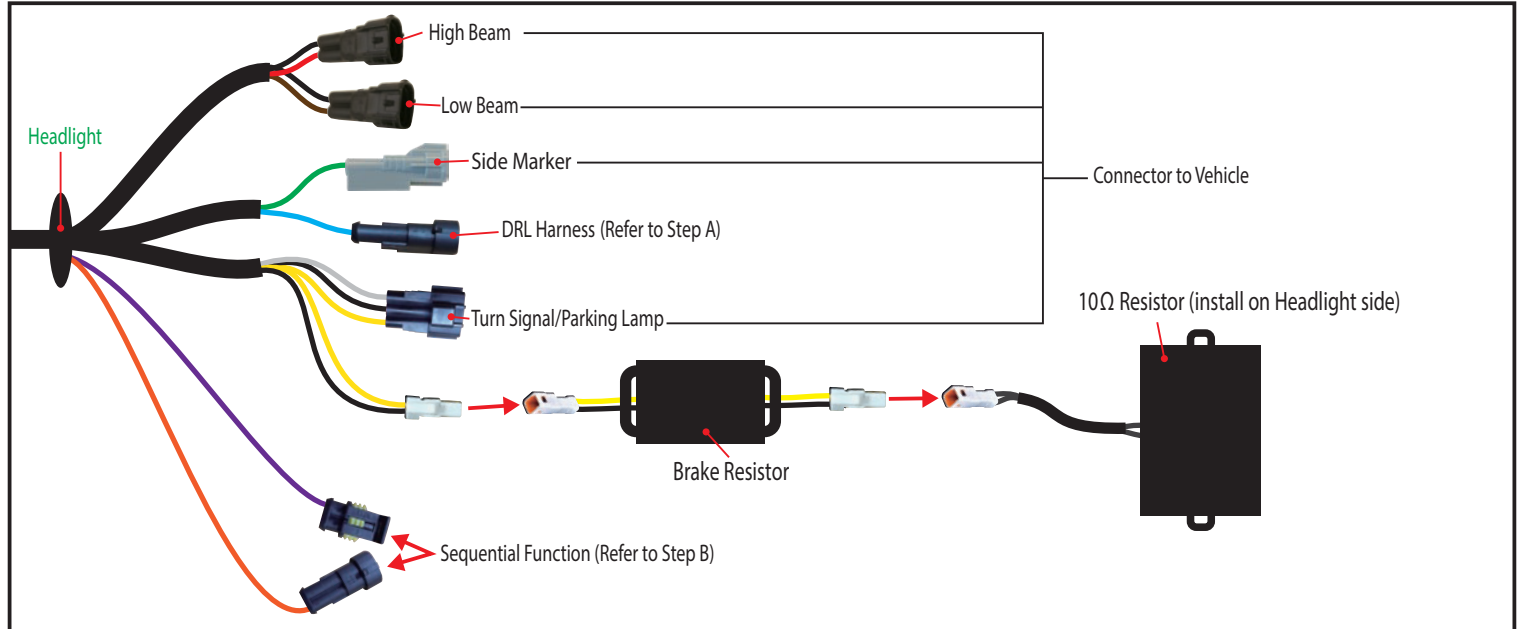

[A] Connect DRL fuse harness to the lights, and then insert the fuse into the fuse box.

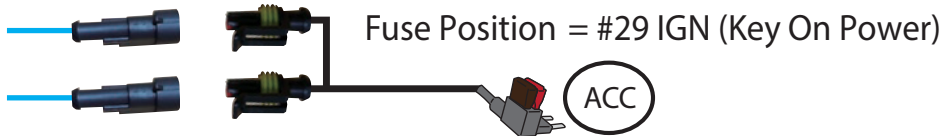

[B] How to Switch the Sequential Mode

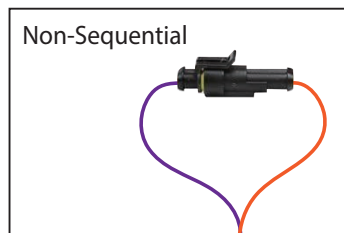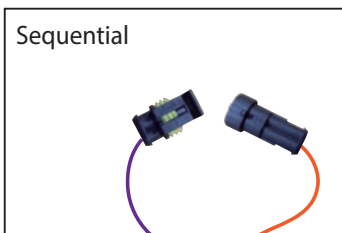

- **Sequential** → Unplug the Connectors
- **Non-Sequential** → Plug the Connectors

◆ Go through all modes to confirm that all light functions work

