



HD ROCK SLIDERS

(2021+ BRONCO - 2 DOOR)

INSTALLATION INSTRUCTIONS

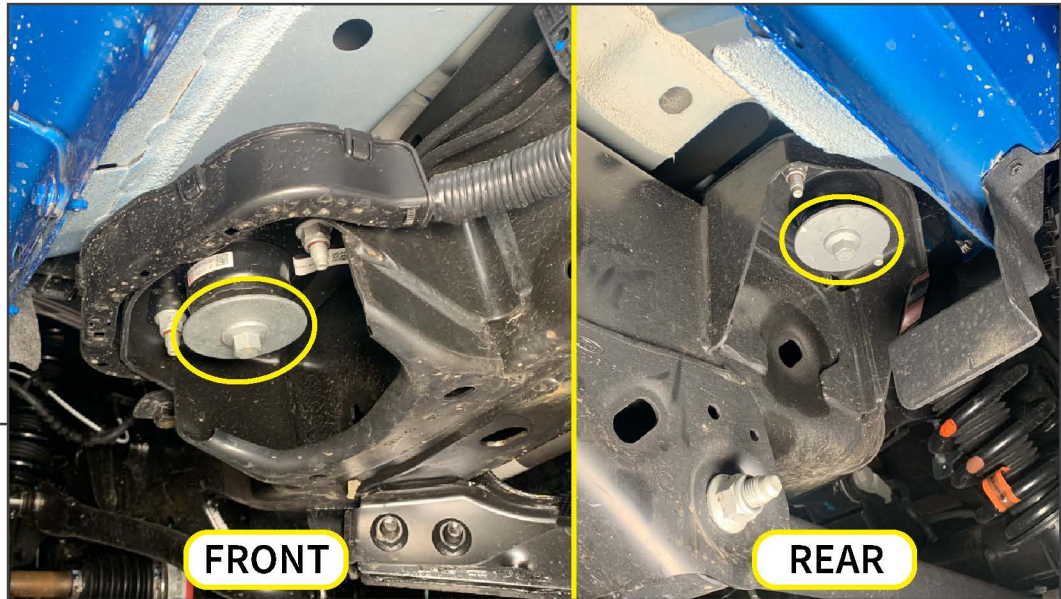
CONTENTS

- (1) LH Rock Slider
- (1) RH Rock Slider
- (1) LH Front Bracket - DF
- (1) LH Rear Bracket - DR
- (1) RH Front Bracket - PF
- (1) RH Rear Bracket - PR
- (8) M10x1.50 x 35mm Bolts
- (16) M10 Flat Washers
- (8) M10 Lock Nuts

TOOLS REQUIRED

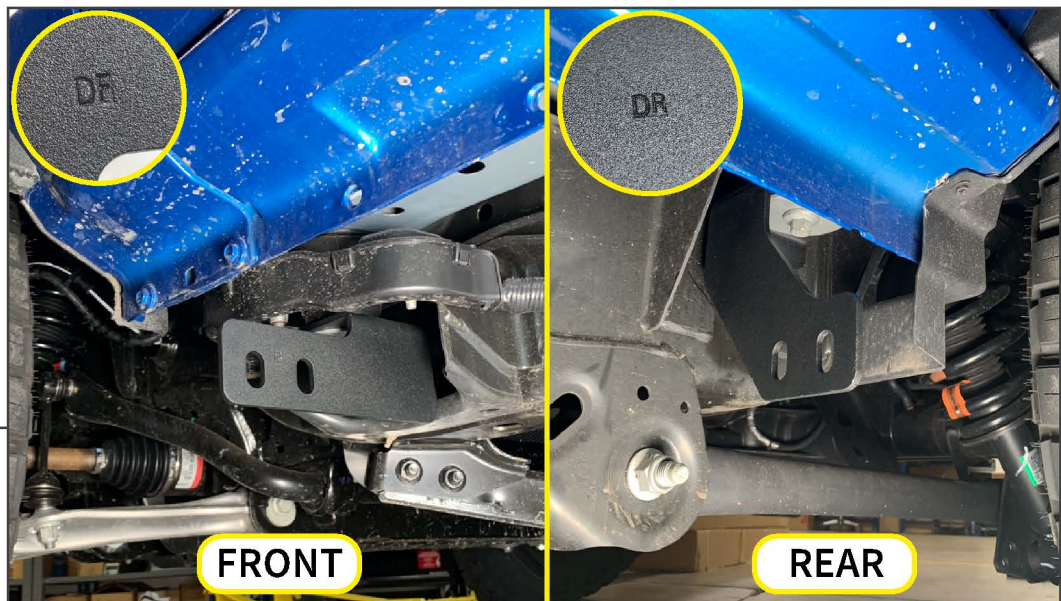
- 15mm, 16mm, 17mm Sockets/
Wrenches
- Ratchet

SKU # FB15250

STEP 1

Locate the (2) body mounts on the vehicle. Remove the (1) 15mm bolt per body mount.

Note: It is recommended to use heat on the bolts prior to removal to prevent bolt and bushing damage. *Remove body mount bolts from one side of the vehicle at a time.

STEP 2

With the body mount bolts removed, align the appropriate mounting bracket to each body mount. Re-install the body mount bolt hand tight to hold each bracket in place.

Note: Mounting brackets are stamped with identification label for each suitable location, see contents list.

**STEP 3**

With assistance, align the rock slider to the mounting brackets. Secure the rock slider using (4) M10 x 35mm bolts, (8) M10 flat washers, and (4) M10 lock nuts.

**STEP 4**

Tighten the body mount bolts to secure the rock slider to the vehicle (Torque to 85 ft. lbs). Repeat steps 1-5 to the opposite side of the vehicle.

Installation is now complete.