



HOOD LIFT SUPPORTS

(2021+ BRONCO)

INSTALLATION INSTRUCTIONS

CONTENTS

- (2) Gas Shock Absorbers
- (1) LH Lower Bracket
- (1) RH Lower Bracket
- (2) Hood Ball Studs
- (2) Flat Washers
- (2) Threaded Plates

TOOLS REQUIRED

- 12mm Deep Socket
- 15mm Socket
- Ratchet

STEP 1

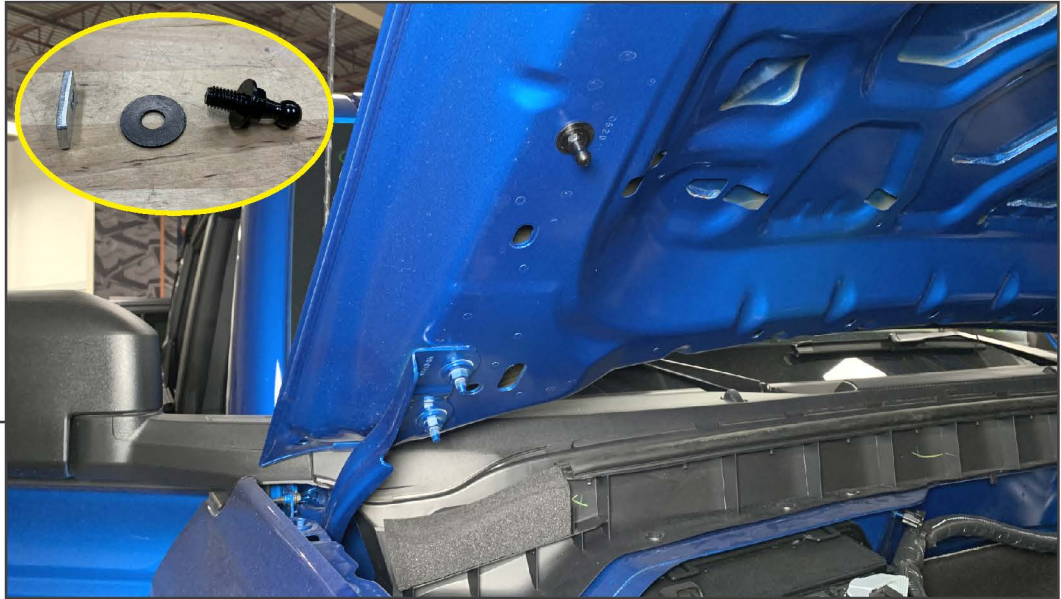


Open the vehicle hood. Remove (1) 15mm bolt from behind the vehicle fender.

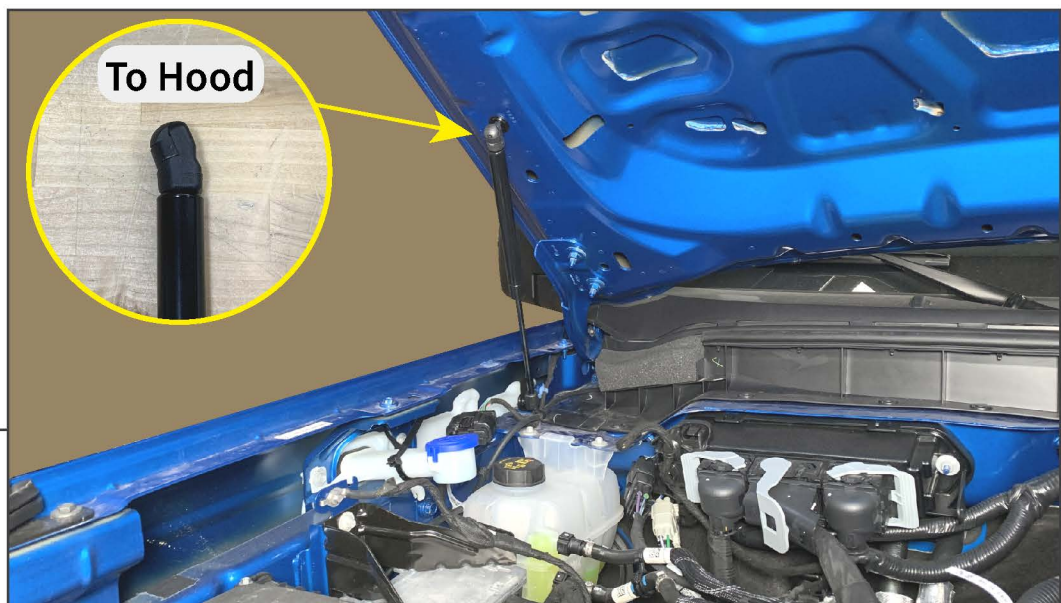
STEP 2



Install the lower bracket to the vehicle using the original 15mm bolt. Ensure the ball stud is facing towards the engine bay. Tighten until secure.

**STEP 3**

Assemble (1) hood ball stud with (1) flat washer and (1) threaded plate. Install the threaded nut onto the stud halfway. Angle the stud assembly to allow the threaded plate under the hood skin. Tighten the stud down to lock the stud assembly into place using a 12mm deep socket.

**STEP 4**

Identify the gas shock absorber, note the top mount is angled. Top mount secures to hood ball stud.

Press the gas shock absorber onto the lower bracket and hood ball stud until an audible click is heard confirming proper engagement.



STEP 5

Repeat steps 1-4 to the opposite side of the vehicle.

Installation is now complete.