



PARACORD GRAB HANDLE

(2021+ BRONCO)

INSTALLATION INSTRUCTIONS


CONTENTS

(2) Paracord Grab Handles

TOOLS REQUIRED

8mm Socket
Ratchet

STEP 1

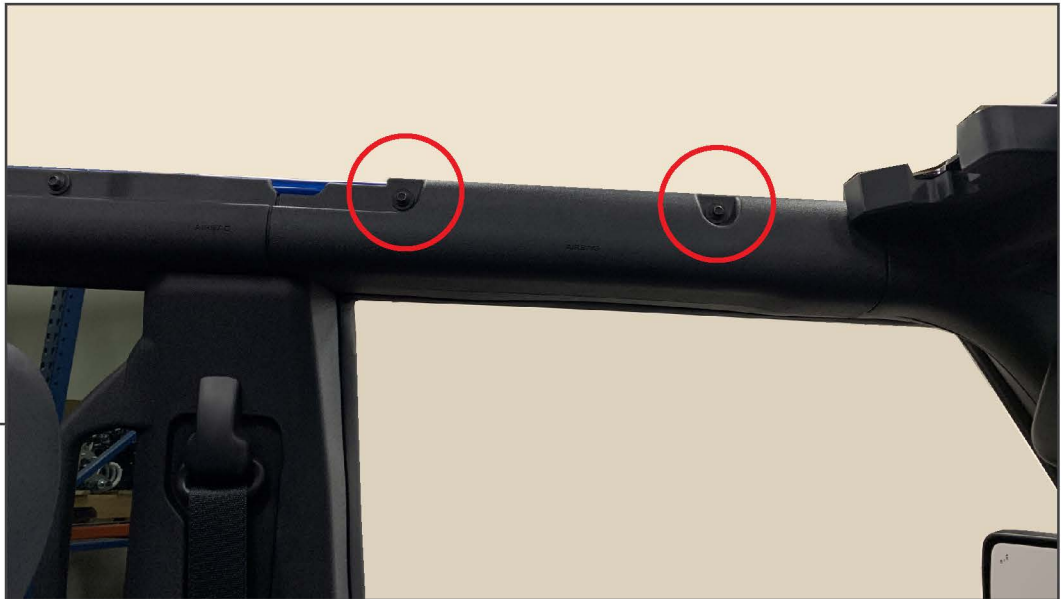

Along the roll bar, remove the (2) 8mm bolts above the vehicle door.

STEP 2



Place the grab handle to the bolt holes, and secure into place using the original (2) 8mm bolts. Tighten until secure.

Installation is now complete.