



# PARACORD GRAB HANDLE

(2021+ BRONCO)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---


(2) Paracord Grab Handles

### TOOLS REQUIRED

---

8mm Socket  
Ratchet

**STEP 1**

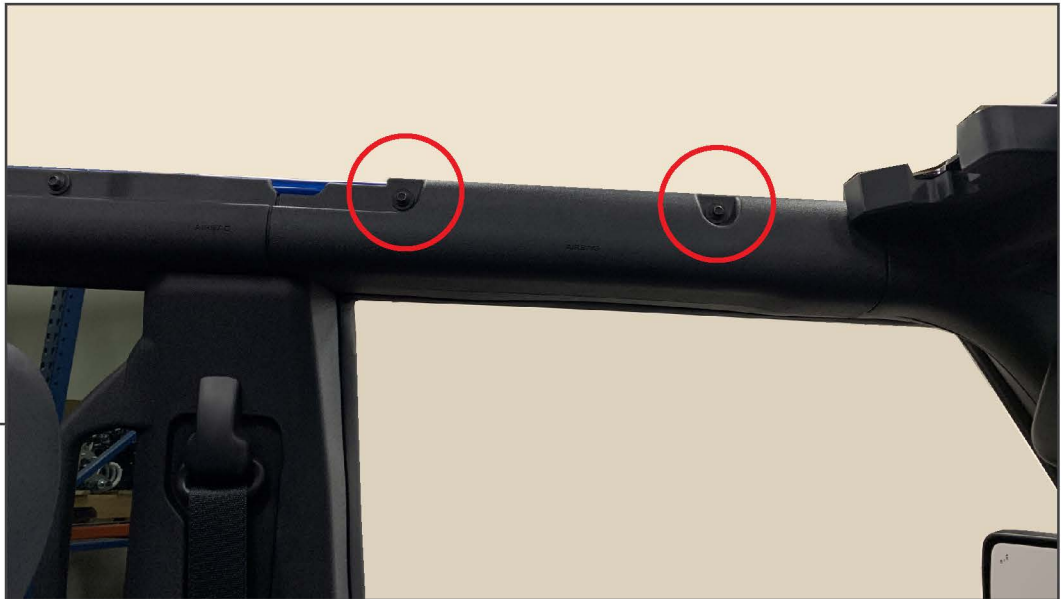

Along the roll bar, remove the (2) 8mm bolts above the vehicle door.

**STEP 2**



Place the grab handle to the bolt holes, and secure into place using the original (2) 8mm bolts. Tighten until secure.

Installation is now complete.