



FULL LENGTH SUN SHADE

(2021+ BRONCO - 4 DOOR)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Sun Shade
- (8) Thumb Screws
- (2) Plastic Clips
- (10) Elastic Bands

TOOLS REQUIRED

N/A

STEP 1




Lay out and familiarize the sun shade. The (2) 45 degree corners fit to the rear vehicle roll bar.

STEP 2



Secure the front corners of the sun shade to the vehicle using (2) plastic clips and (2) elastic bands per side.

Secure the sun shade to the windshield bar by attaching the (2) straps to the center vehicle top mounts.

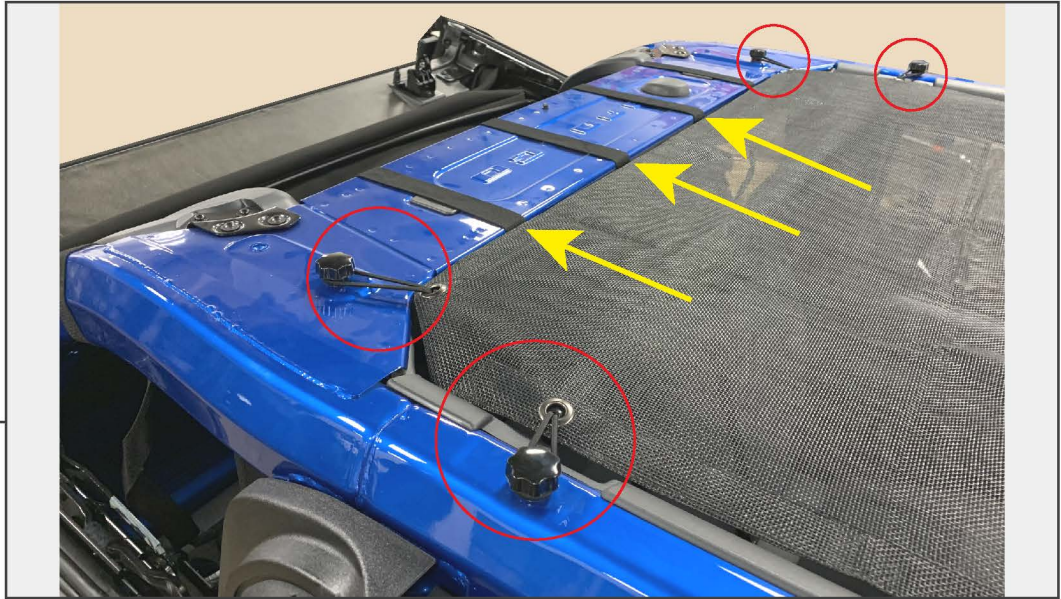

STEP 3

Install (4) thumb screws into the threaded holes in the vehicle roll bar. Once fully threaded in, secure the rear corners of the sun shade using (4) elastic bands.

Secure the (3) attached bands around the rear roll bar.



STEP 4

Install (4) thumb screws into the threaded holes along the sides of the vehicle roll bar. Once fully threaded in, secure the sides of the sun shade to the roll bar using (4) elastic bands.



STEP 5

Installation is now complete.