



# CARGO NET

(2021+ BRONCO)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS


---

- (1) Cargo Net
- (2) Clip Retainers

### TOOLS REQUIRED

---

- T-30 Torx Socket
- Ratchet

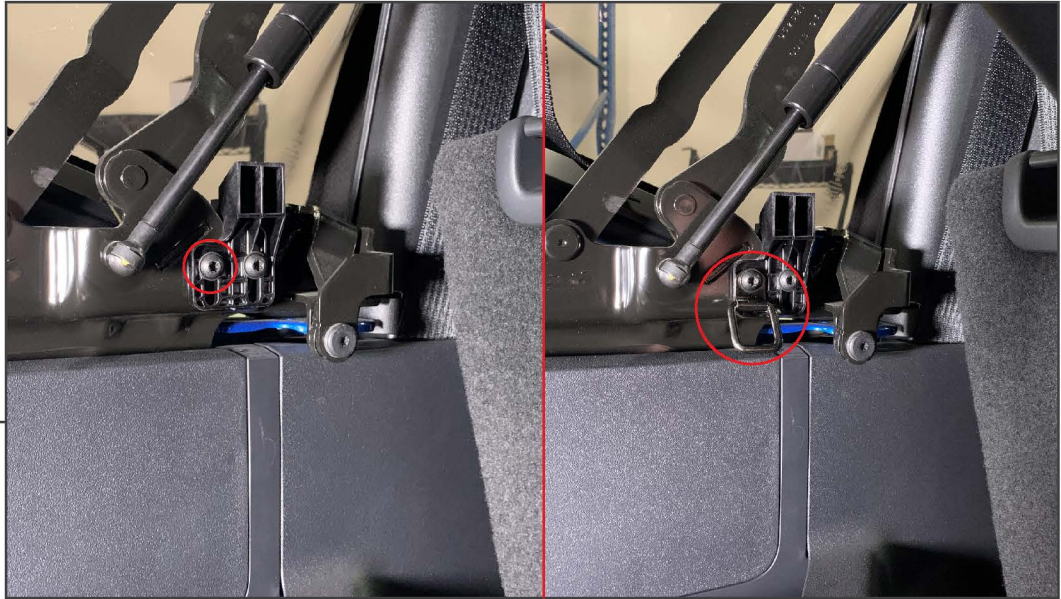
**STEP 1**

Remove (1) T-30 Torx bolt from the soft top bracketry, or similar mounting hardware. Install (1) onto the original bolt, and re-install the bolt into the vehicle.

Repeat this step for the opposite side of the vehicle.


**STEP 2**

Clip the (3) plastic clips into the anchor points in the rear seat back rests.

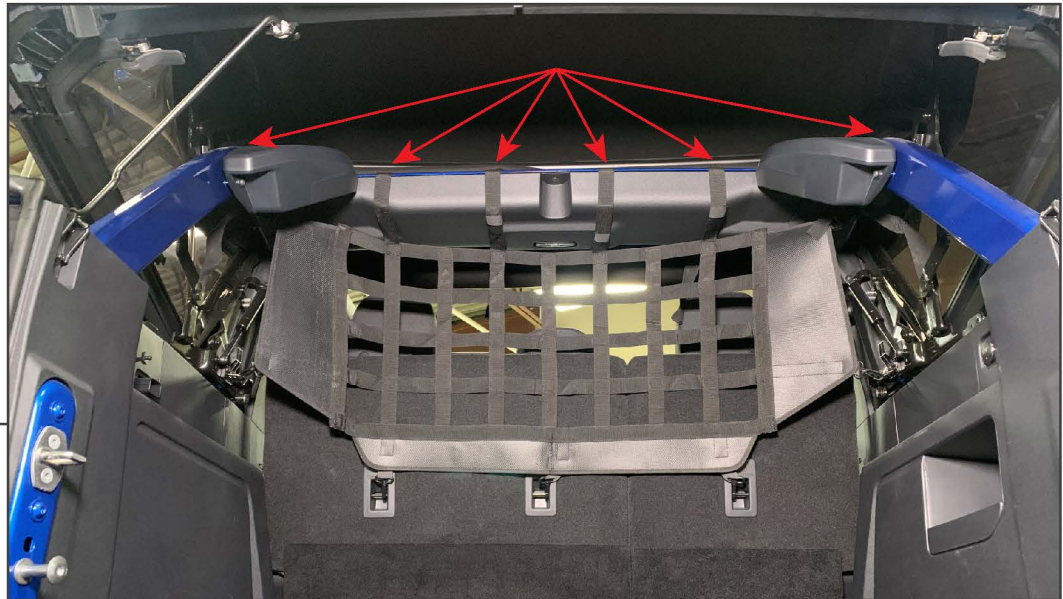

**STEP 3**

Secure the top of the cargo net to the roll bar using the (6) attached straps.

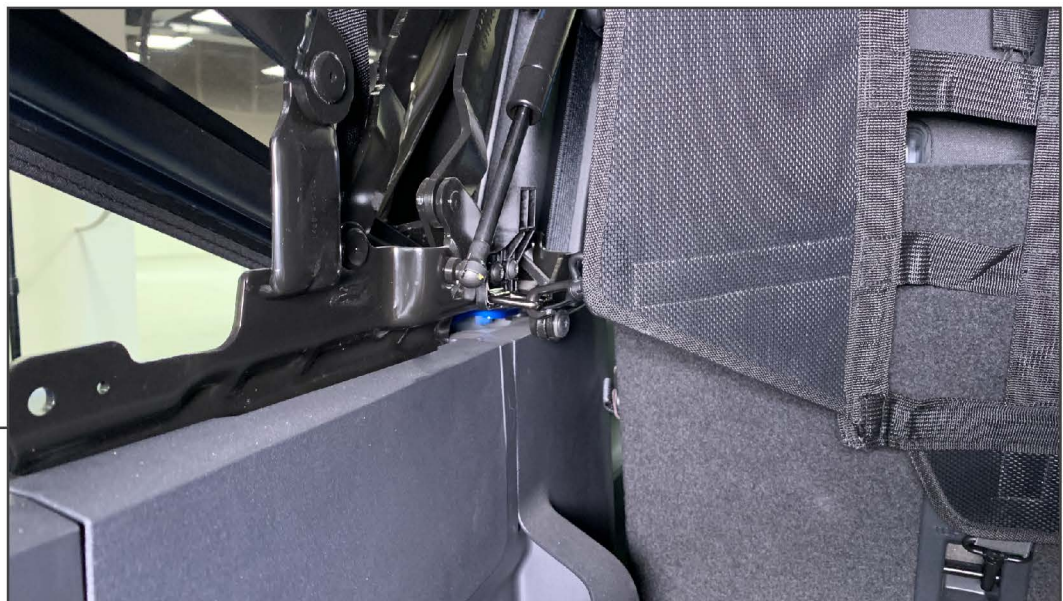

**STEP 4**

Clip the side plastic clip on the cargo net to the previously installed clip retainer on both sides of the vehicle. Tighten the (6) mounting straps to the roll bar.



---

**STEP 5**

Installation is now complete.