



CARGO MAT WITH USA FLAG

(2021+ BRONCO)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Cargo Mat

TOOLS REQUIRED

Isopropyl Alcohol
Microfiber Cloth

STEP 1

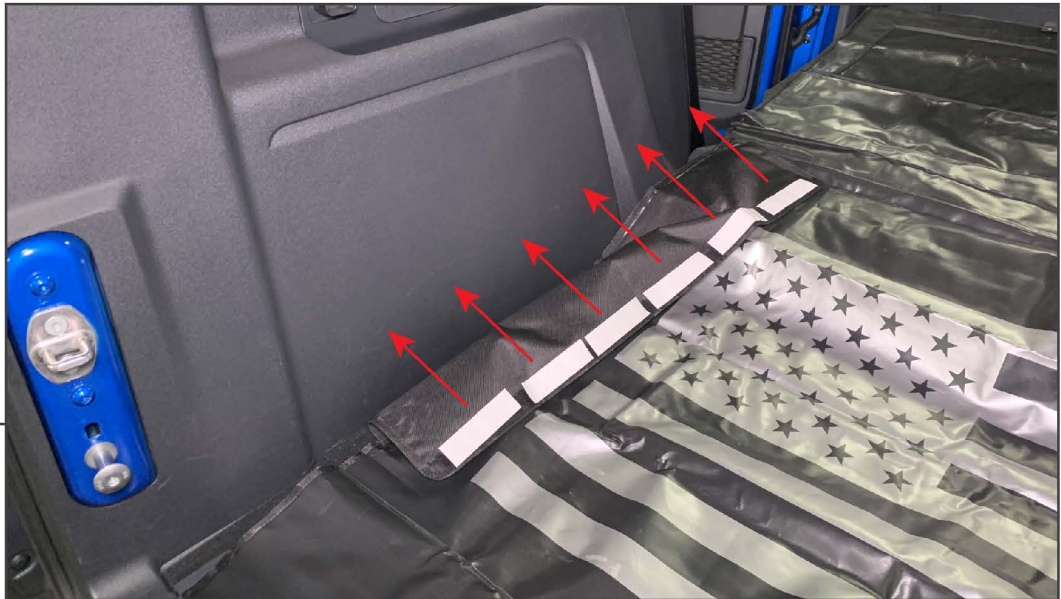


Fold the rear seats forwards, and place the cargo mat along the vehicle cargo area and rear seat backs.

STEP 2



Secure the front portion of the cargo mat by pulling the attached straps around the head rests, and tuck the buckle away from the passenger compartment.

**STEP 3**

Clean the sides of the cargo area using isopropyl alcohol and a microfiber cloth. Once dry, peel the tape backing from the Velcro strips, and adhere to the plastic cargo area panels.

**STEP 4**

Use the attached Velcro to secure the remaining area of the cargo mat to the vehicle carpet/seat backs.

Installation is now complete.