



THIRD BRAKE LIGHT BRACKET WITH USA FLAG

(2021+ BRONCO)

INSTALLATION INSTRUCTIONS

CONTENTS

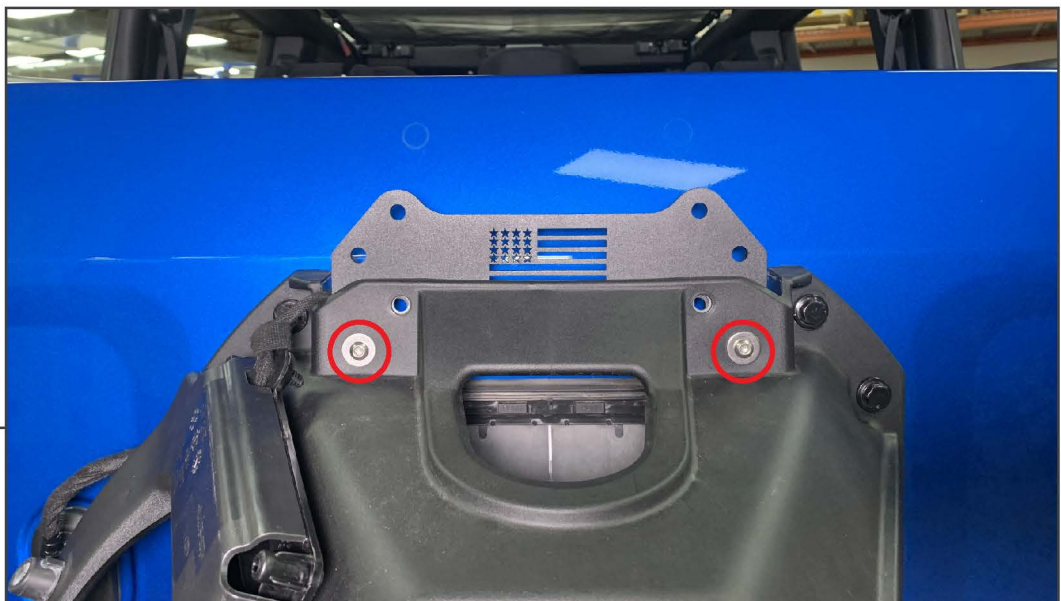
- (1) Third Brake Light Bracket
- (2) M6x1.00 x 20mm Allen Bolts
- (6) M6 Flat Washers
- (2) M6 Nuts
- (2) #12 x 25mm Allen Screws

TOOLS REQUIRED

- T-30 Torx Key/Socket
- 4mm Allen Key/Socket
- Ratchet

**STEP 1**

Remove the spare tire from the vehicle. Remove (4) T-30 Torx screws from the third brake light assembly. Allow the third brake light assembly to rest to the side.

**STEP 2**

Secure the third brake light bracket to the tire carrier using (2) M6 x 20mm Allen bolts, (4) M6 flat washers, and (2) M6 nuts. Tighten until secure.

**STEP 3**

Align and secure the third brake light assembly to the previously installed bracket using (2) #12 screws and (2) flat washers through the tire carrier. Secure the upper (4) holes using the original T-30 Torx screws.

**STEP 4**

Installation is now complete.