



ABS SIDE STEPS

(2021+ BRONCO - 4 DOOR)

INSTALLATION INSTRUCTIONS

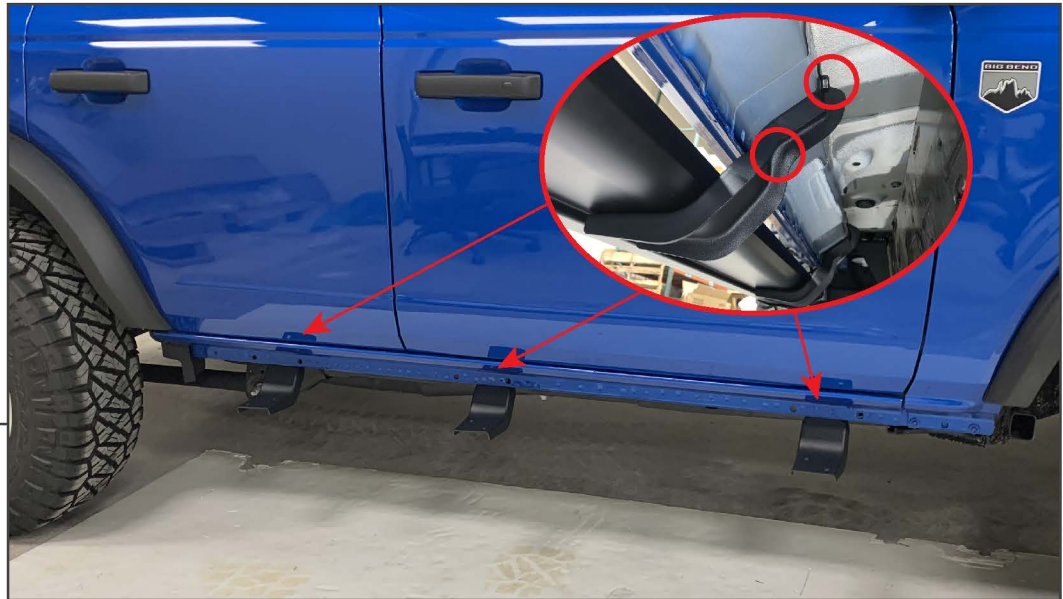
CONTENTS

- (2) Side Steps
- (1) LH Front Bracket (FL)
- (1) RH Front Bracket (FR)
- (1) LH Middle Bracket (ML)
- (1) RH Middle Bracket (MR)
- (1) LH Rear Bracket (RL)
- (1) RH Rear Bracket (RR)
- (12) M10x1.50 x 25mm Bolts
- (12) M10 Flat Washers
- (12) M6x1.00 x 20mm Combo Bolts

TOOLS REQUIRED

10mm, 16mm Sockets
Ratchet

SKU # FB17155
Edited: 05/06/2022

**STEP 1**

Using (6) M10x1.50 x 25mm bolts, (6) M10 flat washers, and (3) labeled mounting brackets, loosely secure the mounting brackets to the vehicle into the threaded holes in the vehicle rocker panel.

Note: See below for bracket identification:

FR	-	Front Right
MR	-	Middle Right
RR	-	Rear Right

**STEP 2**

Place the side step onto the mounting brackets, and secure using (2) M6x1.00 x 20mm combo bolts per bracket.

Note: Both included side steps are identical, use the labeled “L” and “R” markings to determine proper mounting holes.



STEP 3

Adjust the mounting bracket to the ideal mounting location within the brackets. Tighten all hardware until secure. Repeat steps 1-3 to the opposite side of the vehicle.

Installation is now complete.