



CLOTH SUN SHADE

(2021+ BRONCO)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Sun Shade
- (8) M8x1.25 Thumb Screws
- (2) Plastic Clips
- (10) Elastic Bands

TOOLS REQUIRED


N/A

STEP 1




Remove/retract the top on the vehicle following OEM specifications. Lay the sun shade out, and identify the front of the sun shade. When installed, the cloth portion will face upwards.

STEP 2

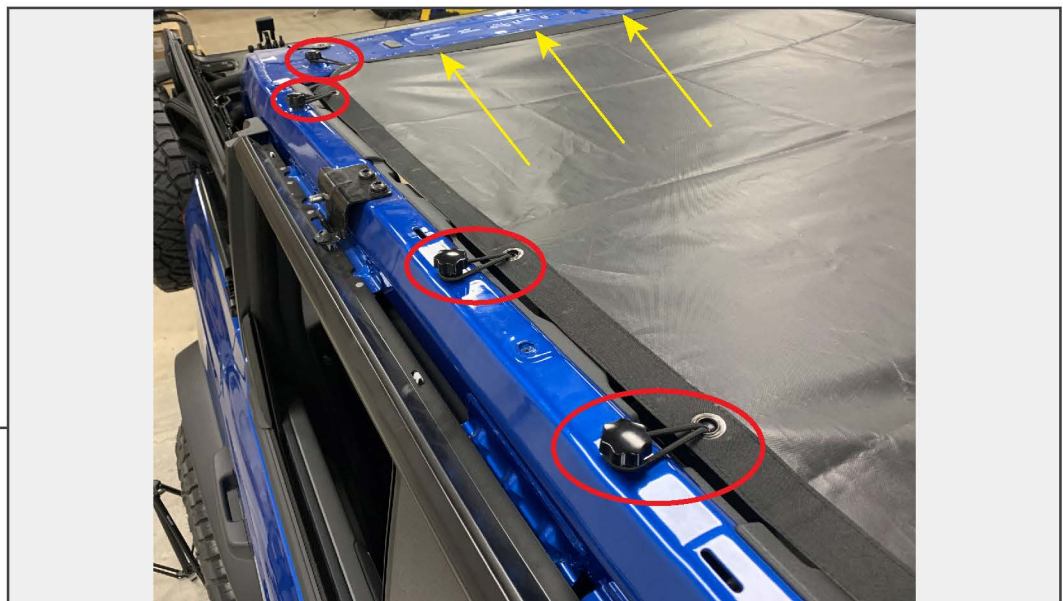

Align the sun shade to the vehicle. Install the (4) M8 thumb screws into the threaded holes in the roll bar on each side. Once threaded, secure the sun shade to the thumb screws using (4) elastic bands on each side.

Secure the rear of the sun shade to the rear roll bar using the (3) attached straps.

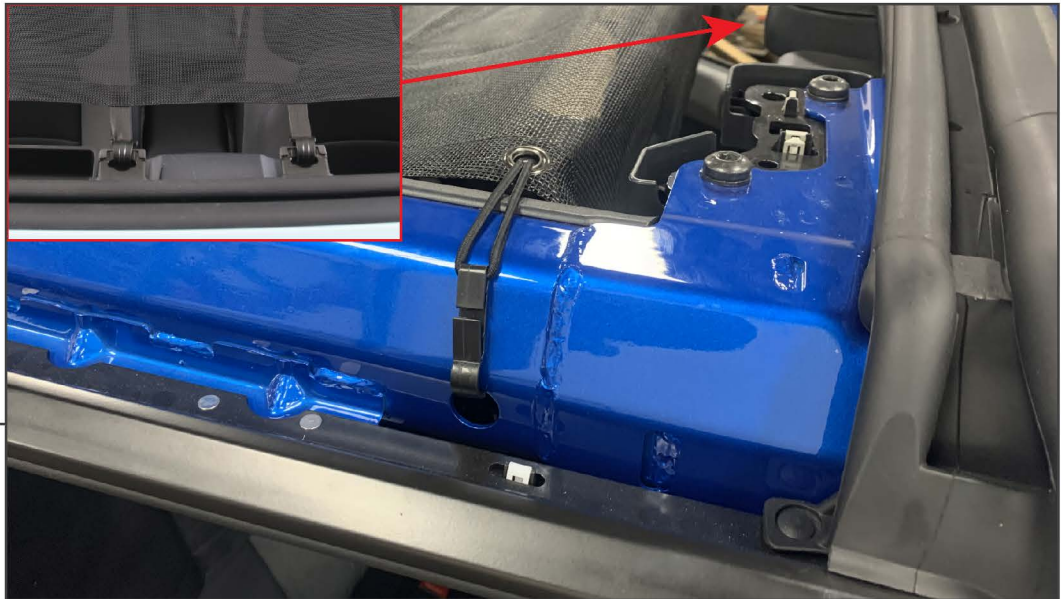

STEP 3

Secure the front of the sun shade to the windshield bar using (2) plastic clips and (2) elastic bands. Insert the elastic band through the cutout in the plastic clip, and then place the clip into the vehicle roll bar.

Secure the center mounting straps to the vehicle top mounting points on the windshield bar.



STEP 4

Installation is now complete.