



EXTERIOR DOOR TRIM

(2021+ BRONCO - 4 DOOR)


INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Front Door Trim
- (1) RH Front Door Trim
- (1) LH Rear Door Trim
- (1) RH Rear Door Trim
- (4) Adhesion Promoter Pads

TOOLS REQUIRED

N/A

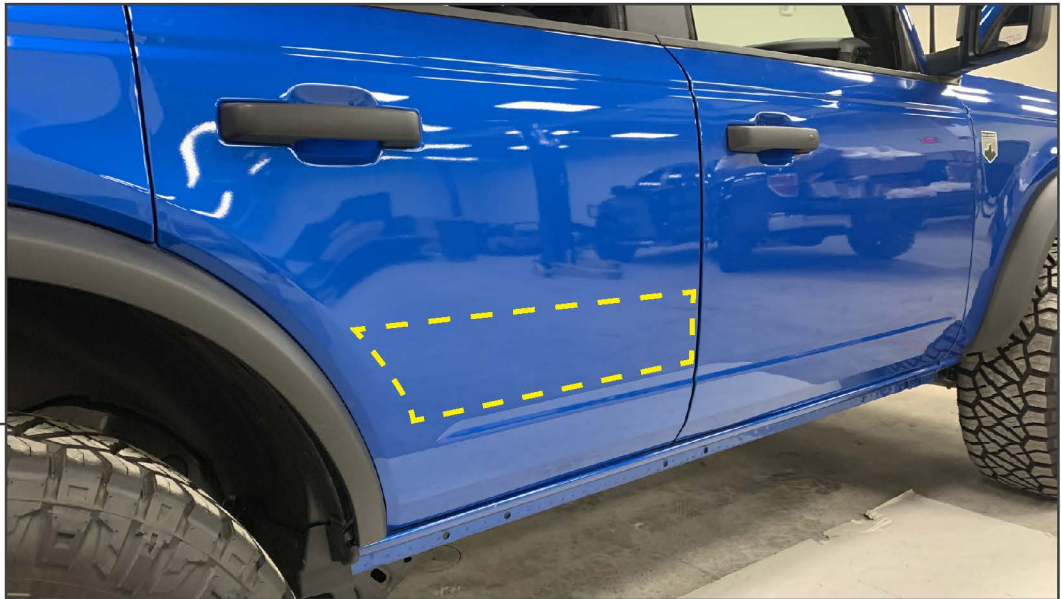

STEP 1

Using (1) adhesion promoter pad, clean the vehicle door at the indicated area. Allow the door to fully dry after cleaning.



STEP 2

Locate the indicated trim panel, and familiarize the panel fitment on the vehicle before removing the double sided tape backing. Once familiar with fitment, peel the red tape backing and adhere the trim panel to the vehicle. Firmly press the panel into the door to ensure proper adhesion.



STEP 3

Repeat steps 1-2 to the remaining trim panels.

Installation is now complete.