



ABS SIDE STEP BARS

(2021-2023+ BRONCO - 2 DOOR)


INSTALLATION INSTRUCTIONS

CONTENTS

- (2) Side Steps
- (1) LH Front Bracket (FL)
- (1) RH Front Bracket (FR)
- (1) LH Rear Bracket (RL)
- (1) RH Rear Bracket (RR)
- (8) M10x1.50 x 25mm Bolts
- (8) M10 Flat Washers
- (8) M6x1.00 x 20mm Combo Bolts

TOOLS REQUIRED

10mm, 16mm Sockets
Ratchet

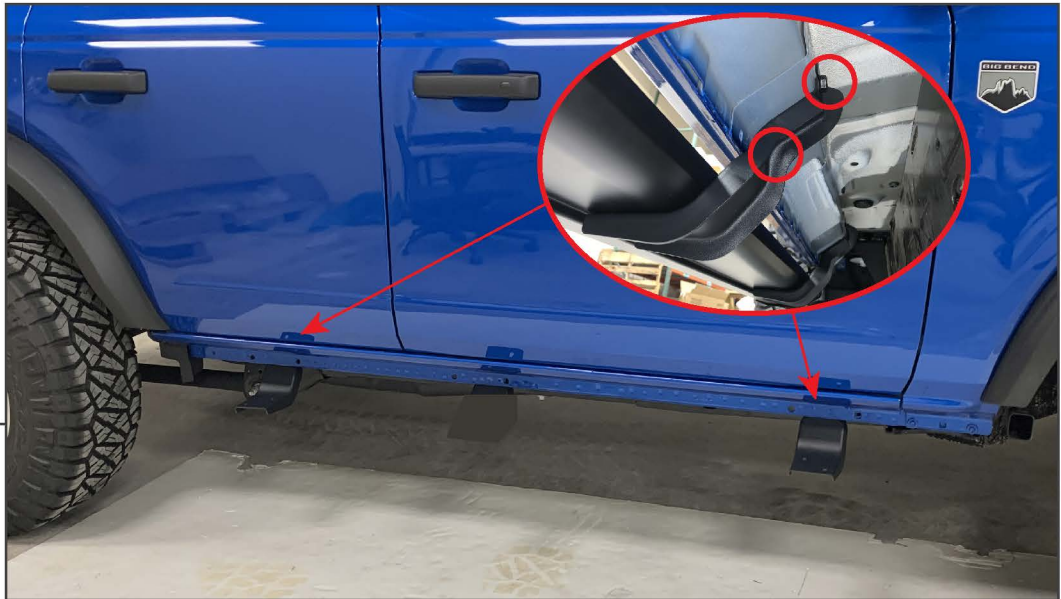

STEP 1

Using (4) M10x1.50 x 25mm bolts, (4) M10 flat washers, and (2) labeled mounting brackets, loosely secure the mounting brackets to the vehicle into the threaded holes in the vehicle rocker panel.

Note: See below for bracket identification:

FR	-	Front Right
RR	-	Rear Right



STEP 2

Place the side step onto the mounting brackets, and secure using (2) M6x1.00 x 20mm combo bolts per bracket.

Note: Both included side steps are identical, use the labeled “L” and “R” markings to determine proper mounting holes.



STEP 3

Adjust the mounting bracket to the ideal mounting location within the brackets. Tighten all hardware until secure. Repeat steps 1-3 to the opposite side of the vehicle.

Installation is now complete.