



# HOOD STRUT KIT

(2021-2022+ BRONCO)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS


---

- (2) Hood Struts
- (2) Hood Mounting Brackets
- (1) LH Fender Mounting Bracket
- (1) RH Fender Mounting Bracket
- (4) M8 Bolts
- (4) M8 Flat Washers
- (4) M8 Threaded Retainers

### TOOLS REQUIRED

---

- 10mm, 13mm Socket
- Ratchet

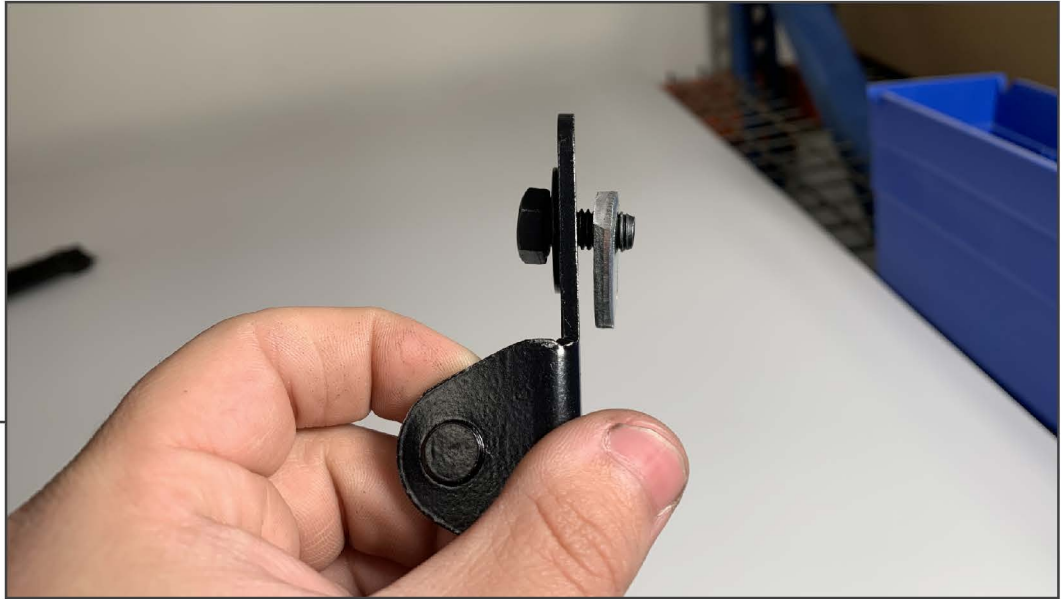

## STEP 1

Assemble (2) M8 bolts, (2) M8 flat washers, and (2) M8 threaded retainers to each hood mounting bracket.



## STEP 2

With the M8 retainers threaded to the bracket, insert the retainers into the holes in the vehicle hood. Once fully inserted, tighten the M8 hardware using a 13mm socket. Repeat this step for the remaining hood mounting bracket.

**Note:** Fitting the retainers is a tight fit to ensure proper engagement when tightening.



## STEP 3

Remove (1) 10mm bolt from behind the front fender accessory mount.



## STEP 4

Align the fender mounted bracket behind the front fender accessory mount, and secure into place using the original (1) 10mm bolt.

Repeat this step for the remaining fender mounting bracket.


## STEP 5



Install the hood strut into each bracket by pressing each end into the mount until the clip clicks into place. Repeat this step for the remaining hood strut.

**Note:** Ensure the strut is in the correct orientation for proper functionality.

## STEP 6

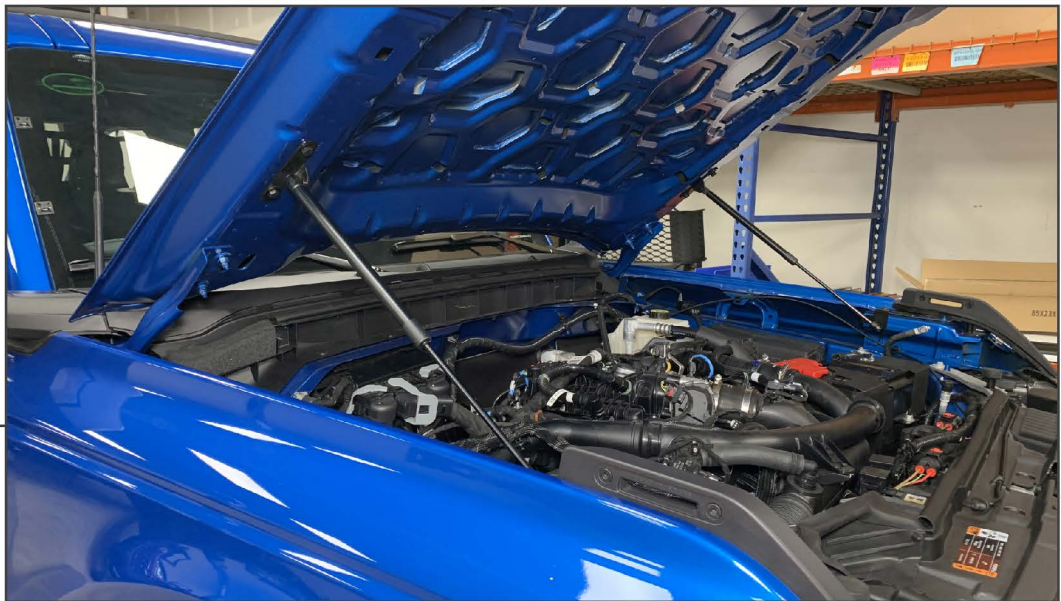

Installation is now complete.