



# HOOD DEFLECTOR

(2021-2022+ BRONCO)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) Hood Deflector
- (2) Adhesion Promoter Pads

### TOOLS REQUIRED


---

N/A



## STEP 1

Clean the vehicle hood using the provided (2) adhesion promoter pads and allow the hood to fully dry. Test fit the hood deflector to the vehicle to familiarize fitment.

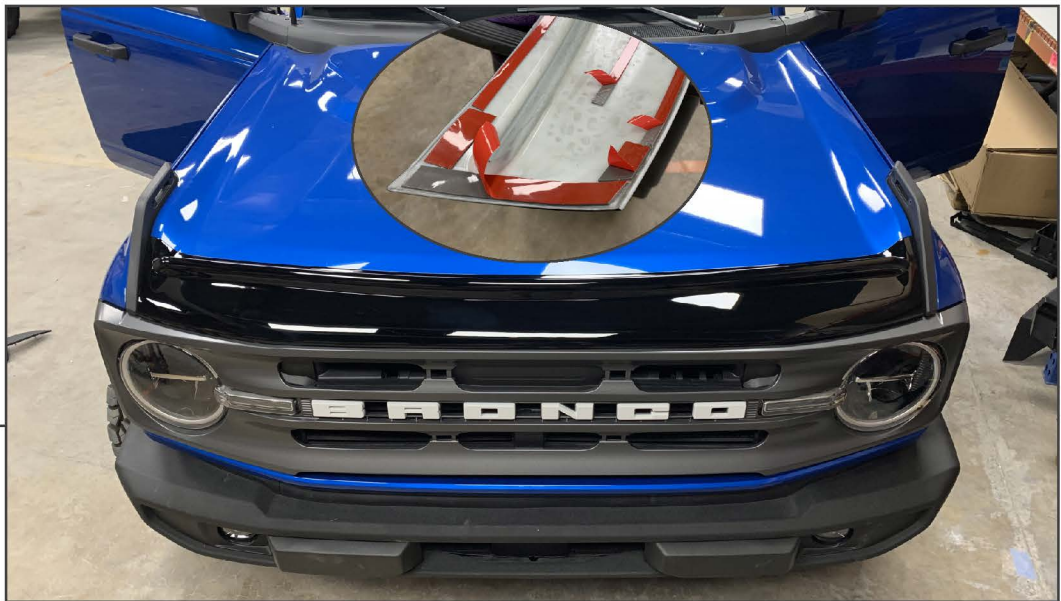

## STEP 2

Once familiar with the hood deflector fitment, peel the red tape backing from the double sided tape. Lightly place the hood deflector to the vehicle until the panel is properly aligned. Once aligned, firmly press all areas of the hood deflector to the vehicle hood to ensure proper adhesion.



---

## STEP 3

Installation is now complete.