



HOOD SCOOP

(2021-2022+ BRONCO)


INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Hood Scoop
- (2) Adhesion Promoter Pads

TOOLS REQUIRED

N/A

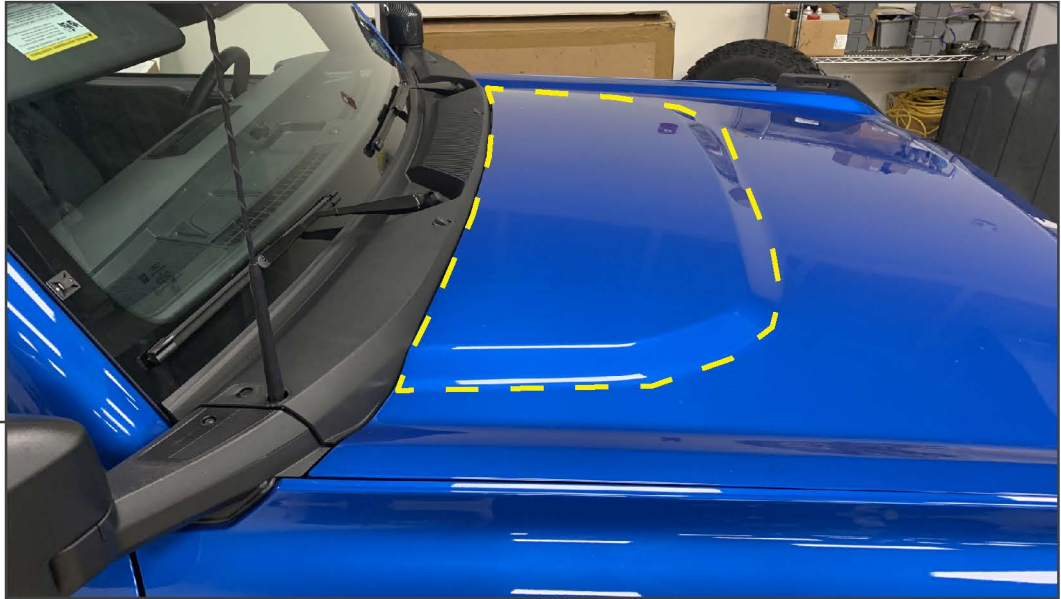

STEP 1

Clean the hood bulge perimeter using the (2) adhesion promoter prep pads. Allow the adhesion promoter to fully dry. Test fit the hood scoop to the vehicle hood prior to peeling the double sided tape backing.



STEP 2

Once familiar with fitment, peel the double sided tape backing from the hood scoop, and adhere the scoop to the vehicle. Apply firm pressure to ensure proper adhesion.

Installation is now complete.