



HVAC VENT TRIM

(2021-2022+ BRONCO)


INSTALLATION INSTRUCTIONS

CONTENTS

(1) LH Vent Trim
(1) RH Vent Trim

TOOLS REQUIRED

Isopropyl Alcohol
Microfiber Cloth

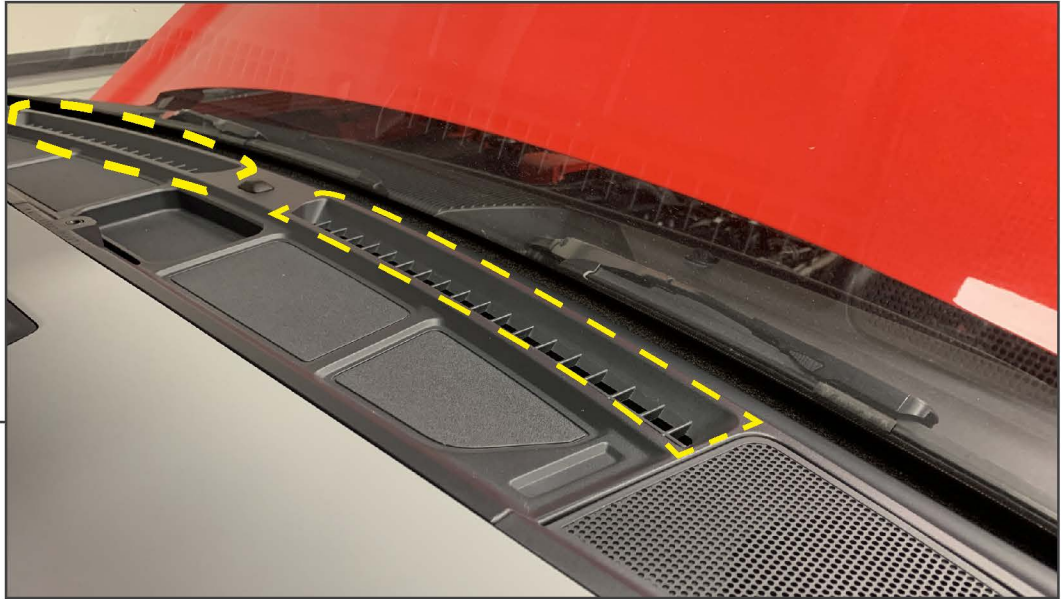

STEP 1

Clean the vent area of the vehicle dashboard using isopropyl alcohol and a microfiber cloth. Allow the alcohol to fully dry.



STEP 2

Peel the red tape backing from the trim panel. Align the trim panel into the vehical dashboard, and firmly press into place to ensure proper adhesion.

Installation is now complete.