



SOFT TOP STRUT KIT

(2021-2023+ BRONCO - 4 DOOR)

INSTALLATION INSTRUCTIONS


CONTENTS

(2) Shock Absorbers
(1) LH Mounting Bracket
(1) RH Mounting Bracket
(2) Upper Studs
(2) Lower Studs
(4) Flat Washers
(4) Lock Washers
(4) Flange Nuts

TOOLS REQUIRED

T-30 Torx Socket
13mm Wrench/Socket
Ratchet

STEP 1

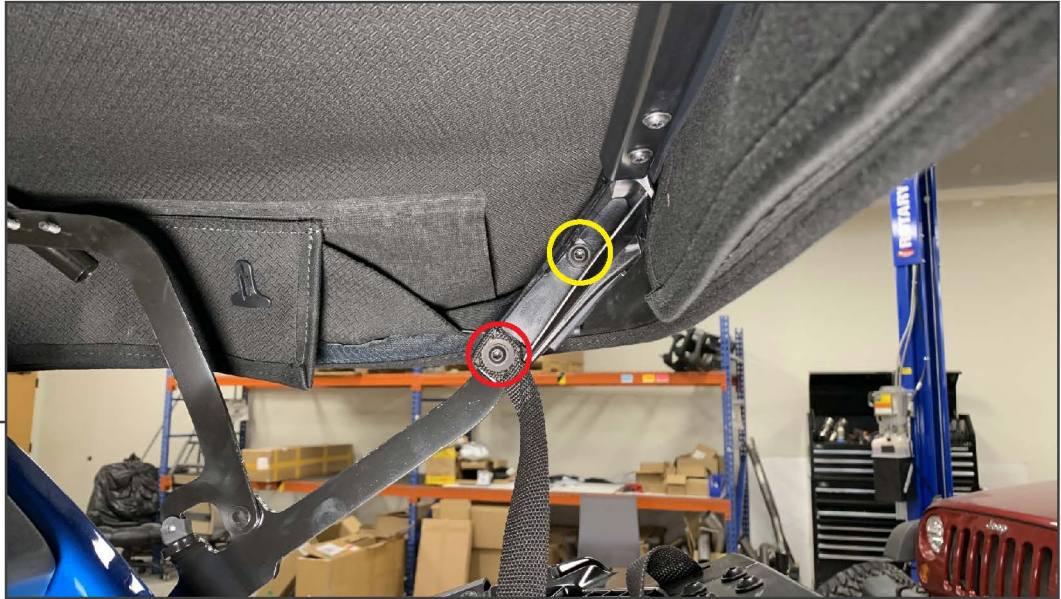

Remove the soft top windows from the vehicle following OEM removal procedure. Once removed, open the rear of the soft top and rest on the prop rod.

Locate the (2) T-30 Torx bolts on the top of the soft top assembly. Remove the lower bolt, and loosen the top bolt.

STEP 2



Install the upper mounting bracket to the soft top assembly using the original T-30 Torx bolts.


Note: Manipulating the soft top vertically may be required to re-align the bolt hole to the proper position.

STEP 3



Install the (1) long stud into the upper mounting bracket using (1) Flat washer, (1) Lock washer, and (1) Flange nut. Ensure the stud is pointing towards the outside of the vehicle.

STEP 4

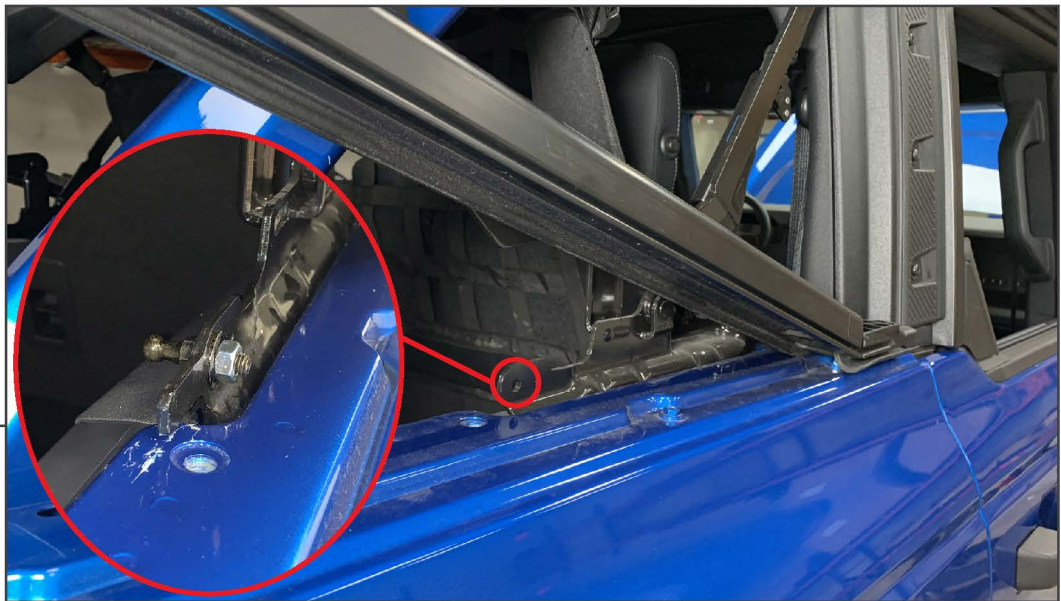

Locate the pre-drilled hole on the lower soft top mounting brackets. Install the (1) short stud using (1) Flat washer, (1) Lock washer, and (1) Flange nut. Ensure the stud is pointing towards the inside of the vehicle.

STEP 5



Install the shock onto each stud, ensuring the shock body is attached to the upper soft top stud.

Repeat steps 1-5 for the remaining strut assembly. Installation is now complete.