



FRONT CORNER BODY ARMOR

(2021-2023+ BRONCO)


INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Fender Armor
- (1) LH Hood Armor
- (1) RH Fender Armor
- (1) RH Hood Armor

TOOLS REQUIRED

- Isopropyl Alcohol
- Microfiber Cloth

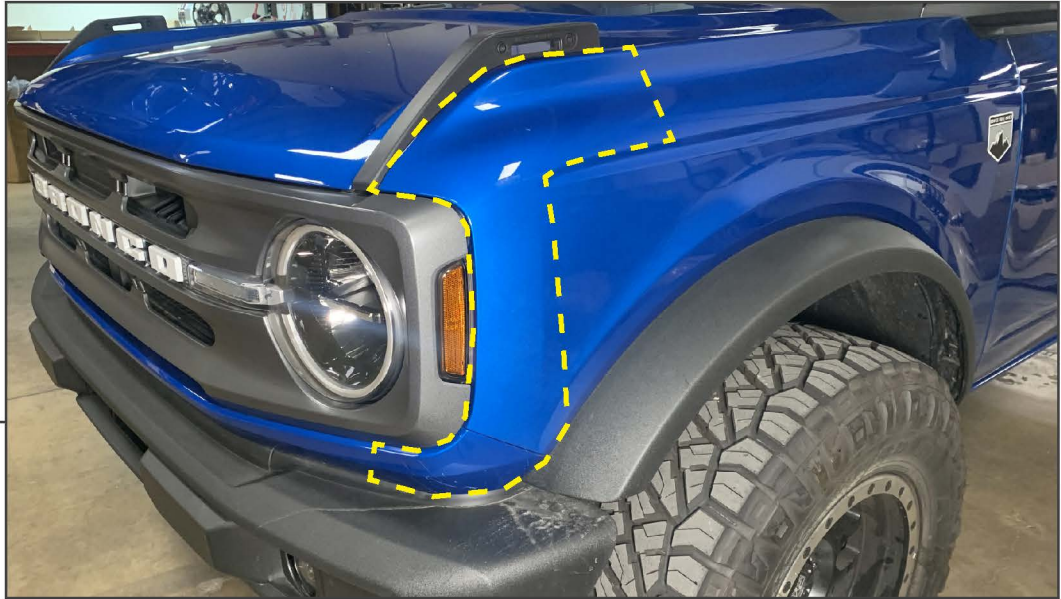

STEP 1

Using the appropriate corner armor panels, test fit the armor to the vehicle before removing the adhesive tape. Once familiar with fitment, clean the vehicle using isopropyl and a microfiber cloth at the armor adhesion location.



STEP 2

Peel the double sided tape backing, and adhere the armor panels to the vehicle. Press the armor panels down firmly to ensure proper adhesion.

Repeat steps 1-2 to install the remaining armor panels to the opposite side of the vehicle. Installation is now complete.