



DUAL BAR ROOF RACK

(2021-2023+ BRONCO - 4 DOOR WITH HARD TOP)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Pair of Front Mounting Brackets
- (1) Pair of Rear Mounting Brackets
- (2) Side Rail Brackets
- (2) Vertical Bars
- (2) Horizontal Bars
- (1) Triangle Bit Wrench
- (8) M6x1.00 x 28mm Torx Bolts
- (8) M6x1.00 x 20mm Torx Bolts w/
Washers
- (4) M6x1.00 x 20mm Step Down Bolts
- (4) M6x1.00 Nut Bolts

TOOLS REQUIRED

- T-30 Torx Socket
- 10mm Socket
- Ratchet
- Plastic Pry Tool


SKU # FB24827
Edited: 01/05/2023

STEP 1



Lay out and identify all components.

STEP 2

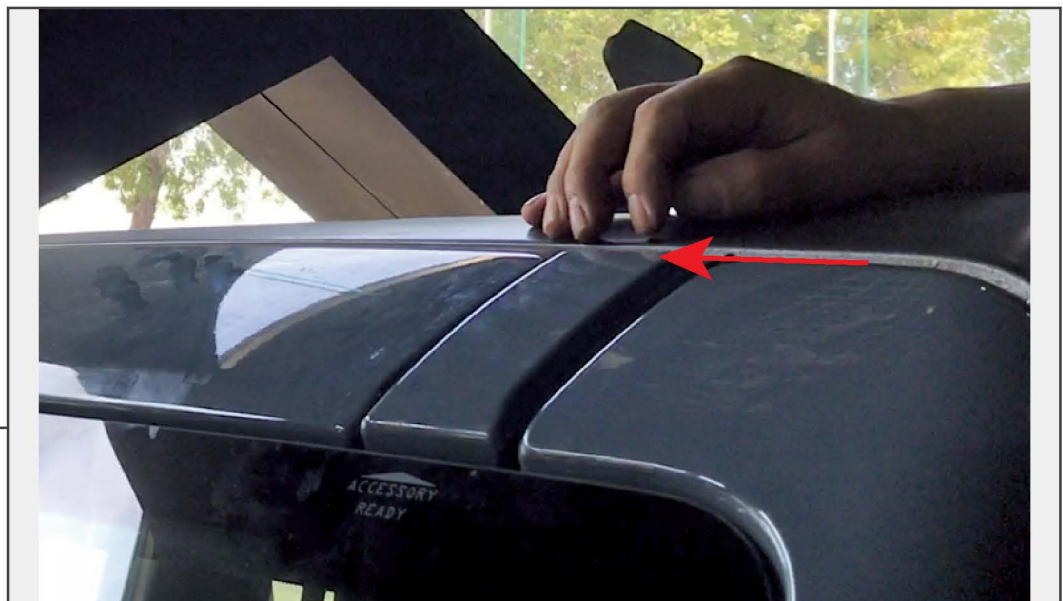

Remove the accessory cover above the windshield using a plastic pry tool.

Repeat this step for the opposite side of the vehicle.



STEP 3

Remove the (2) 10mm nuts from the vehicle studs.

Repeat this step for the opposite side of the vehicle.



STEP 4

Remove the plastic panel from the windshield bar.

Repeat this step for the opposite side of the vehicle.



STEP 5

Fit the roof rack vertical bar with the appropriate front bracket to the windshield bar and align the front vehicle studs.

Repeat this step for the opposite side of the vehicle.



STEP 6

Secure the front mounting brackets using (2) provided M6x1.00 nut bolts.



STEP 7

With the nuts secure, install the plastic trim cover.

Repeat this step for the opposite side of the vehicle.



STEP 8

Align the rear mounting bracket to the vehicle hard top recess. Using the included Triangular Bit Driver, tighten the mounting bracket to the vehicle.

Repeat this step for the opposite side of the vehicle.



STEP 9

Secure the horizontal bars to the vertical bar/rear mounting brackets using (1) M6x1.00 Torx Bolt w/ Washer per side.

Repeat this step for the opposite side of the vehicle.



STEP 10

With the hardware secure, install the plastic trim cover.

Repeat this step for the opposite side of the vehicle.



STEP 11

Insert the middle cross bar with the end caps, and secure to the roof rack using the provided hardware.

Repeat this step for the opposite side of the vehicle.



STEP 12

Installation is now complete.