



REAR DIFFERENTIAL SKID PLATE

(2021-2023+ BRONCO)

INSTALLATION INSTRUCTIONS


CONTENTS

- (1) Skid Plate
- (1) Horseshoe Bracket
- (2) M8x1.25 x 35mm Allen Bolts
- (2) M8 Flat Washers

TOOLS REQUIRED

- 10mm Wrench
- 6mm Allen Key (Provided)

STEP 1

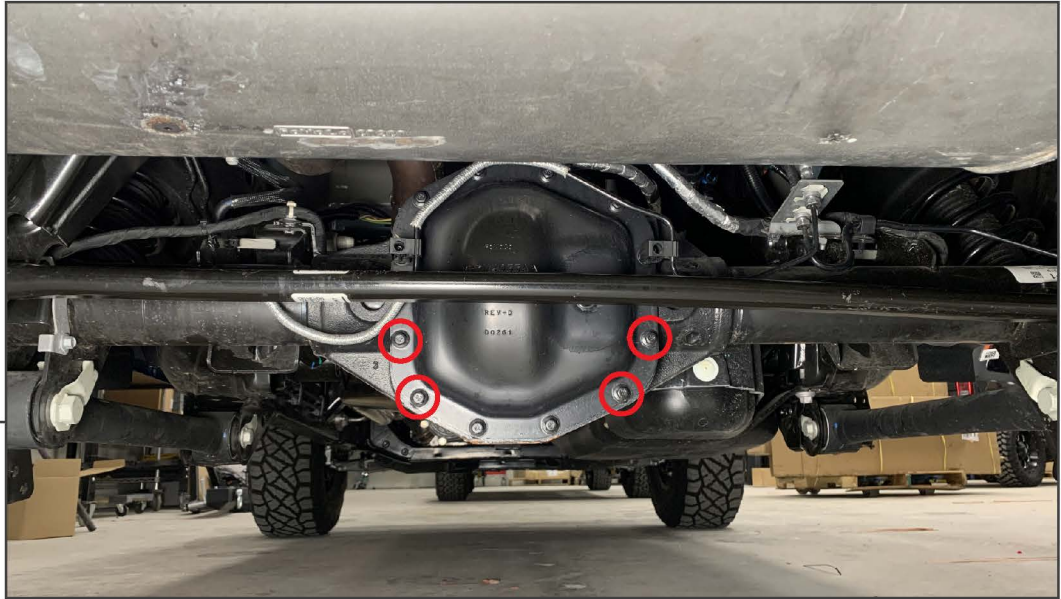

From under the vehicle, remove the designated (4) 10mm bolts from the differential cover.

Note: Oil will **not** leak out from these bolts. The bolts will be reused during assembly.

STEP 2



Align the skid plate to the vehicle differential, and secure into place using the (4) original 10mm bolts.



STEP 3

Place the (1) horseshoe bracket over the front of the differential, and secure the bracket to the skid plate using the (2) M8x1.25 x 35mm bolts and washers.



STEP 4

Ensure all hardware is fully tightened.

Installation is now complete.