



CARGO AREA LINER

(2021-2023+ BRONCO - 2 DOOR)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) Cargo Area Liner

TOOLS REQUIRED

Isopropyl Alcohol
Microfiber Cloth



STEP 1


Clean the indicated areas of the side panels using isopropyl alcohol and a microfiber cloth, and allow to fully dry.



STEP 2

Lay the cargo liner into the vehicle cargo area with the straps closest towards the front of the vehicle. Route each set of straps around each rear seat head rest, and latch the straps into the designated retainer clip. Do not tighten the straps.

STEP 3

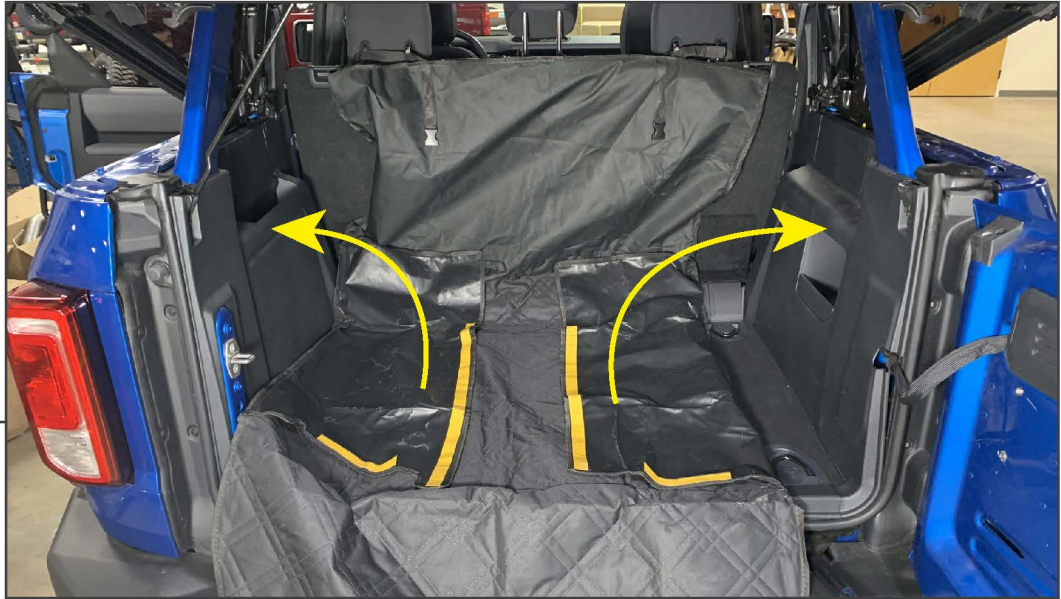

Peel the yellow tape backing from the Velcro, and firmly press each side of the liner into the vehicle plastic trim.

STEP 4



With the sides adhered, use the zipper at each corner to allow the liner to form the side walls of the liner.



STEP 5

Installation is now complete.