



FOOT REST PEDAL SET - FRONT

(2021-2023 BRONCO - 4 DOOR)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Front Foot Rest
- (1) RH Front Foot Rest
- (2) M8x1.25 x 55mm Conical
Allen Bolts
- (1) 6mm Allen Key

TOOLS REQUIRED


- 13mm Socket
- Ratchet
- 6mm Allen Key (Provided)

STEP 1



Open the vehicle door, and disconnect the wiring harness connector from the vehicle chassis. The wiring harness will pull away from the chassis.

STEP 2

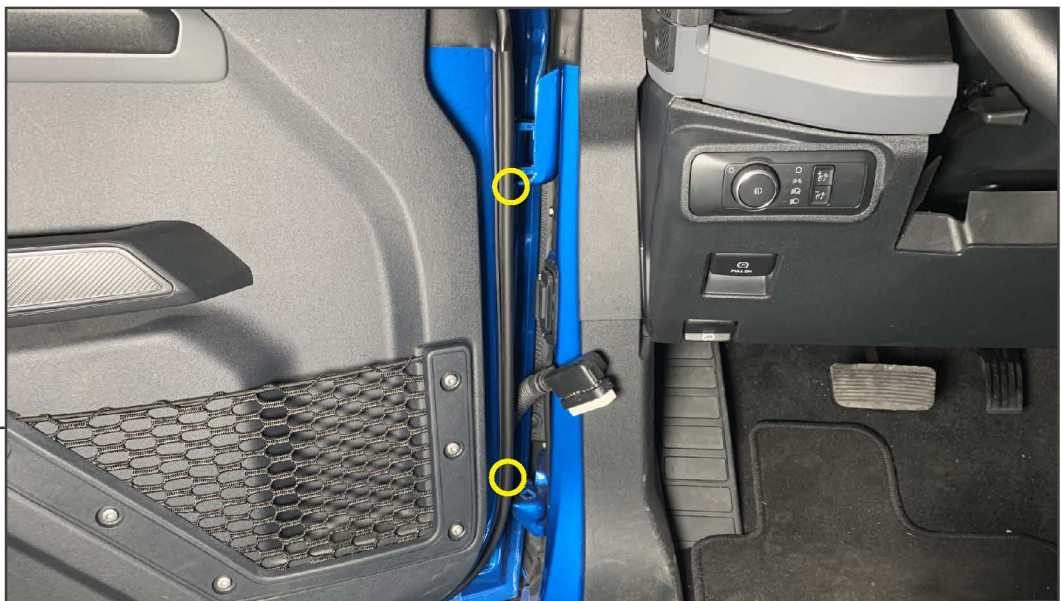

Remove the (2) 13mm bolts from the door hinges. Using the door lifting points, lift and remove the door from the vehicle and store in a secure area.



STEP 3

Place the appropriate foot rest onto the lower door hinge. Secure the hinge into place using (1) M8x1.25 x 55mm Allen bolt.

Repeat steps 1-3 for the opposite side foot rest. Installation is now complete.