



MUD FLAP SET

(2021-2023+ BRONCO 4 DOOR - WITH OEM ROCK RAILS)

INSTALLATION INSTRUCTIONS

CONTENTS

- (2) FL/RR Mud Flaps
- (1) FR/RL Mud Flaps
- (8) Self Tapping Screws

TOOLS REQUIRED


- T-20 Torx Bit/Socket
- Ratchet
- Phillips Screwdriver
- Flathead Screwdriver



STEP 1

Remove (1) plastic push clip and (1) T-20 Torx screw from the end cap of the vehicle rock rails. Then, use a pry tool to remove the plastic end cap from the vehicle.

Note: Removing the fender flare may assist accessibility to the upper screw.

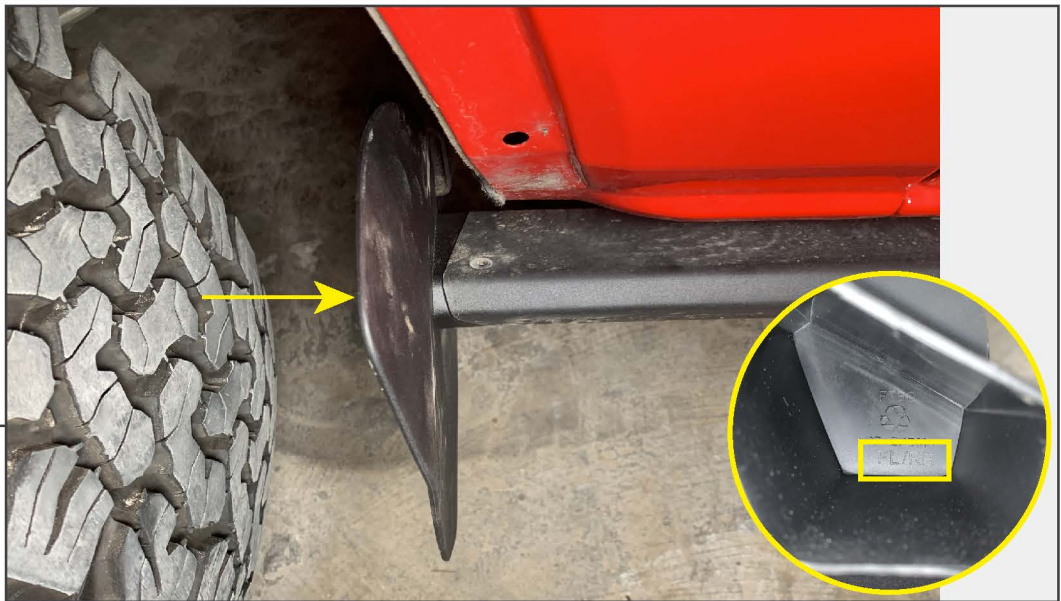

STEP 2

Insert the designated mud flap into the end of the vehicle rock rail. Each mud flap is labeled to determine fitment location. See below for fitment identification. Each mud flap can be installed in two locations on the vehicle.

FL = Front Left FR = Front Right
RL = Rear Left RR = Rear Right



STEP 3

Using (2) self tapping screws through the pre-drilled holes in the OEM rock rail, secure the mud flap into place.



STEP 4

Repeat steps 1-4 for the remaining mud flaps.

Installation is now complete.