



# TAILGATE MOLLE PANEL

(2021-2023+ BRONCO)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---


- (1) Molle Panel
- (2) Mounting Brackets
- (4) M8x1.25 x 50mm Allen Bolts
- (4) M8 Lock Washers
- (4) M8 Flat Washers
- (4) M6x1.00 x 15mm Allen Bolts
- (4) M6 Lock Washers
- (4) M6 Flat Washers

### TOOLS REQUIRED

---

- T-45 Torx Socket
- 5mm, 6mm Allen Sockets/Keys
- Ratchet
- Masking Tape
- Permanent Marker
- Razor Blade

## STEP 1

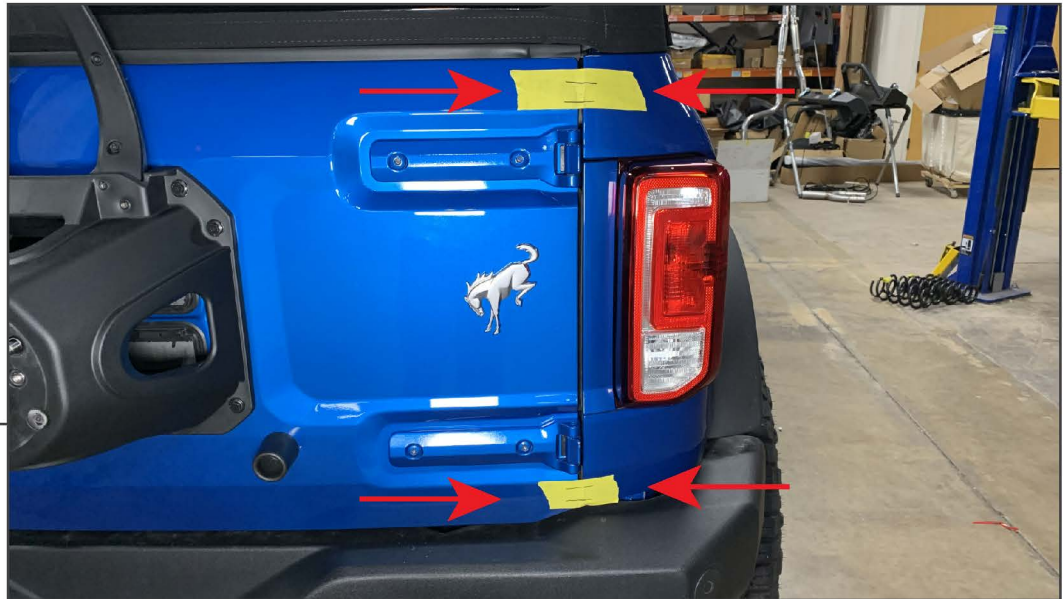

Remove the spare tire from the vehicle following OEM spare tire removal procedure.

Apply masking tape to the upper and lower corners of the tailgate. Draw (2) horizontal lines across the tape ensuring overlap of the body panels. Use a razor blade and carefully cut the tape down the body line, this will assist tailgate alignment during assembly. Wedging a soft block in-between the bumper and the tailgate can prevent the tailgate from lowering.

## STEP 2




Remove (2) T-45 Torx bolts from each of the tailgate hinges.

Note: Do not open the tailgate with the hinges unbolted.



## STEP 3

Using (4) M8x1.25 x 55mm Allen bolts, (4) M8 lock washers, and (4) M8 flat washers, secure the (2) mounting brackets to the vehicle hinges. Use the molle panel as a guide to ensure the bolt holes on the panel align to the mounting brackets, then tighten the brackets into place.

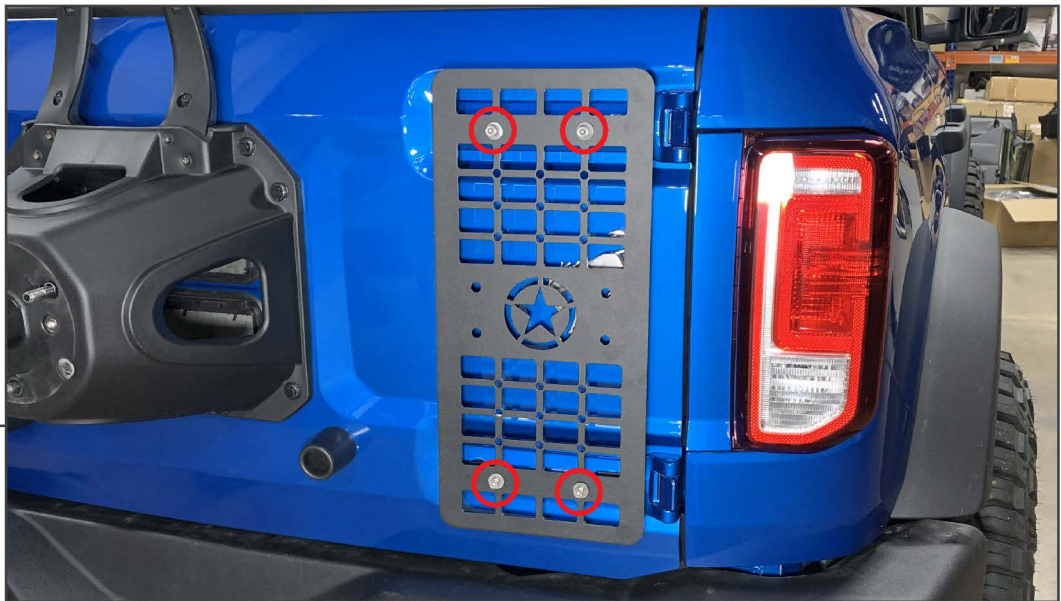

## STEP 4

Secure the molle panel to the mounting brackets using (4) M6x1.00 x 15mm Allen bolts, (4) M6 lock washers, and (4) M6 flat washers.

Note: The molle panel is directional, ensure the panel is the correct orientation for proper alignment.



---

## STEP 5

Re-install the spare tire to the vehicle following OEM spare tire installation procedure.

Installation is now complete.