



YELLOW LED FOG LIGHTS

(2021-2023+ BRONCO - EXCLUDING MODULAR BUMPER)

INSTALLATION INSTRUCTIONS

CONTENTS

(2) LED Fog Lights

TOOLS REQUIRED


15mm Socket
Ratchet
Panel Removal Tool
Phillips Screwdriver

STEP 1



Remove (6) 15mm bolts from the lower splash shield.

STEP 2

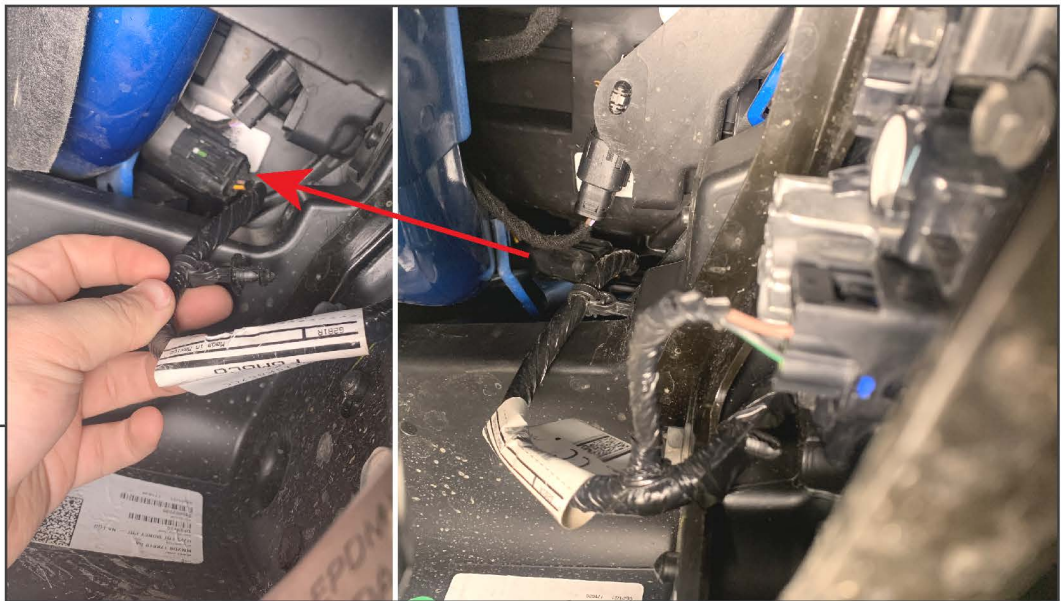

From under the bumper, reach upwards and unplug the fog light harness main connector located under the LH (Driver Side) headlight.



STEP 3


Remove the (2) plastic bumper covers using a plastic panel removal tool to reveal the bumper mounting hardware.



STEP 4

Remove (6) 15mm bolts from the front bumper, and remove the bumper assembly from the vehicle. Place the bumper on a soft workable surface.

STEP 5

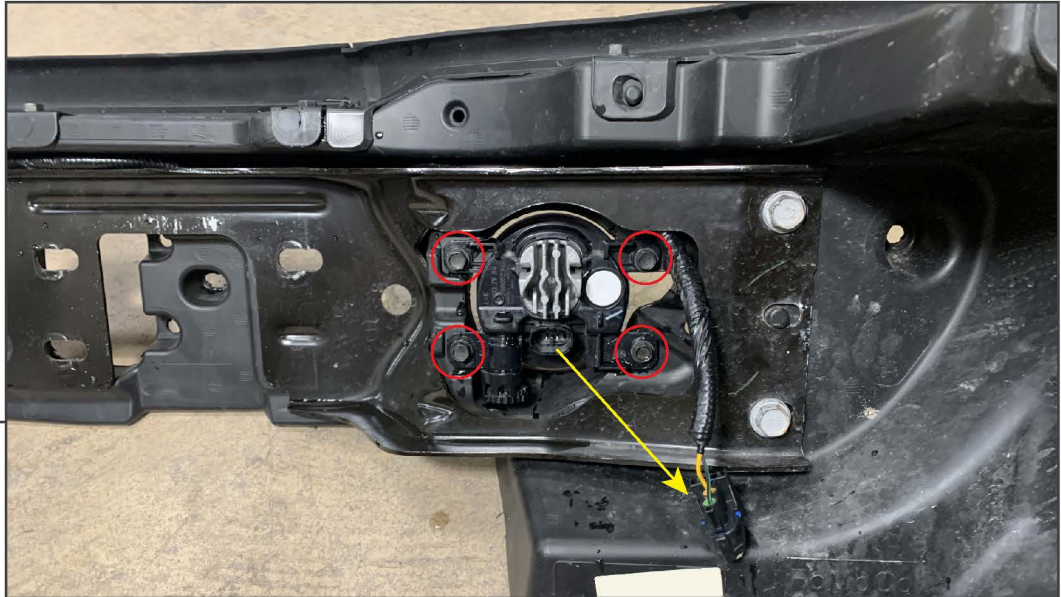

Unplug the fog light wiring harness from the fog light assembly. Remove (4) 10mm screws from the fog light. Remove the fog light from the bumper.

Repeat this step for the remaining fog light assembly.

STEP 6



Align the new fog light to the vehicle bumper, and secure into place using the (4) original 10mm screws, tighten until secure. Plug the fog light wiring harness into the bumper fog light harness.

Repeat this step for the remaining fog light assembly.



STEP 7

Re-install the vehicle bumper following steps 1-4 in reverse order.

Installation is now complete.