



---

# STUBBY SIDE STEP BARS

(2021-2025+ BRONCO - WITH OEM ROCK RAILS)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---


- (2) Side Steps
- (4) M6 Thumb Screws
- (4) M6 Nuts

### TOOLS REQUIRED

---

- 10mm Wrench
- Exterior Cleaner
- Microfiber Cloth

## STEP 1

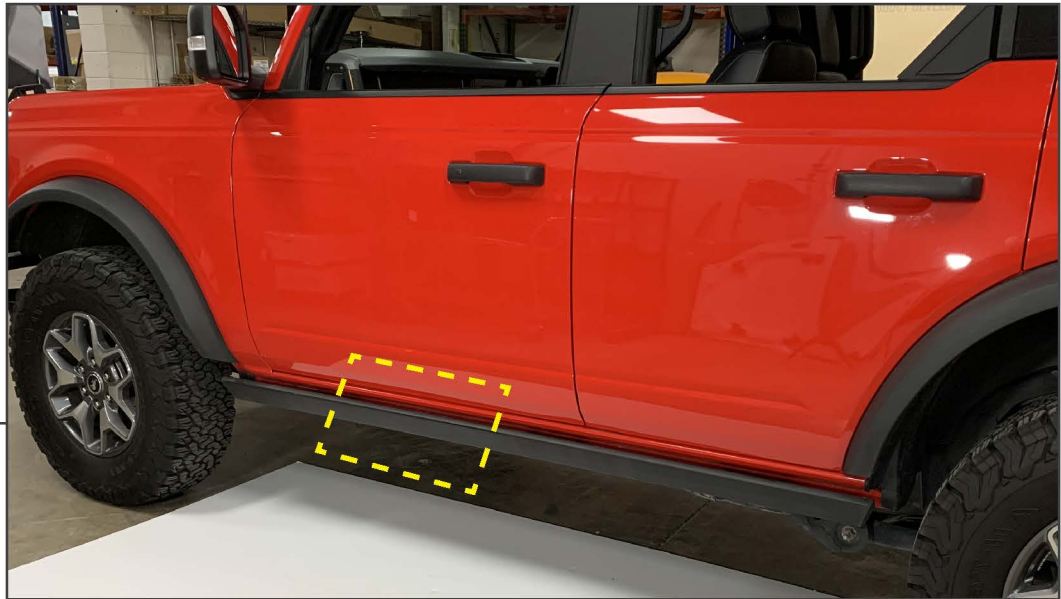

Clean the vehicle OEM Rock Rail at the intended side step location using exterior cleaner and a microfiber cloth.

## STEP 2



Remove the thumb screws from the side step. Place the top lip of the side step to the vehicle OEM Rock Rail, and press downwards to engage the bottom of the side step around the Rock Rail.



## STEP 3

Thread (1) M6 nut to each Thumb Screw. Then, thread the thumb screw to each side step mounting bracket. Tighten the thumb screw, then lock the screw into place using a 10mm wrench on the M6 nut.



## STEP 4

Repeat steps 1-3 to install the remaining side step.

Installation is now complete.