



UNDER DASH MOLLE PANELS WITH LED LIGHTING

(2021-2023+ BRONCO - 4 DOOR)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Molle Panel
- (1) RH Molle Panel
- (2) Front LED Lights
- (2) Rear LED Lights
- (1) Wiring Harness
- (3) Plastic Push Clips
- (4) Hex Nuts
- (1) Wrench
- (1) Plastic Pry Tool

TOOLS REQUIRED

- 10mm Wrench (Provided)
- Plastic Pry Tool (Provided)

SKU # FB25547
Edited: 12/15/2022

STEP 1



Using a pry tool, pry down on the sides of the rear dome light to gain access to the dome light harness. Unplug the wiring harness from the dome light.

STEP 2



Pull back on the roll bar trim panel, and feed the wiring harness down towards the dome light wiring harness. Plug the new wiring harness into the dome light wiring harness and the dome light, then plug the additional plug into the vehicle original wiring harness.

STEP 3



Gently pull back on the vehicle trim panels and tuck the wiring harness along the RH side of the vehicle.

STEP 4




Pull upwards on the door entry trim panel and route the wiring harness under the vehicle trim. Route the rear section of the wiring harness under the front seats. Tuck the wiring harness under the center console, while ensuring to avoid any moving components of the seats.



STEP 5

Pull upwards on the door entry trim panel and route the wiring harness under the vehicle trim. Route the wiring harness under the vehicle dashboard on both sides of the vehicle.

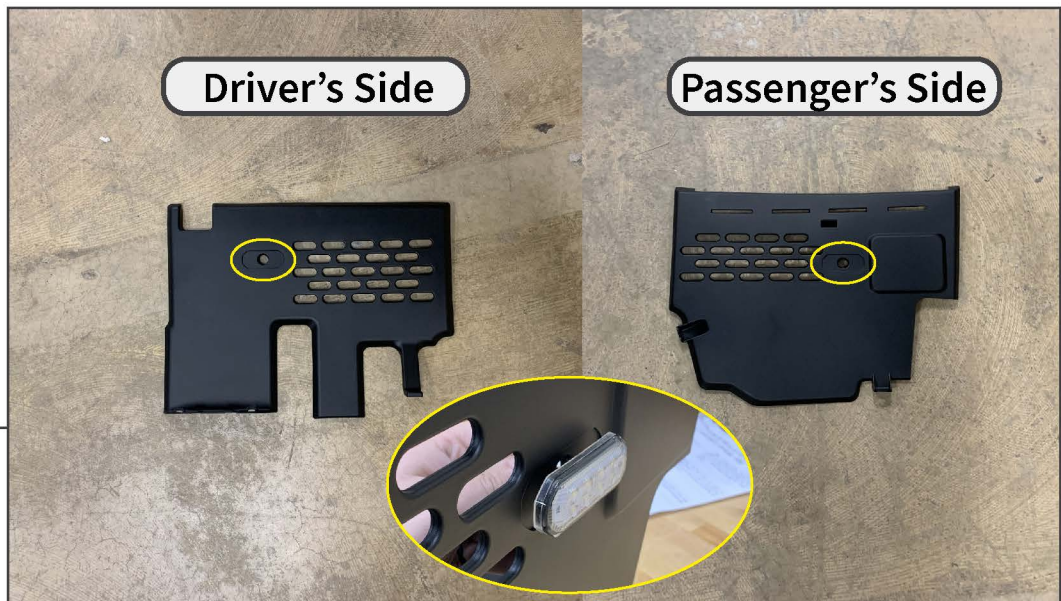

STEP 6

Identify the appropriate under dash malle panel.

Using the (2) LED lights with the circular mounts, press (1) LED light into each malle panel.



STEP 7

Driver Side Molle Panel: Plug in the LED light to the previously routed wiring harness. Then, fit the molle panel to the (3) studs in the vehicle firewall. Using the (3) provided nuts, secure the molle panel. Press the front of the molle panel upwards to fit flush with the dashboard.



STEP 8

Passenger Side Molle Panel: Plug in the LED light to the previously routed wiring harness. Then, align the molle panel to the vehicle holes in the firewall. Secure the bottom mounts using (2) plastic push clips. Press the front of the molle panel upwards to fit flush with the dashboard.

STEP 9



Under Seat Lighting: Plug in the LED light to the previously routed wiring harness. Then, attach the hooks on the LED lights to the under side of the seat.

STEP 10



Re-assemble the vehicle trim, if applicable. The lighting will power on with the interior dome light. Installation is now complete.