



TRUNK 'T'/'J' HOOKS

(2021-2023+ BRONCO)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH 'T' Hook
- (1) LH 'J' Hook
- (1) RH 'T' Hook
- (1) RH 'J' Hook
- (2) M6 Allen Bolts
- (1) Allen Key

TOOLS REQUIRED


- T-30 Torx Socket
- Ratchet
- 4mm Allen Key (Provided)

STEP 1



In the trunk/cargo area, remove (1) T-30 Torx bolt from the rear roll bar.

STEP 2

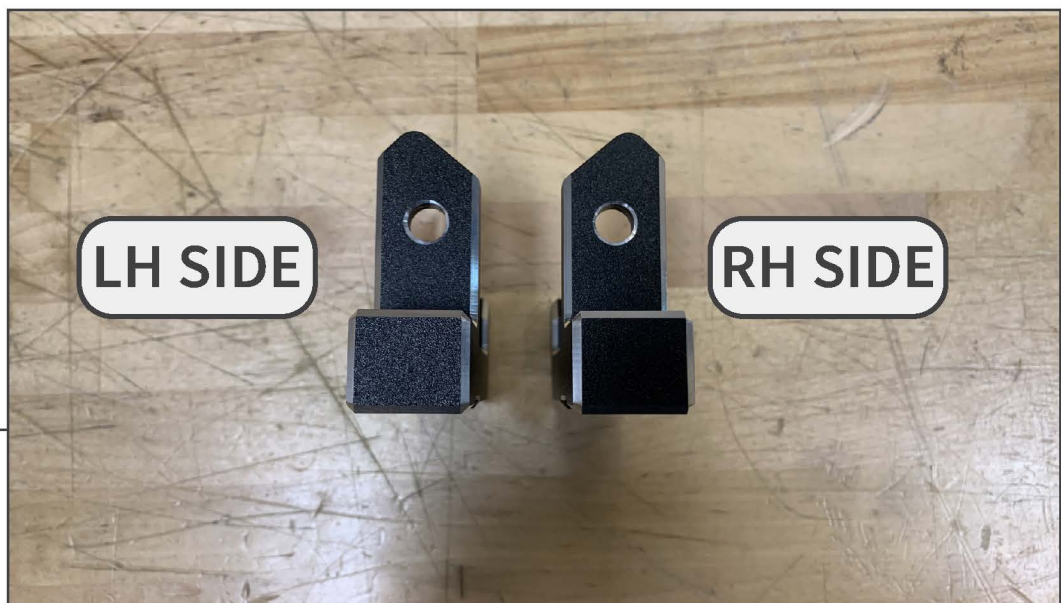

Identify the 'T' hooks, each hook is vehicle side specific. See the diagram above to identify.

STEP 3



Align the hook to the vehicle, and secure the hook into place using the original (1) T-30 Torx bolt. Tighten until secure.

STEP 4



Locate the threaded hole along the bottom of the 'T' hook.

STEP 5



Secure the (1) 'J' hook to the previously installed 'T' hook using (1) M6 Allen bolt. Tighten until secure.

STEP 6



Repeat steps 1-5 to install the remaining 'T' and 'J' hook to the opposite side of the vehicle.

Installation is now complete.