



DASHBOARD PHONE MOUNT

(2021-2023+ BRONCO)

INSTALLATION INSTRUCTIONS

CONTENTS

- (2) Rail Assemblies
- (1) Middle Mounting Bracket
- (1) LH Side End Cap
- (1) RH Side End Cap
- (1) Phone Mount
- (1) Ball Mount Bracket
- (1) 1/4-20 x 0.5" Allen Bolts
- (8) Small Allen Bolts
- (6) 1/4-20 Threaded Square Inserts
- (1) Large Allen Key
- (1) Small Allen Key
- (1) Adhesion Promoter

TOOLS REQUIRED

- Allen Keys (Provided)
- Isopropyl Alcohol
- Microfiber Cloth

SKU # FB25791
Edited: 11/30/2022

STEP 1



Install the LH and RH end caps to the rail assembly using (2) small Allen bolts per side.

STEP 2



Assemble the rails to the center mounting bracket using the (4) small Allen bolts. Ensure to install the middle mounting bracket to allow the end caps to point towards the front of the vehicle when mounted.




STEP 3

Clean the dashboard assembly at the designated locations using isopropyl alcohol and a microfiber cloth, then allow to fully dry.



STEP 4

Peel the red double sided tape backing from each end cap, and align the assembly to the vehicle dashboard. Secure the middle of the assembly to the threaded hole in the dashboard using (1) 1/4-20 Allen bolt, then press the end caps downwards to secure the assembly to the vehicle.

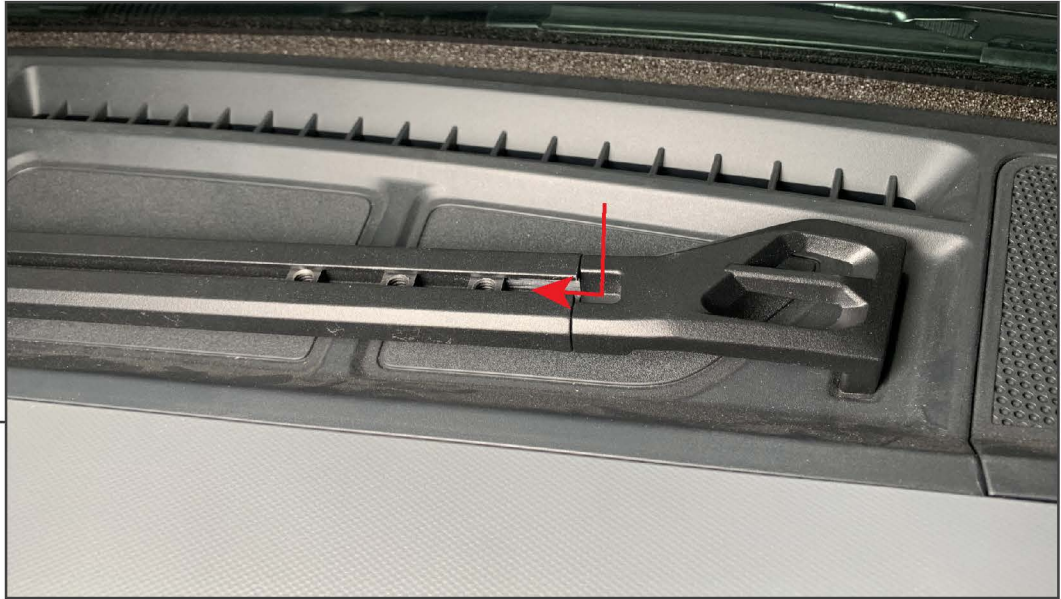

STEP 5

Insert the desired amount of the square threaded inserts into the rail system.



STEP 6

Secure the (1) ball mount bracket into the previously desired threaded insert, tighten until secure. Then, fit the phone mount into the ball mount bracket. Adjust the phone mount bracket to best fit the device using the Allen bolts on the mount. Threaded inserts use 1/4-20 thread size for aftermarket accessories. Installation is now complete.