

LED SPARE TIRE MOUNTED THIRD BRAKE LIGHT

(2021-2023+ BRONCO)

INSTALL	ATION	INSTRU	JCTIONS


CONTENTS TOOLS REQUIRED

(1) LED Brake Light Panel Removal Tool





Remove the vehicle spare tire by removing the (3) lug nuts.

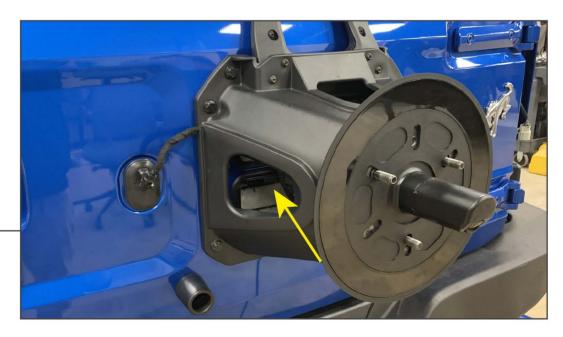

STEP 2

STEP 1

Place the new brake light onto the vehicle spare tire mount studs. Route the wiring harness into the vehicle tailgate through the rear air vent.



STEP 3



Open the vehicle tailgate, and remove the interior plastic trim panel using a panel removal tool.



Locate the vehicle high mount third brake light wiring harness connector in the tailgate. Plug in the spare tire brake light 'T' harness into each end of the vehicle high mount third brake light wiring harness. Ensure each connector audibly clicks into place to ensure proper connection.

With the light plugged in, re-install the interior plastic trim panel and close the tailgate.





STEP 5

With the spare tire brake light in place, re-install the vehicle spare tire using the original lug nuts. Tighten the spare tire to the spare tire mount. Torque the wheel to the spare tire mount to the OEM torque rating of 41 ft. lbs.

Installation is now complete.