



PARACORD HEADREST GRAB HANDLES

(2021-2023+ BRONCO)

INSTALLATION INSTRUCTIONS

CONTENTS

(2) Headrest Grab Handles

TOOLS REQUIRED

N/A


SKU # FB25797 / FB25798

STEP 1



Remove the vehicle front seat headrest by pressing the (2) buttons at the top of the vehicle seat while lifting the headrest away from the seat.

STEP 2

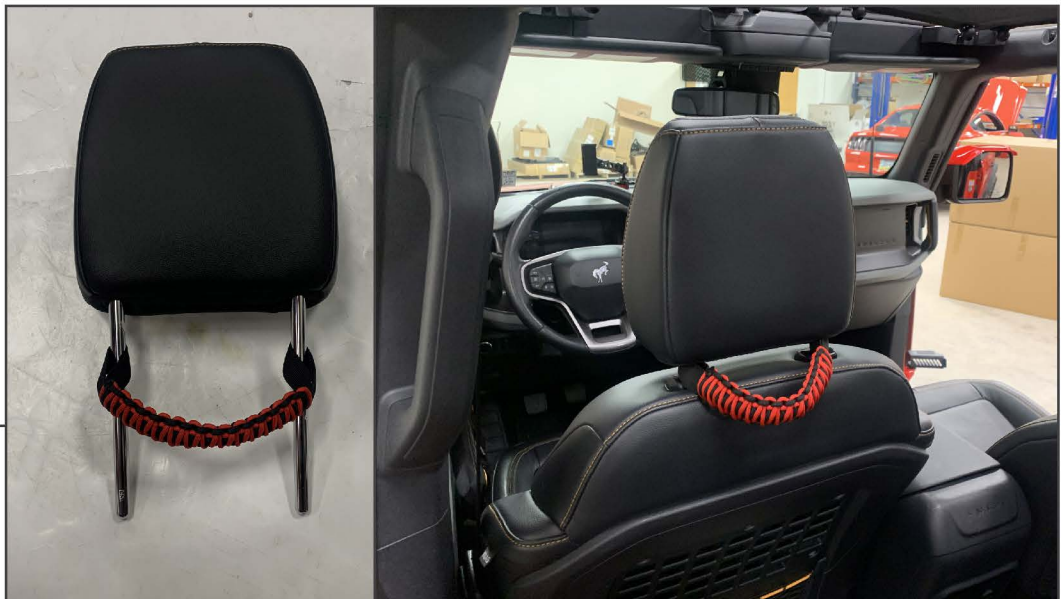

Fit the headrest through each end of the grab handle. Then, reinstall the headrest to the vehicle. Adjust the headrest as necessary by pressing the (2) buttons.

Repeat steps 1-2 for the remaining grab handle. Installation is now complete.