



STEEL SKID PLATE

(2021-2023+ BRONCO - WITH OEM STEEL/MODULAR FRONT BUMPER)


INSTALLATION INSTRUCTIONS

CONTENTS

(1) Steel Skid Plate

TOOLS REQUIRED

13mm Socket
Ratchet

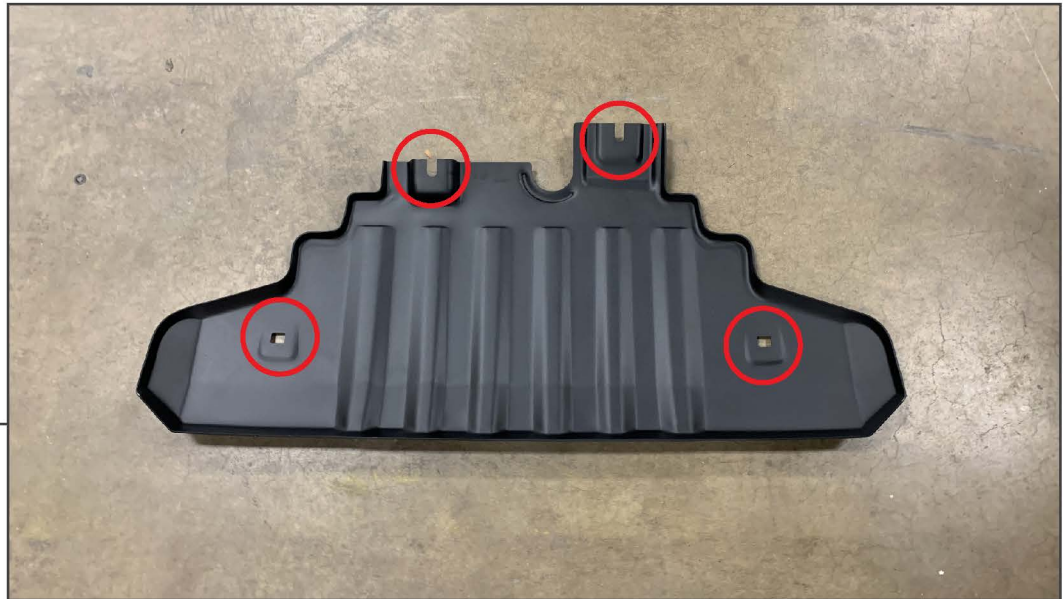

STEP 1

From under the vehicle, locate the OEM skid plate. While supporting the OEM skid plate, remove the (4) 13mm bolts securing the skid plate to the vehicle. Lower the OEM skid plate and remove from the vehicle.

Note: OEM skid plate hardware will be reused.



STEP 2

Lift the new skid plate to the vehicle, and secure into place using the original (4) 13mm bolts.

Installation is now complete.