



SUN SHADE

(2021-2023+ BRONCO - 4 DOOR)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Sun Shade
- (4) M8 Allen Bolts
- (8) Plastic Washers
- (1) Allen Key
- (6) Large Elastic Bands
- (8) Small Elastic Bands
- (6) Elastic Bands with Hooks

TOOLS REQUIRED

- 5mm Allen Key (Provided)
- T-50 Torx Socket
- Ratchet

STEP 1




Remove the vehicle top following the OEM top removal procedure.

STEP 2




Lay out and identify all mesh top components. Locate the front of the mesh top.

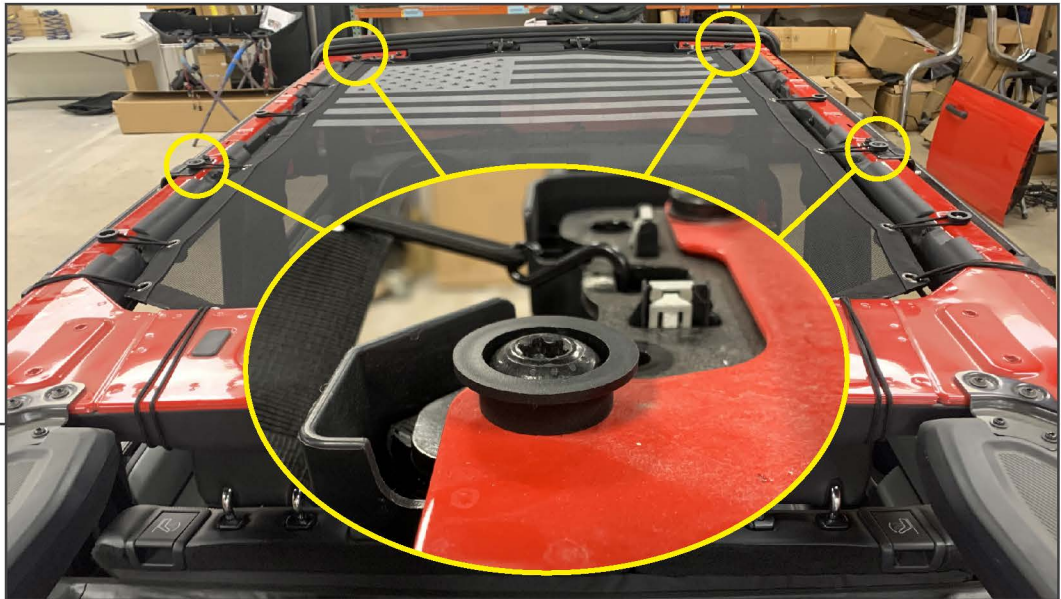


STEP 3

Remove the OEM (4) T-50 Torx bolts from the top retainer brackets. Fit (1) provided plastic washer onto the bolt hole, and then re-install the original Torx bolts. The washer will be used to fit the elastic straps around.

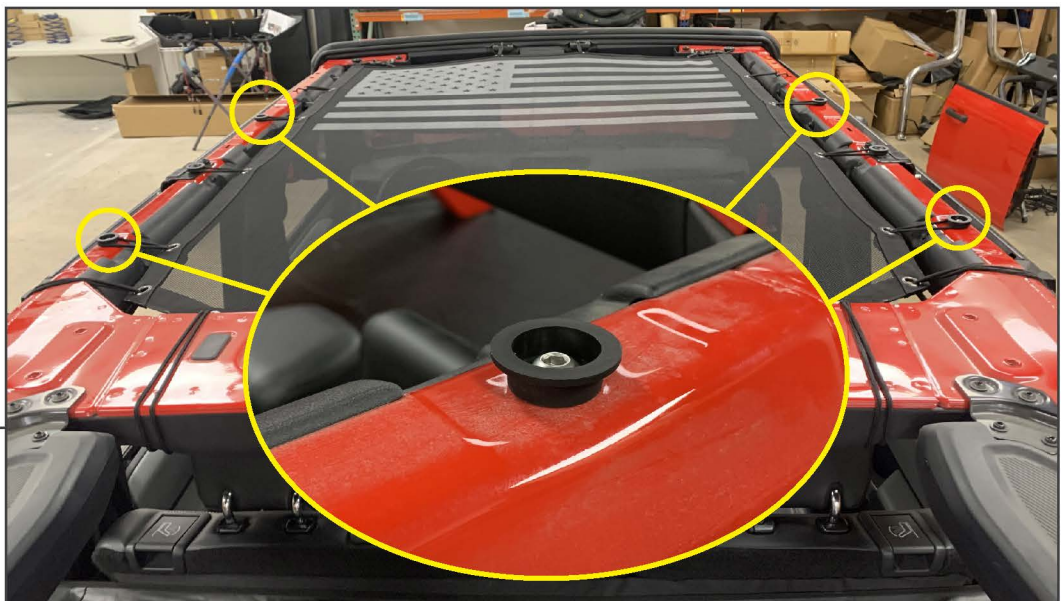


STEP 4

Locate the (4) threaded inserts in the vehicle roll bar indicated above. Fit (1) plastic washer over the bolt hole, and secure the plastic washers to the roll bar using (4) M8 Allen bolts.

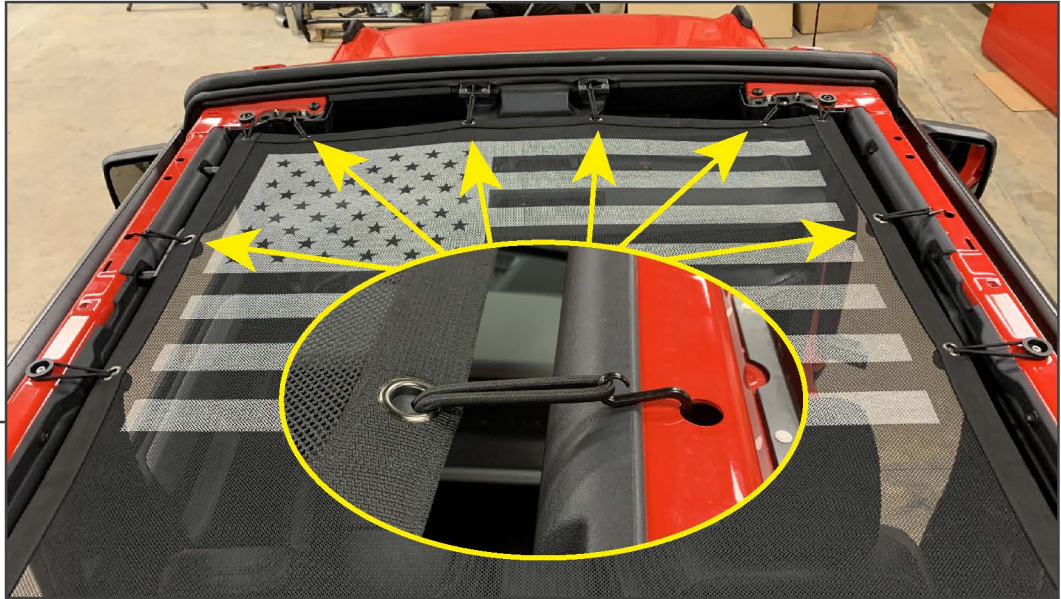


STEP 5

Begin securing the front of the mesh top to the vehicle roll bars using (6) small elastic bands with hooks.

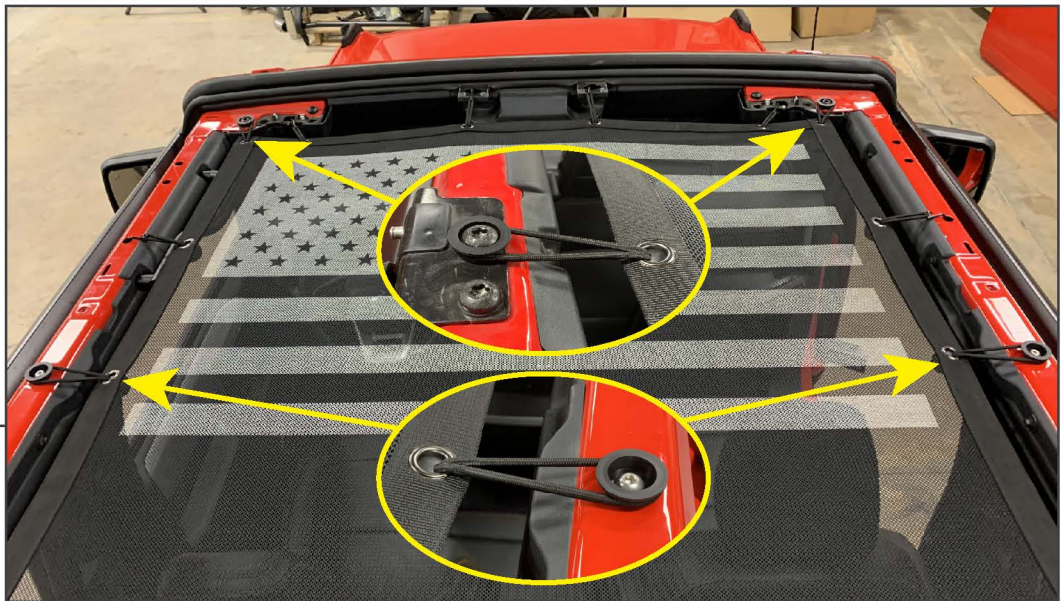

STEP 6

Finish securing the front of the mesh top using (4) small elastic bands [without hooks].

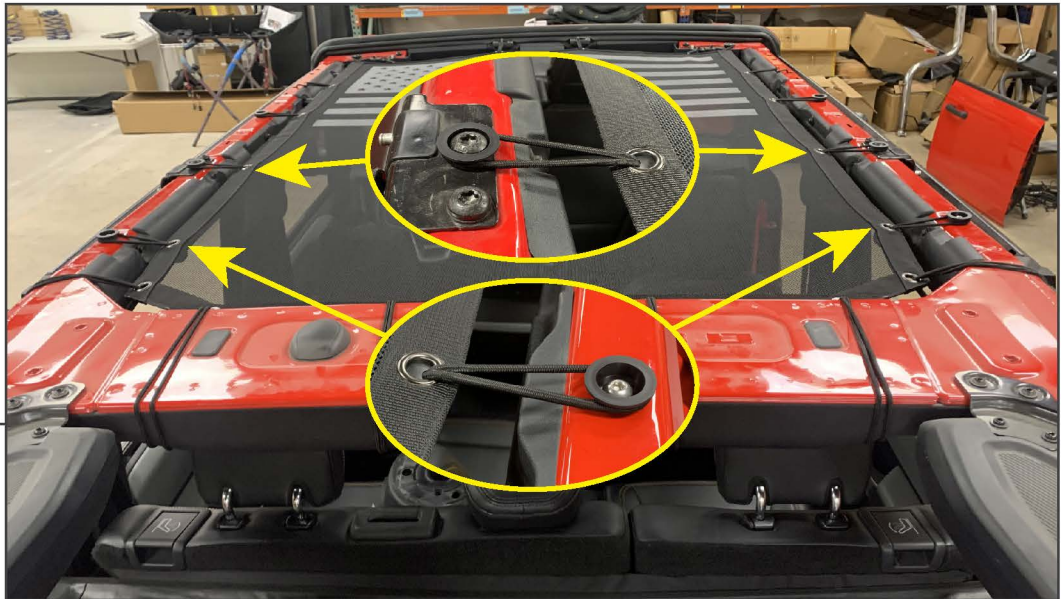

STEP 7

Begin to secure the rear sides of the mesh top using (4) small elastic bands [without hooks].



STEP 8

Secure the rear of the mesh top to the vehicle roll bar using (6) long elastic bands.



STEP 9

Installation is now complete.