



LIMB RISER KIT

(2021-2023+ BRONCO)

INSTALLATION INSTRUCTIONS

CONTENTS

- (2) Limb Riser Cables
- (1) LH Windshield Mounting Bracket
- (1) RH Windshield Mounting Bracket
- (2) Fender Mounting Brackets
- (2) Adjuster Assemblies
- (2) M8 Allen Bolts
- (2) M8 Lock Nuts
- (4) M6 Torx Bolts
- (4) M6 Flat Washers
- (1) T-30 Torx Key

TOOLS REQUIRED

- T-30 Torx Socket
- 5mm Allen Key/Socket
- 10mm Socket
- Ratchet
- 10mm Wrench
- 13mm Wrench

SKU # FB26837
Edited: 02/09/2023



STEP 1

Locate the fender mounted accessory mounting point. Remove the (2) T-30 Torx bolts in the accessory mount, but do not remove the threaded insert. The threaded insert will be reused.



STEP 2

Mount (1) fender mounting bracket to the accessory mounting point using the provided (2) M6 Torx bolts and (2) M6 flat washers. Thread the included hardware into the vehicle threaded inserts.



STEP 3

Locate the “Accessory Ready” panel above the windshield. Remove the cover by pressing the release tab and pulling the cover away.



STEP 4

Remove the (2) 10mm nuts from the inner plastic panel, and remove the plastic panel from the vehicle.


Note: The (2) 10mm nuts will be reused.

STEP 5



Align the appropriate windshield mounting bracket to the vehicle, take note to the direction of the outside of the mount to identify each side. Then, secure the mount into place using the original (2) 10mm nuts.

STEP 6

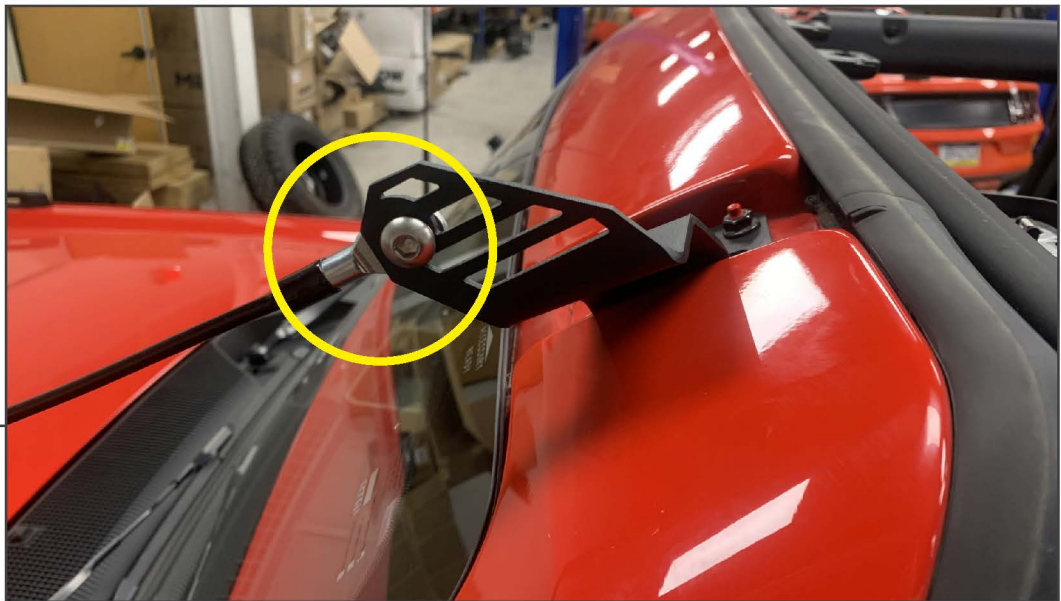

Secure the eyelet of the limb riser cable to the windshield mounting bracket. Ensure the eyelet is towards the inside of the vehicle.



STEP 7

Secure the adjuster assembly to the limb riser cable by pinning the cable eyelet through the adjuster assembly pin. Then, loosen the adjuster and hook the front hook into the previously mounted fender mounting bracket.

Tighten the limb riser cable, and then tighten the (2) jam nuts to lock the adjustment into place.



STEP 8

Repeat steps 1-7 to secure the limb riser to the opposite side of the vehicle.

Installation is now complete.