



FRONT SUSPENSION STUD PROTECTOR KIT

(2021-2023+ BRONCO)

INSTALLATION INSTRUCTIONS


CONTENTS

(4) Small Stud Protectors
(2) Large Stud Protectors

TOOLS REQUIRED

Adjustable Wrench

STEP 1

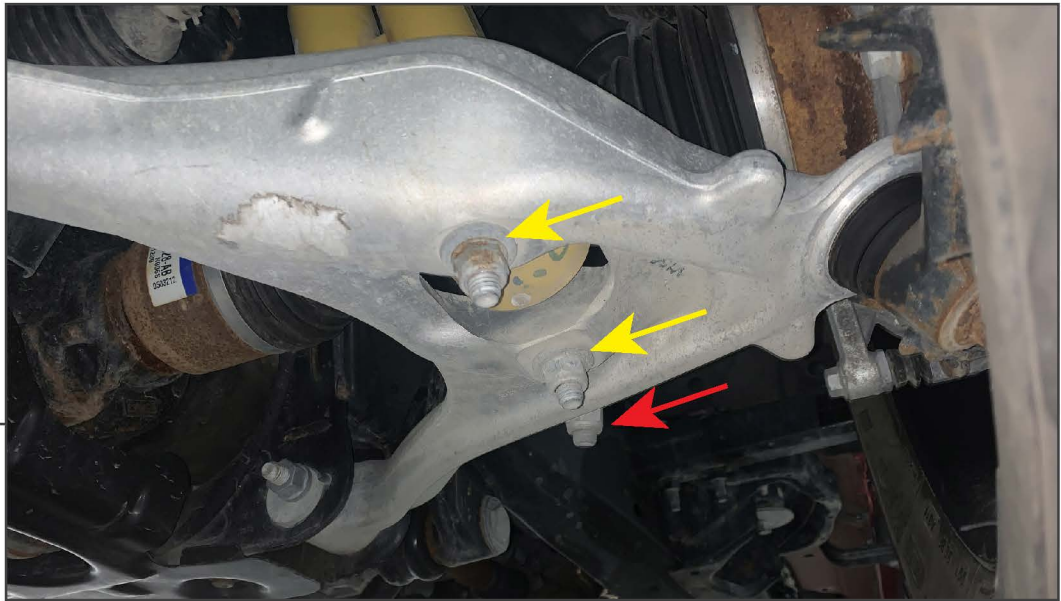

From under the vehicle, locate the (2) strut studs and the sway bar link stud.

STEP 2



Thread (2) small stud protectors onto the strut studs. Then, thread (1) large stud protector onto the sway bar link stud. Tighten all of the protectors until secure using an adjustable wrench.

Repeat steps 1-2 for the opposite side of the vehicle. Installation is now complete.