



# FOOT REST PEDAL SET - FRONT AND REAR

(2021-2023 BRONCO - 4 DOOR)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) LH Front Foot Rest
- (1) RH Front Foot Rest
- (1) LH Rear Foot Rest
- (1) RH Rear Foot Rest
- (4) M8x1.25 x 55mm Conical  
Allen Bolts
- (2) 6mm Allen Keys

### TOOLS REQUIRED

---

- 13mm Socket
- Ratchet
- 6mm Allen Key (Provided)

**STEP 1  
(FRONT)**




Open the vehicle door, and disconnect the wiring harness connector from the vehicle chassis. The wiring harness will pull away from the chassis.

**STEP 2**



Remove the (2) 13mm bolts from the door hinges. Using the door lifting points, lift and remove the door from the vehicle and store in a secure area.

## STEP 3

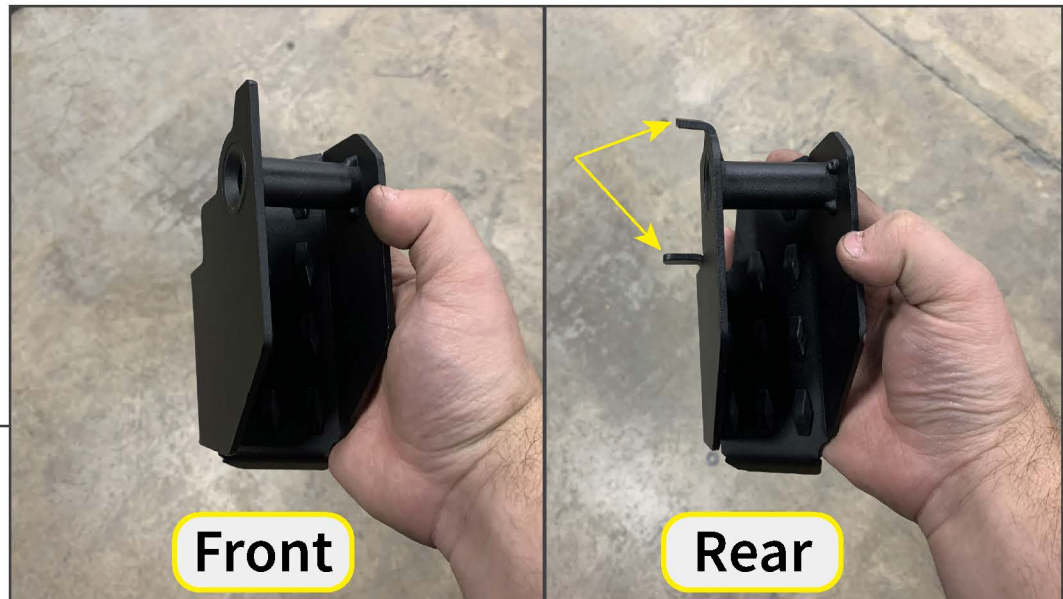

Identify the foot rest locations by looking at the bottom pivot locking tabs.

## STEP 4




Place the appropriate foot rest onto the lower door hinge. Secure the hinge into place using (1) M8x1.25 x 55mm Allen bolt.

Repeat steps 1-4 to install the opposite side foot rest.



**STEP 5  
(REAR)**

Open the vehicle door, and disconnect the wiring harness connector from the vehicle chassis. The wiring harness will pull away from the chassis.

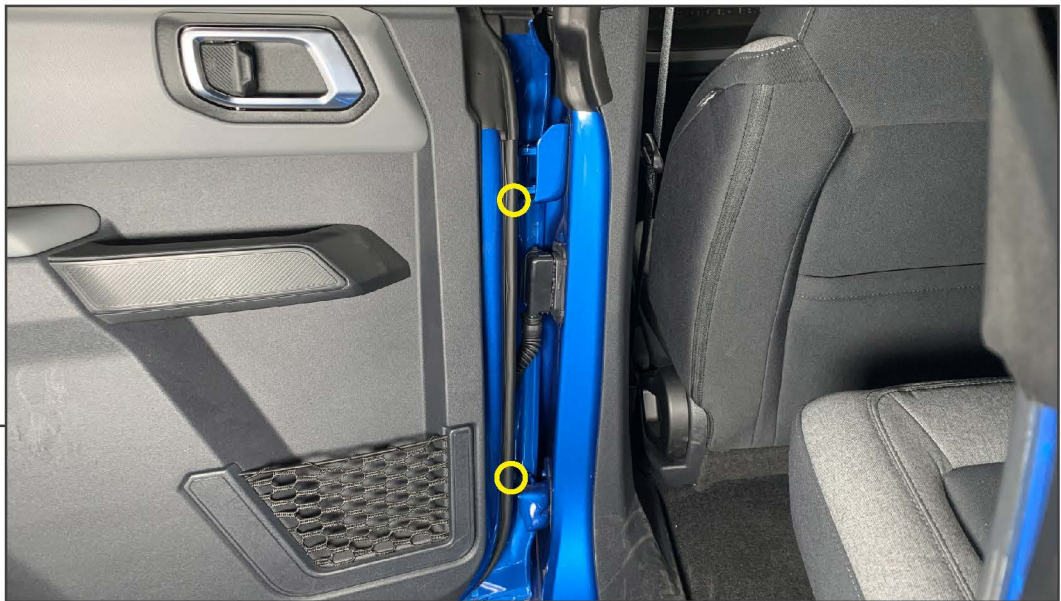

**STEP 6**

Remove the (2) 13mm bolts from the door hinges. Using the door lifting points, lift and remove the door from the vehicle and store in a secure area.



## STEP 7

Place the appropriate foot rest onto the lower door hinge. Secure the hinge into place using (1) M8x1.25 x 55mm Allen bolt.

Repeat steps 5-7 to install the opposite side foot rest.



## STEP 8

Installation is now complete.