



REAR HIDDEN CARGO AREA LINER

(2021-2023+ BRONCO)


INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Liner Panel
- (1) Center Liner Panel
- (1) RH Liner Panel

TOOLS REQUIRED

N/A

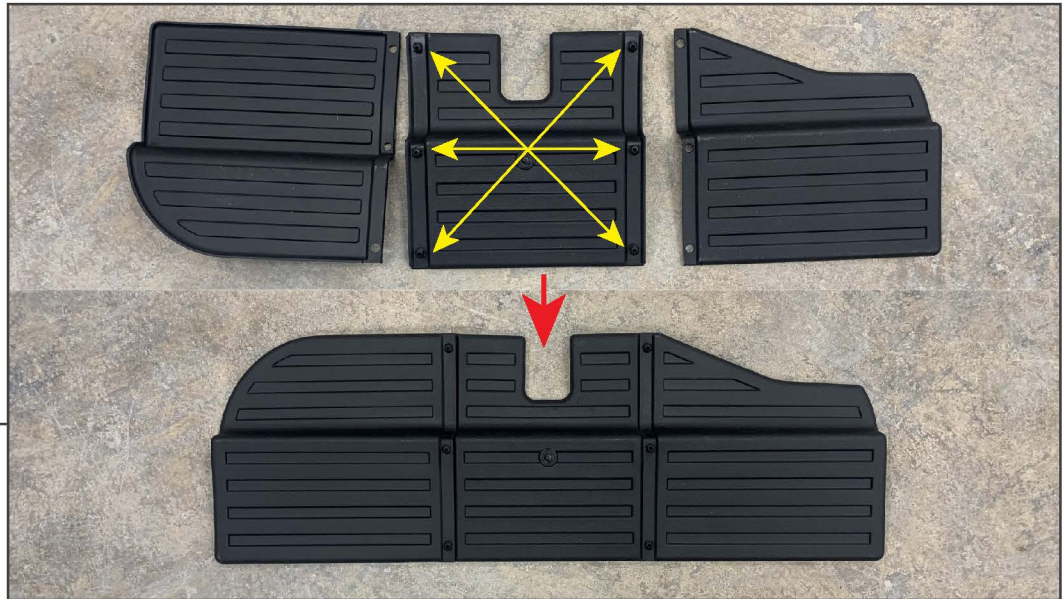

STEP 1

Fit the (3) liner panels together by utilizing the pins connected to the center liner panel.



STEP 2

Lift the cargo area carpet to reveal the storage area and roadside accessories. Place the liner into the storage area.

Installation is now complete.